-101

C940

14014

Y19
Speaker, right rear



F02058

Pin	Circuit	Circuit Function
1	8-MD18 (WH)	Sensor signal
2	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C946

14405

F01013



R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	31-HB19 (BK)	Ground

C947

14405

F01005

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C949 (BK)

14A584

F01015

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C950

14A584

F01015

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C951

14405

F01015

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	31-HB19 (BK)	Ground

C954 (BK)

9H589, 12A690

N17
Oil pressure switch

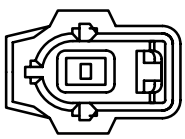

F01016

Pin	Circuit	Circuit Function
1	31S-GC20 (BK/OG)	Ground, switched