## C278

### 14401

N82
Brake pedal position switch (13480)




F05111

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 810 (RD/LG) | Brake pedal position switch (13480), input |
| 3 | 276 (BN) | Voltage supplied at all times (overload protected) |
| 4 | 511 (LG) | Brake pedal position switch (13480), to stoplamps |
| 5 | 10 (LG/RD) | Voltage supplied at all times (overload protected) |

## C279

### 14401

N405
Transmission control switch




F02243

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 298 (VT/OG) | Voltage in Run (overload protected) |
| 2 | 224 (TN/WH) | PCM, to transmission overdrive cancel switch |

## C281a (BK)

### 14401

A255
Four–wheel drive control module

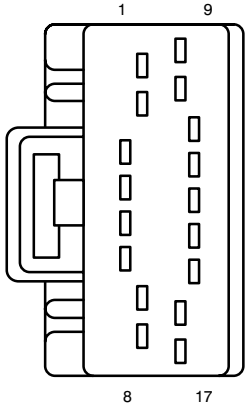


F17005

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 931 (OG) | Voltage supplied at all times (overload protected) |
| 2 | 704 (DG/LG) | Voltage supplied at all times (overload protected) |
| 3 | – | not used |
| 4 | 70 (LB/WH) | ISO Bus |
| 5 | 465 (WH/LB) | Four–wheel drive control module to Four–wheel drive switch |
| 6 | – | not used |
| 7 | 57 (BK) | Ground |
| 8 | 778 (OG) | Four–wheel drive control module, to Transfer case assembly |
| 9 | 1003 (GY/YE) | Voltage in Run (overload protected) |
| 10 | – | not used |
| 11 | 771 (VT/YE) | Motor position 5 |
| 12 | 810 (RD/LG) | Brake pedal position switch (13480), input |
| 13 | – | not used |
| 14 | – | not used |
| 15 | 770 (WH) | Motor position 4 |
| 16 | 463 (RD/WH) | Neutral, switch sense, input |
| 17 | 777 (YE) | Four–wheel drive control module, to Transfer case assembly |