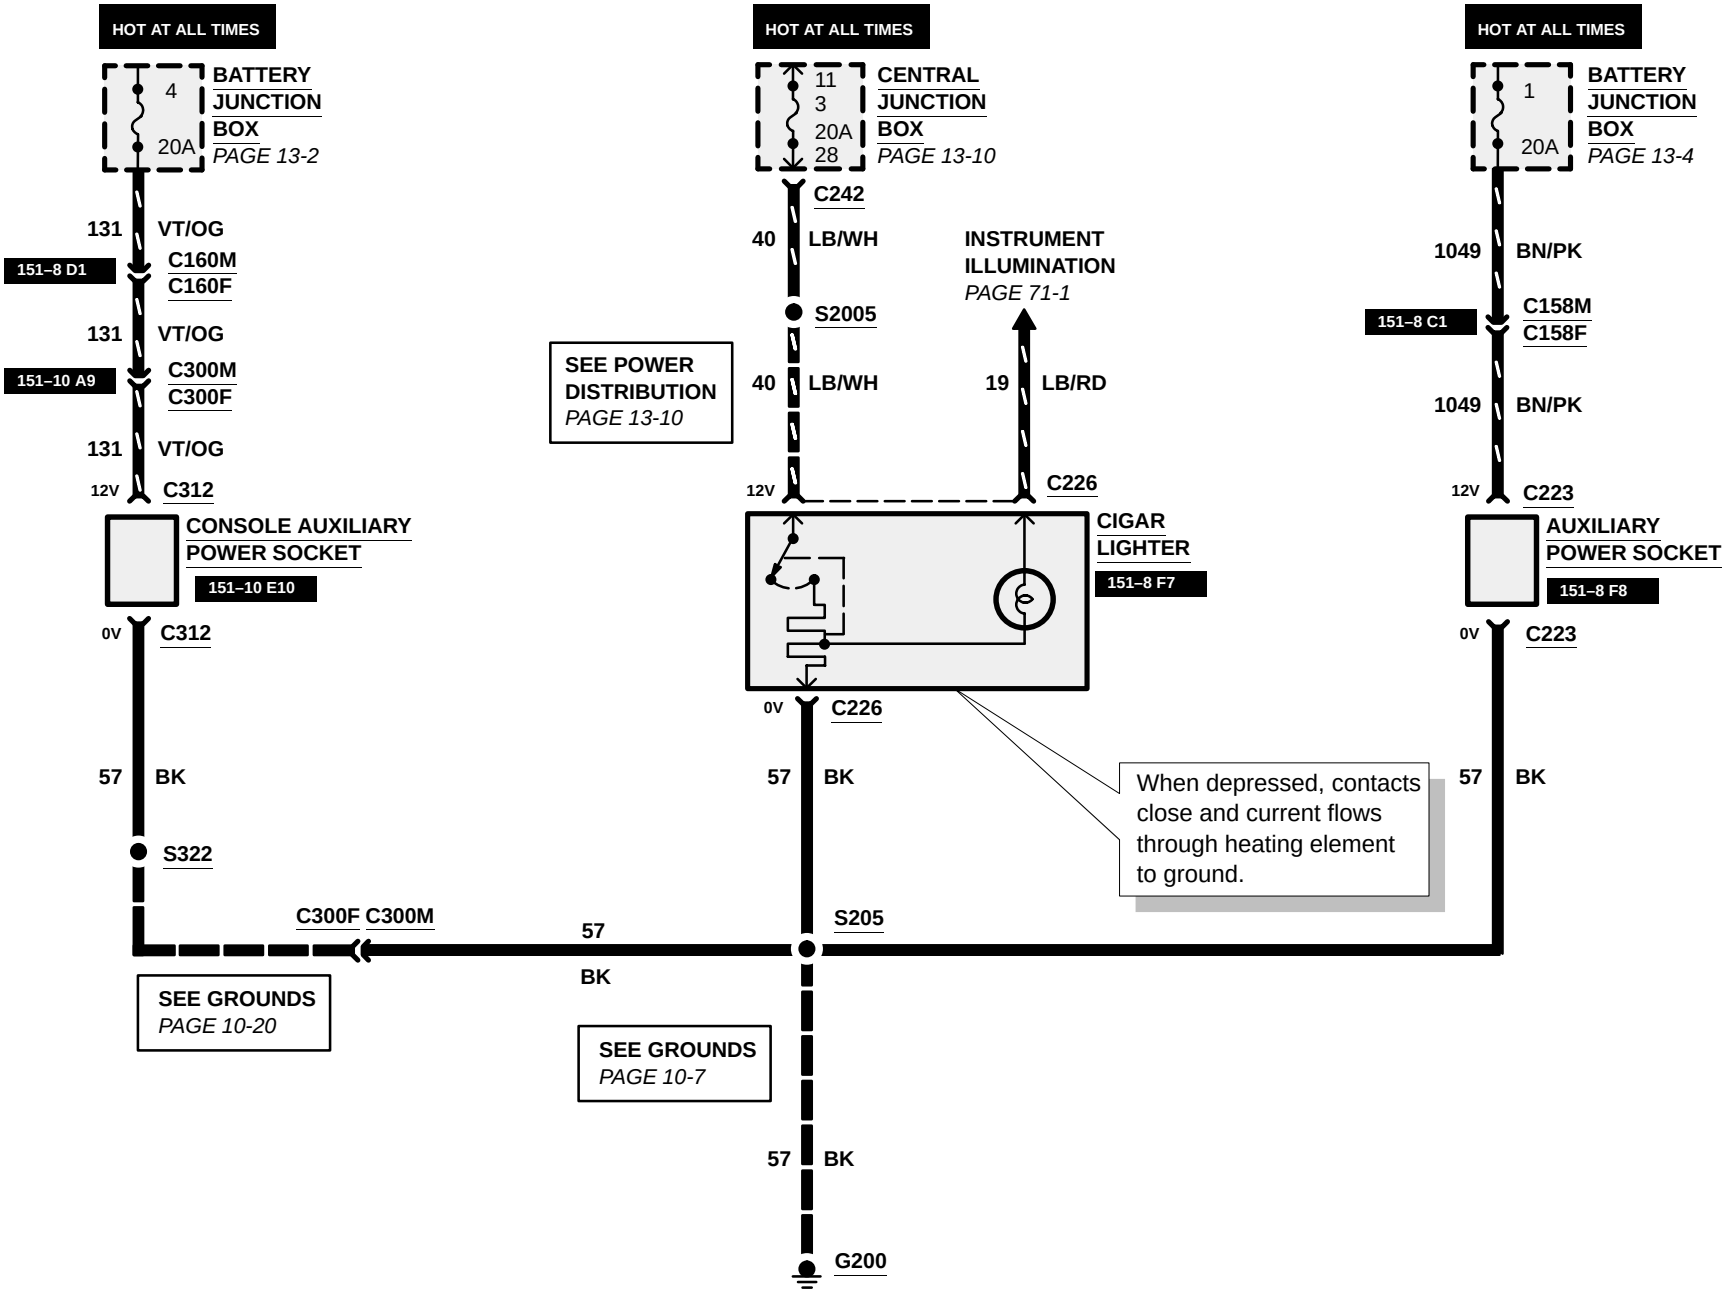
HOT AT ALL TIMES
BATTERY JUNCTION BOX
4
20A
PAGE 13-2
131 VT/OG
151–8 D1
C160M
C160F
131 VT/OG
151–10 A9
C300M
C300F
131 VT/OG
12V
C312
CONSOLE AUXILIARY POWER SOCKET
151–10 E10
0V
C312
57 BK
S322
C300F C300M
SEE GROUNDS
PAGE 10-20
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
11
3
20A
28
PAGE 13-10
C242
40 LB/WH
S2005
40 LB/WH
SEE POWER DISTRIBUTION
PAGE 13-10
INSTRUMENT ILLUMINATION
PAGE 71-1
19 LB/RD
12V
C226
CIGAR LIGHTER
151–8 F7
0V
C226
57 BK
57
BK
S205
SEE GROUNDS
PAGE 10-7
57 BK
G200
When depressed, contacts close and current flows through heating element to ground.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
1
20A
PAGE 13-4
1049 BN/PK
151–8 C1
C158M
C158F
1049 BN/PK
12V
C223
AUXILIARY POWER SOCKET
151–8 F8
0V
C223
57 BK