C220c

14401

A30
Instrument cluster

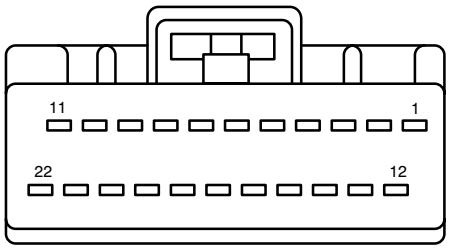

F22003

Pin	Circuit	Circuit Function
1	9-LE29 (BN/GN)	Sensor signal return (reference/ ground)
2	–	not used
3	9-AL10 (BN)	Sensor signal return (reference/ ground)
4	9-LE10 (BN/YE)	Sensor signal return (reference/ ground)
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	9-AL17 (BN/WH)	Sensor signal return (reference/ ground)
10	–	not used
11	–	not used
12	8-LE21 (WH/GN)	Sensor signal
13	8-LD10 (WH/BK)	Sensor signal
14	10-LE47 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
15	8-AL10 (WH)	Sensor signal
16	8-LE10 (WH/BK)	Sensor signal
17	–	not used
18	–	not used
19	7-AL17 (YE/VT)	Voltage D.C. supplied at all times (sensor)
20	8-AL17 (WH/VT)	Sensor signal
21	8-AL16 (WH/BK)	Sensor signal
22	–	not used

C221

14402

A164
Microphone

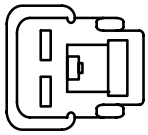

F02035

C222

14402

B218
Steering column position sensor

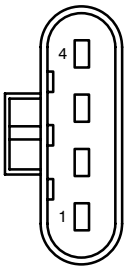

F12077