C3041

14A504

A14
Subwoofer amplifier
(18C804)

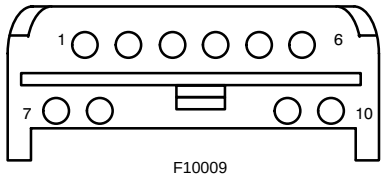

F10009

Pin	Circuit	Circuit function
1	173 (DG/VT)	radio to sub–woofer high audio, mute
2	694 (BK/LG)	Ground
3	–	not used
4	–	not used
5	–	not used
6	797 (LG/VT)	Voltage supplied at all times (overload protected)
7	167 (BN/OG)	radio to sub–woofer high audio +
8	168 (RD/BK)	radio to sub–woofer high audio –
9	48	Drain wire
10	–	not used

C3044

14B079

M261
Mode door actuator,
rear (19E616)

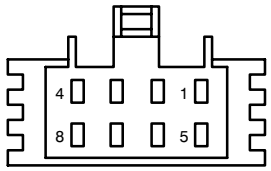

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	1136 (RD/WH)	to heater/A/C controls
8	1137 (YE/LG)	to heater/A/C controls