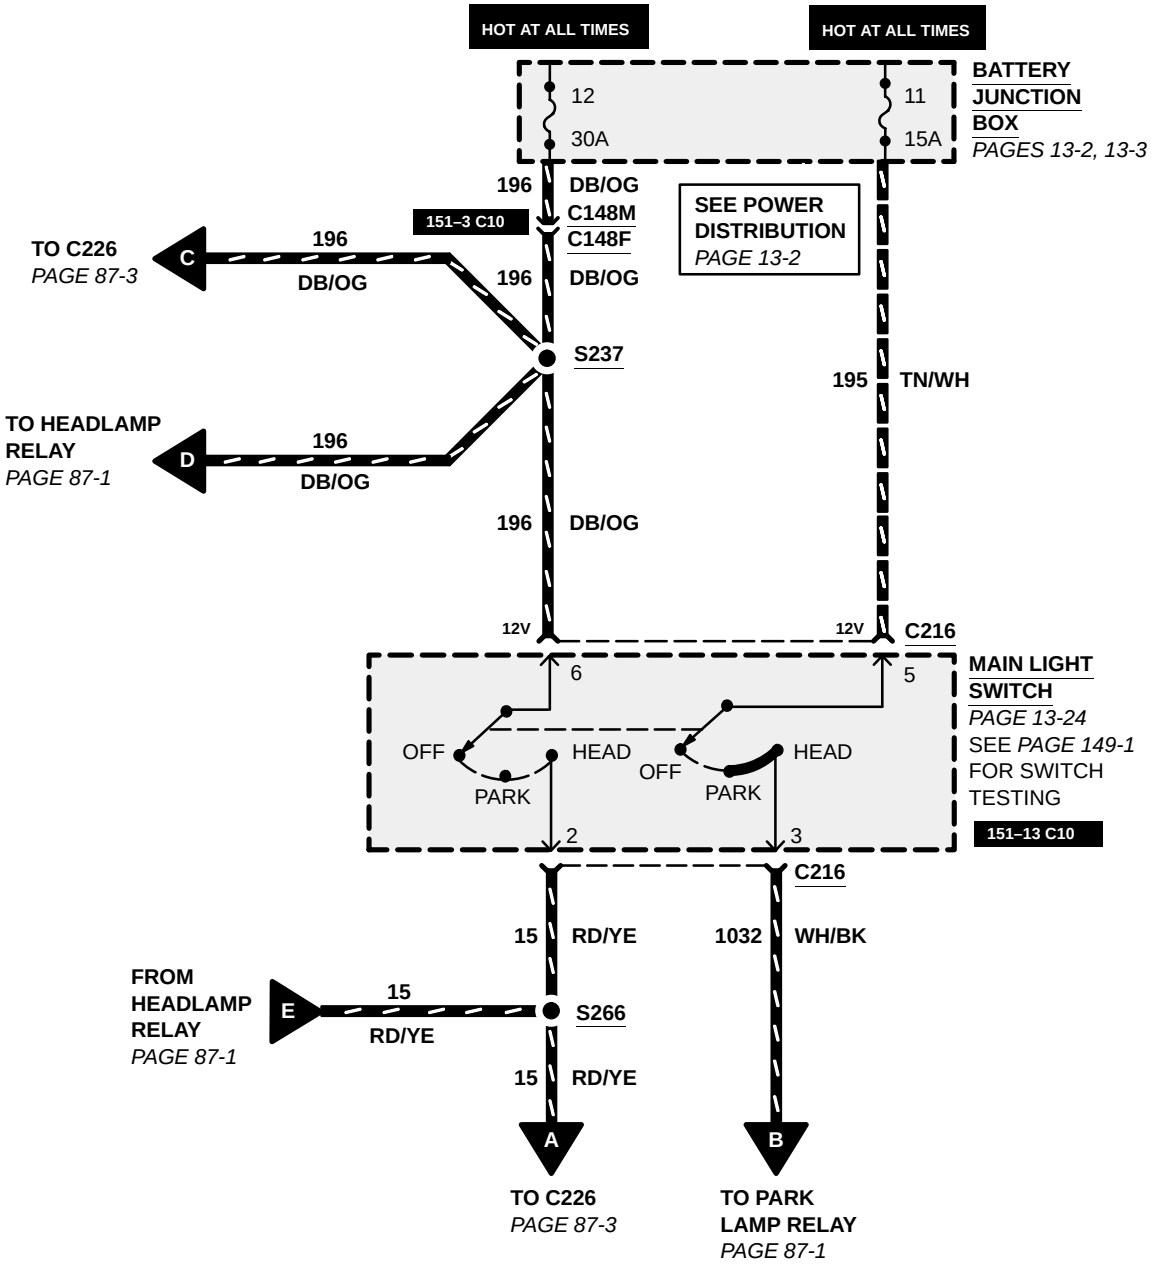
HOT AT ALL TIMES
HOT AT ALL TIMES
12
30A
11
15A
BATTERY JUNCTION BOX
PAGES 13-2, 13-3
196 DB/OG
C148M
C148F
151–3 C10
SEE POWER DISTRIBUTION
PAGE 13-2
TO C226
PAGE 87-3
C
196
DB/OG
196 DB/OG
S237
195 TN/WH
TO HEADLAMP RELAY
PAGE 87-1
D
196
DB/OG
196 DB/OG
12V
12V
C216
6
5
OFF
HEAD
PARK
OFF
HEAD
PARK
2
3
MAIN LIGHT SWITCH
PAGE 13-24
SEE PAGE 149-1 FOR SWITCH TESTING
151–13 C10
C216
15 RD/YE
1032 WH/BK
FROM HEADLAMP RELAY
PAGE 87-1
E
15
RD/YE
S266
15 RD/YE
A
B
TO C226
PAGE 87-3
TO PARK LAMP RELAY
PAGE 87-1