## C504b (GY)

**14631**

Master window adjust switch (14529)

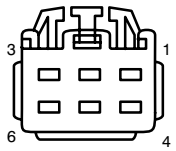


F06213

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 170 (RD/LB) | Window lockout, switched power, output |
| 2 | 57 (BK) | Ground |
| 3 | 319 (YE/BK) | Window switch, feed, right rear, Up |
| 4 | 400 (LB/BK) | Window safety relay, switched power, output |
| 5 | 317 (GY/OG) | Window switch, feed, left rear, Down |
| 6 | 316 (YE/LB) | Window switch, feed, left rear, Up |

## C505 (GN)

**14631**

Door lock switch, driver side (14028)

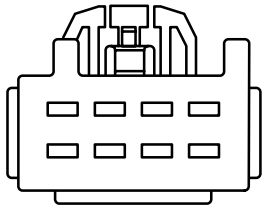

F08217

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 120 (PK/LG) | Door unlock + |
| 4 | 57 (BK) | Ground |
| 5 | 705 (LG/OG) | Battery saver relay, switched power |
| 6 | – | not used |
| 7 | 119 (PK/YE) | Door lock + |
| 8 | – | not used |