-80

C789 (GY)

14401

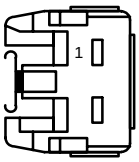

F02032

Pin	Circuit	Circuit Function
1	15-FA18 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-FA18 (BK/RD)	Ground, switched

C794

14A584

N137
Door lock/unlock switch, driver

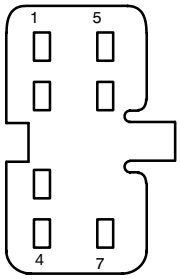

F07016

Pin	Circuit	Circuit Function
1	31S-AA39A (BK/YE)	Ground, switched
2	31-AA34 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	31S-AA85A (BK/RD)	Ground, switched

C795

14A584

N138
Door lock/unlock switch, passenger

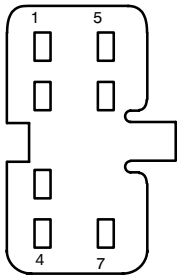

F07016

Pin	Circuit	Circuit Function
1	31S-AA39B (BK/YE)	Ground, switched
2	31-AA39 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	31S-AA85B (BK/RD)	Ground, switched

C798 (NA)

F05061

14405, 14A584

N22
Liftgate/decklid switch

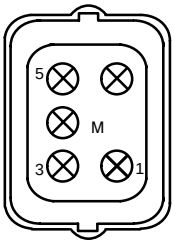

Pin	Circuit	Circuit Function
1	32-AA27 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	31-GL20 (BK)	Ground
4	31S-LB1 (BK/BU)	Ground, switched
	31S-LB26 (BK/OG)	Ground, switched
5	31S-GL20 (BK/RD)	Ground, switched