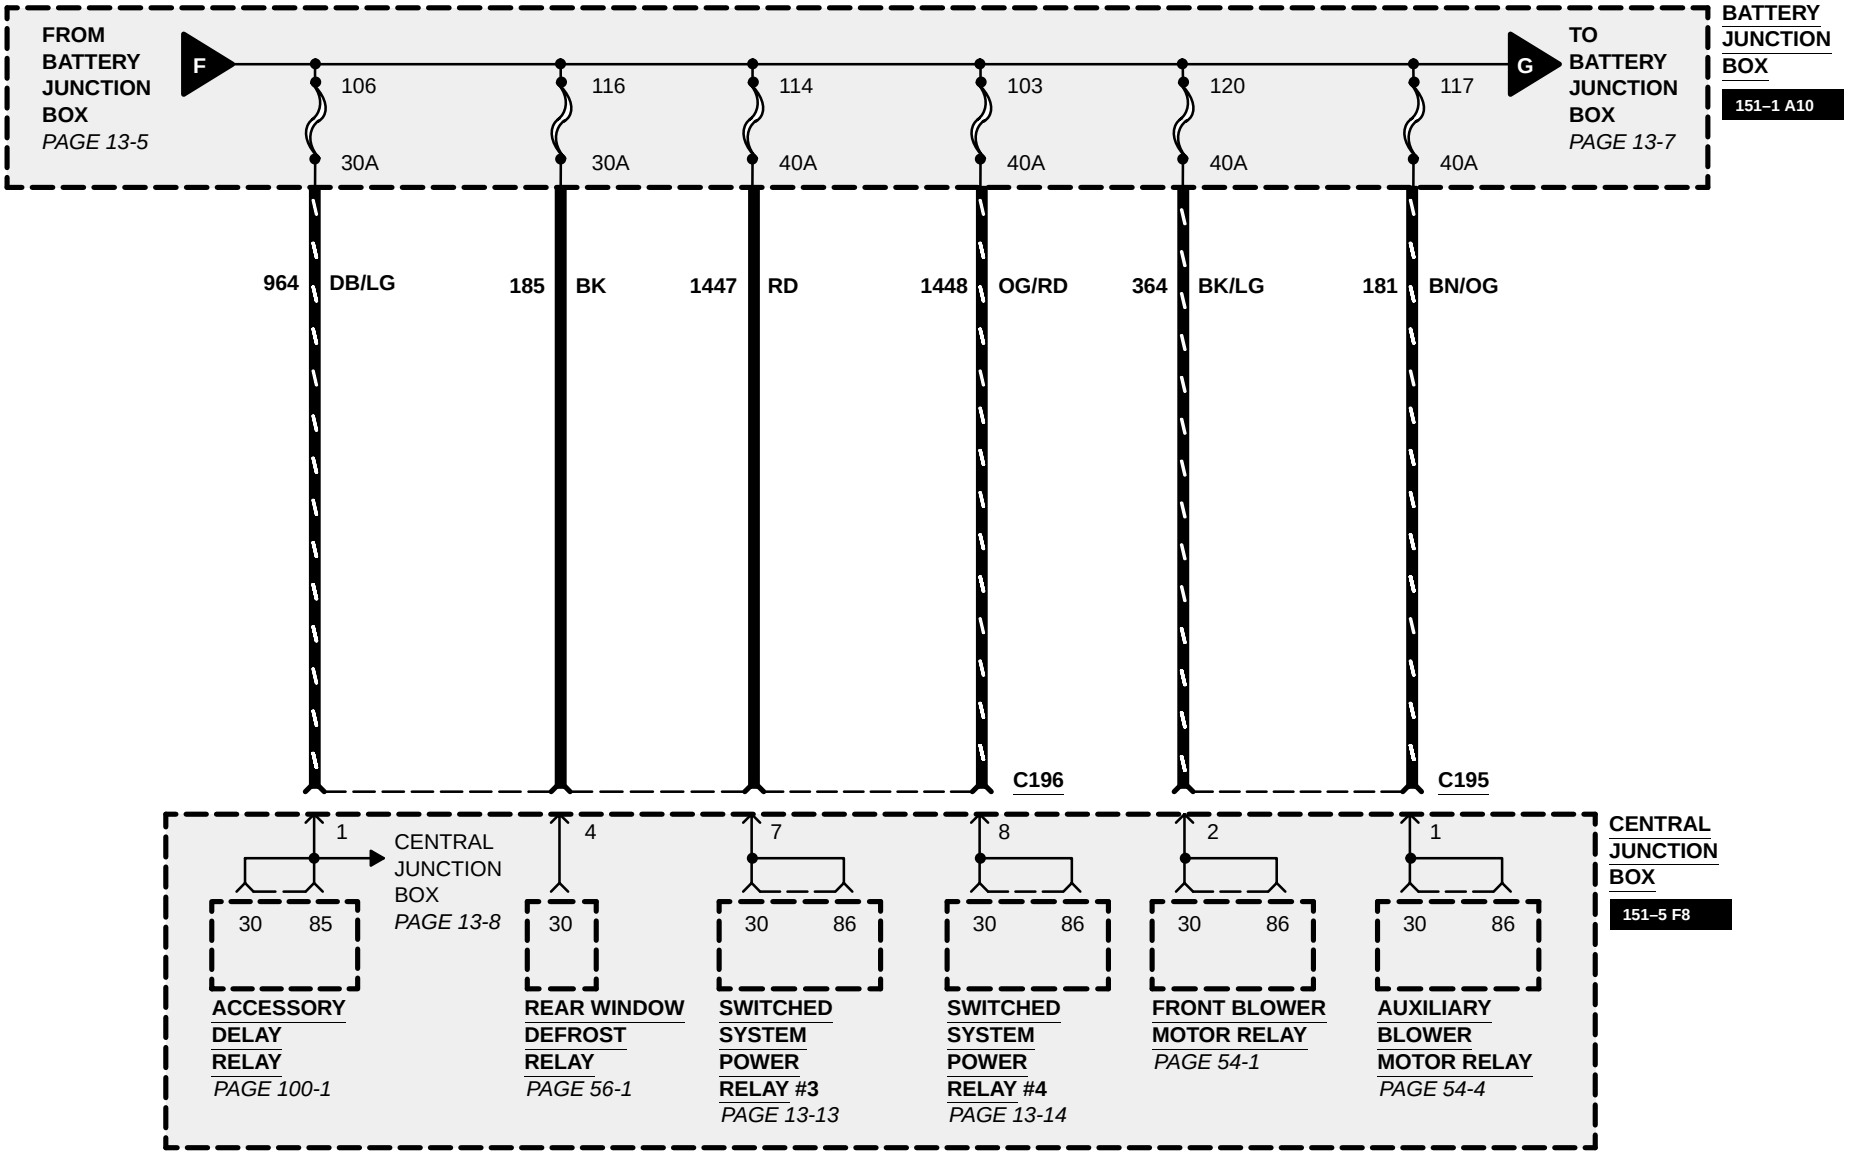
FROM BATTERY JUNCTION BOX
PAGE 13-5
F
106
30A
116
30A
114
40A
103
40A
120
40A
117
40A
G
TO BATTERY JUNCTION BOX
PAGE 13-7
BATTERY JUNCTION BOX
151–1 A10
964 DB/LG
185 BK
1447 RD
1448 OG/RD
364 BK/LG
181 BN/OG
C196
C195
1
CENTRAL JUNCTION BOX
PAGE 13-8
30 85
ACCESSORY DELAY RELAY
PAGE 100-1
4
30
REAR WINDOW DEFROST RELAY
PAGE 56-1
7
30 86
SWITCHED SYSTEM POWER RELAY #3
PAGE 13-13
8
30 86
SWITCHED SYSTEM POWER RELAY #4
PAGE 13-14
2
30 86
FRONT BLOWER MOTOR RELAY
PAGE 54-1
1
30 86
AUXILIARY BLOWER MOTOR RELAY
PAGE 54-4
CENTRAL JUNCTION BOX
151–5 F8