C116

12B637

Coil On Plug
(COP) 6
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control

C117

12B637

Coil On Plug
(COP) 7
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control

C118

12B637

Coil On Plug
(COP) 8
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control

C120

12B637

Power steering
valve solenoid
(3783)

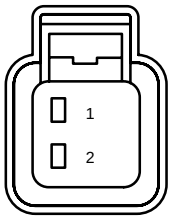

F02337

Pin	Circuit	Circuit function
1	115 (LG/BK)	Air suspension module (3C142) –
2	114 (LB/YE)	Air suspension module (3C142) +

C121 (BK)

12B637

Power steering
pressure
switch

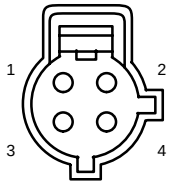

F04195

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	–	not used
4	328 (YE/LG)	Power steering pressure switch