3.8L

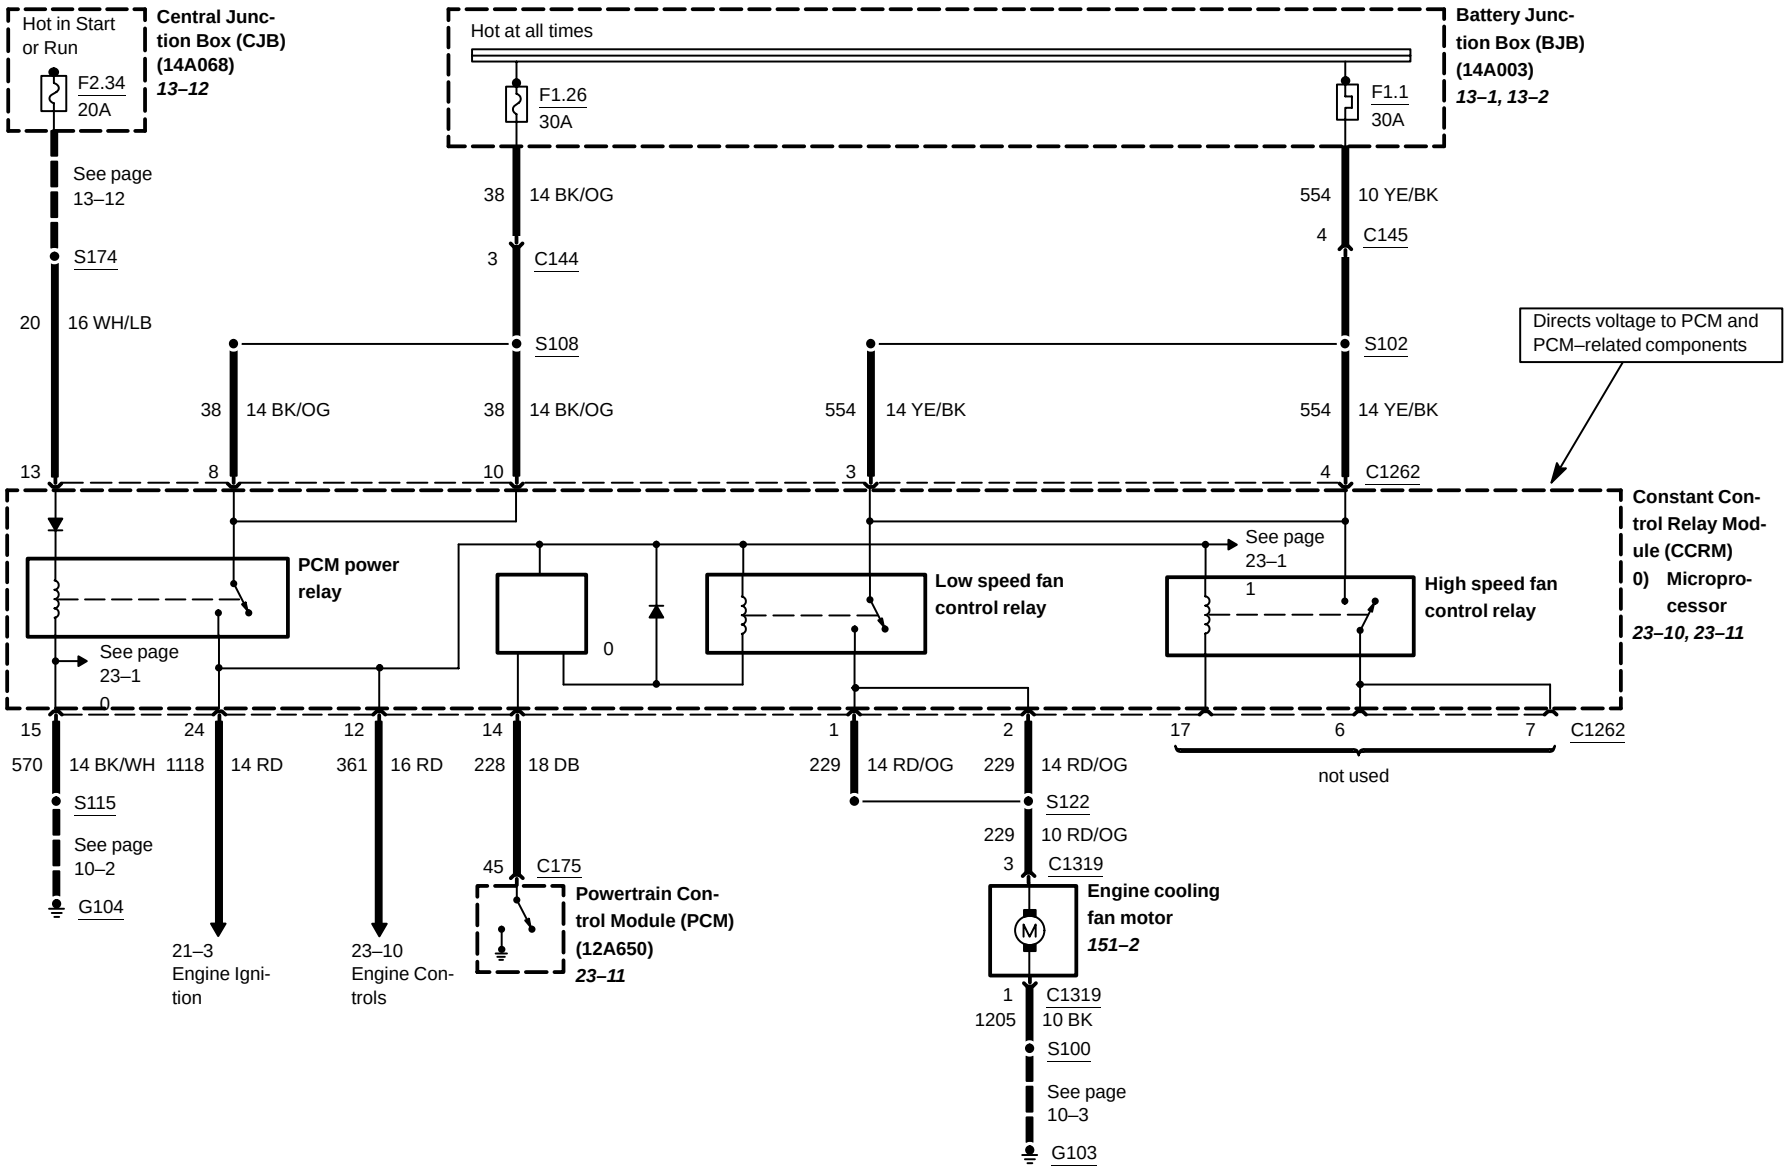
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–12
F2.34 20A
Hot at all times
F1.26 30A
F1.1 30A
Battery Junction Box (BJB) (14A003) 13–1, 13–2
See page 13–12
S174
20 16 WH/LB
38 14 BK/OG
3 C144
554 10 YE/BK
4 C145
S108
S102
Directs voltage to PCM and PCM–related components
38 14 BK/OG
38 14 BK/OG
554 14 YE/BK
554 14 YE/BK
13
8
10
3
4 C1262
Constant Control Relay Module (CCRM)
0) Microprocessor
23–10, 23–11
PCM power relay
Low speed fan control relay
High speed fan control relay
See page 23–1
0
1
See page 23–1
0
15
24
12
14
1
2
17
6
7 C1262
570 14 BK/WH
1118 14 RD
361 16 RD
228 18 DB
229 14 RD/OG
229 14 RD/OG
not used
S115
See page 10–2
G104
21–3 Engine Ignition
23–10 Engine Controls
45 C175
Powertrain Control Module (PCM) (12A650) 23–11
S122
229 10 RD/OG
3 C1319
Engine cooling fan motor 151–2
1 C1319
1205 10 BK
S100
See page 10–3
G103