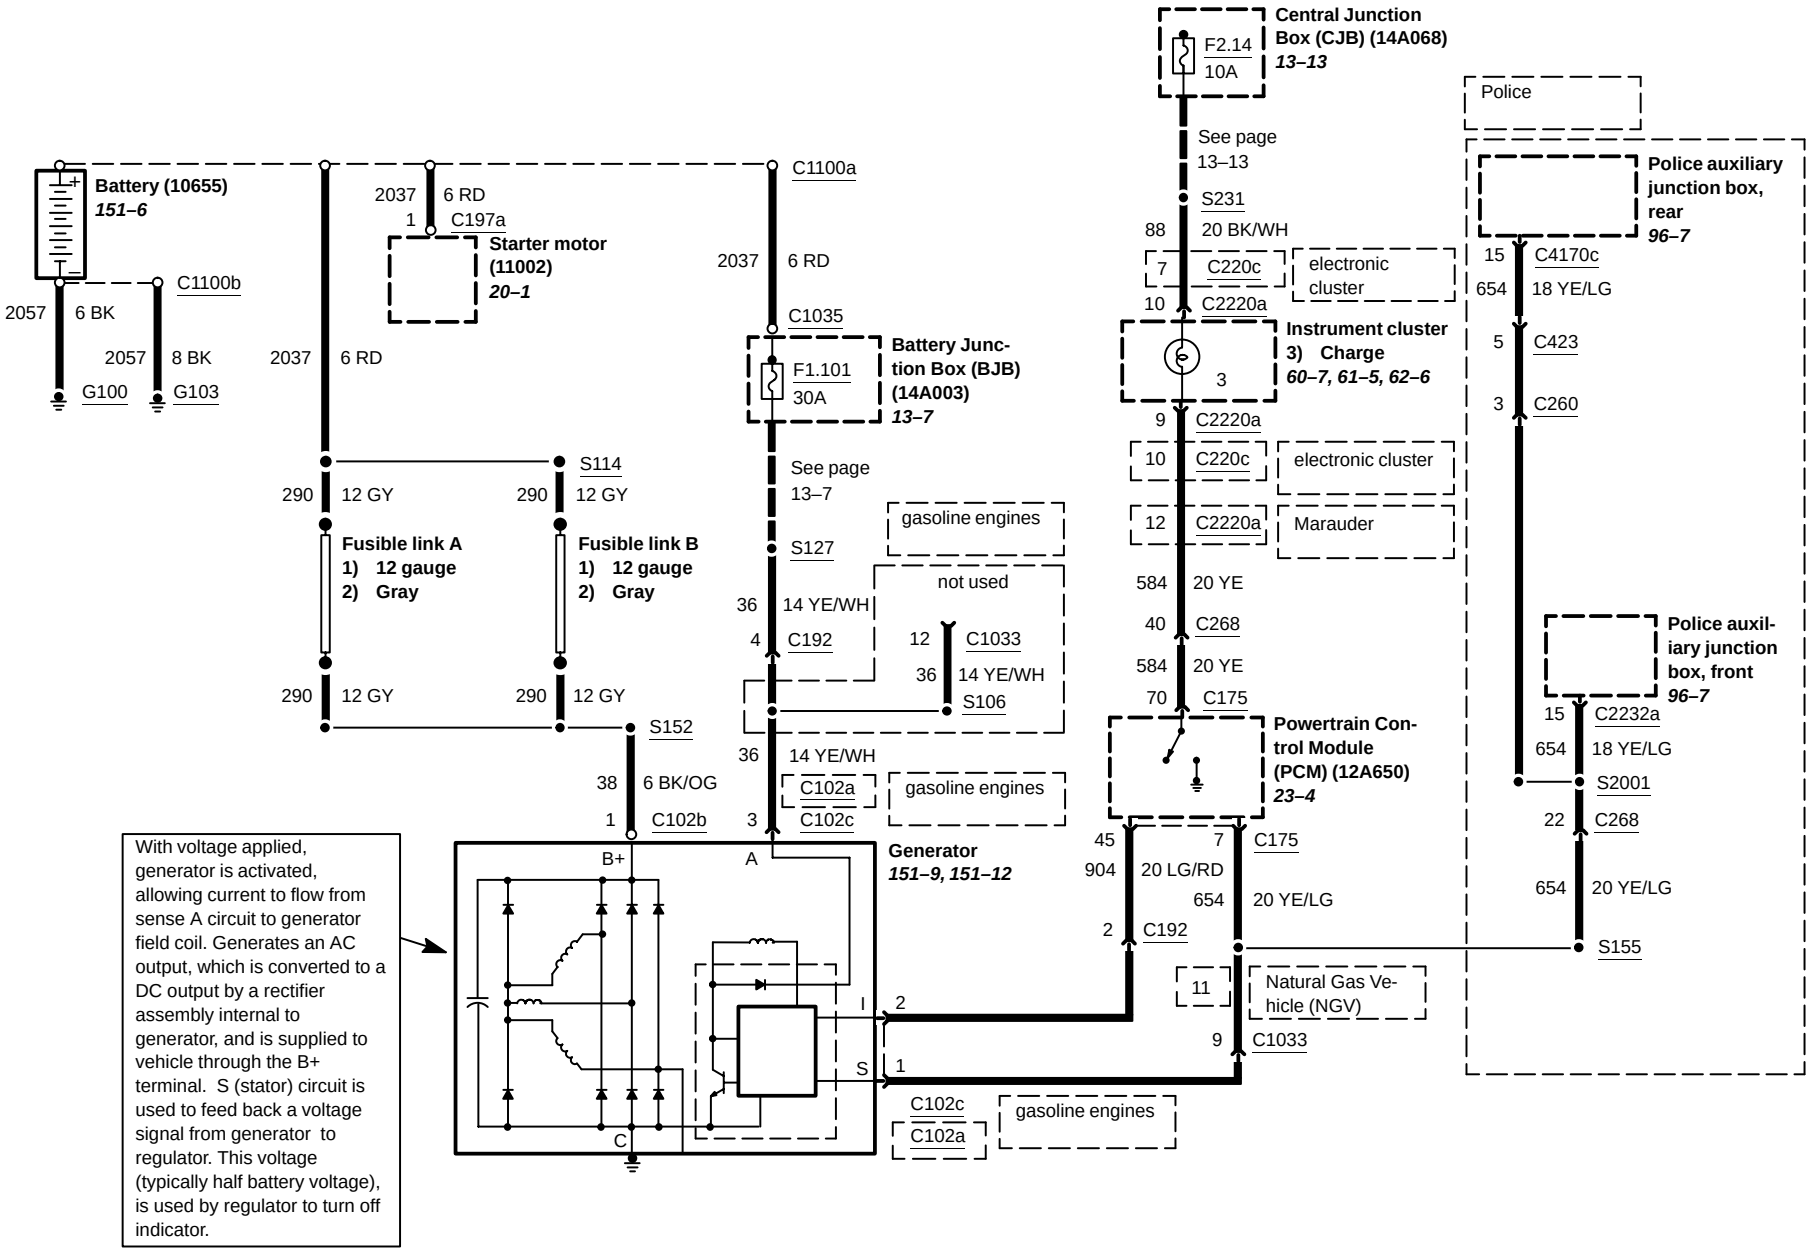
Battery (10655)
151–6
C1100b
2057 6 BK
2057 8 BK
G100
G103
2037 6 RD
1 C197a
Starter motor (11002)
20–1
2037 6 RD
C1100a
C1035
F1.101
30A
Battery Junction Box (BJB) (14A003)
13–7
See page 13–7
S114
290 12 GY
290 12 GY
Fusible link A
1) 12 gauge
2) Gray
Fusible link B
1) 12 gauge
2) Gray
290 12 GY
290 12 GY
S152
38 6 BK/OG
1 C102b
S127
36 14 YE/WH
4 C192
gasoline engines
not used
12 C1033
36 14 YE/WH
S106
36 14 YE/WH
C102a
3 C102c
gasoline engines
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
B+
A
I
S
C
Generator
151–9, 151–12
C102c
C102a
gasoline engines
Central Junction Box (CJB) (14A068)
13–13
F2.14
10A
See page 13–13
S231
88 20 BK/WH
7 C220c
electronic cluster
10 C2220a
Instrument cluster
3) Charge
60–7, 61–5, 62–6
3
9 C2220a
10 C220c
electronic cluster
12 C2220a
Marauder
584 20 YE
40 C268
584 20 YE
70 C175
Powertrain Control Module (PCM) (12A650)
23–4
45 7 C175
904 20 LG/RD
654 20 YE/LG
2 C192
11
Natural Gas Vehicle (NGV)
9 C1033
Police
Police auxiliary junction box, rear
96–7
15 C4170c
654 18 YE/LG
5 C423
3 C260
Police auxiliary junction box, front
96–7
15 C2232a
654 18 YE/LG
S2001
22 C268
654 20 YE/LG
S155