C355 (BK)

14A699

Power seat switch, right

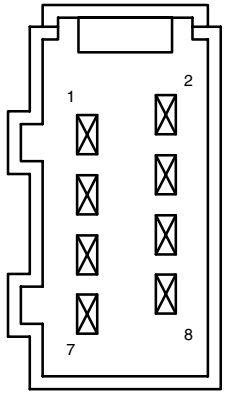

F08114

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	988 (YE/LG)	Passenger seat rear height motor, Up, feed
3	986 (YE/WH)	Passenger seat horizontal motor, Forward, feed
4	985 (RD/LB)	Passenger seat front height motor, Down, feed
5	987 (RD/WH)	Passenger seat horizontal motor, Rearward, feed
6	984 (YE/LB)	Passenger seat front height motor, Up, feed
7	1462 (RD/WH)	Fused battery feed
8	989 (RD/LG)	Passenger seat rear height motor, Down, feed

C356 (BK)

14A699

Seat position sensor, driver

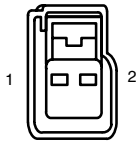

F02196

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat position sensor, driver, return
2	1520 (LG)	Seat position sensor, driver, feed

C361 (BK)

14A699

Lumbar adjust switch, left front (14B691)

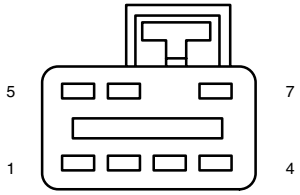

F07085

Pin	Circuit	Circuit function
1	1094 (PK)	Front seat lumbar compressor motor, In, feed
2	566 (DG)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1097 (BN)	Front seat lumbar compressor motor, Out, feed

C362 (GY)

14A699

Driver seat horizontal motor

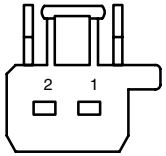

F02053

* with memory

Pin	Circuit	Circuit function
1	980 (YE/WH) *1471 (RD/WH)	Driver seat horizontal motor, Forward, feed
2	981 (RD/WH) *1472 (YE/WH)	Driver seat horizontal motor, Rearward, feed