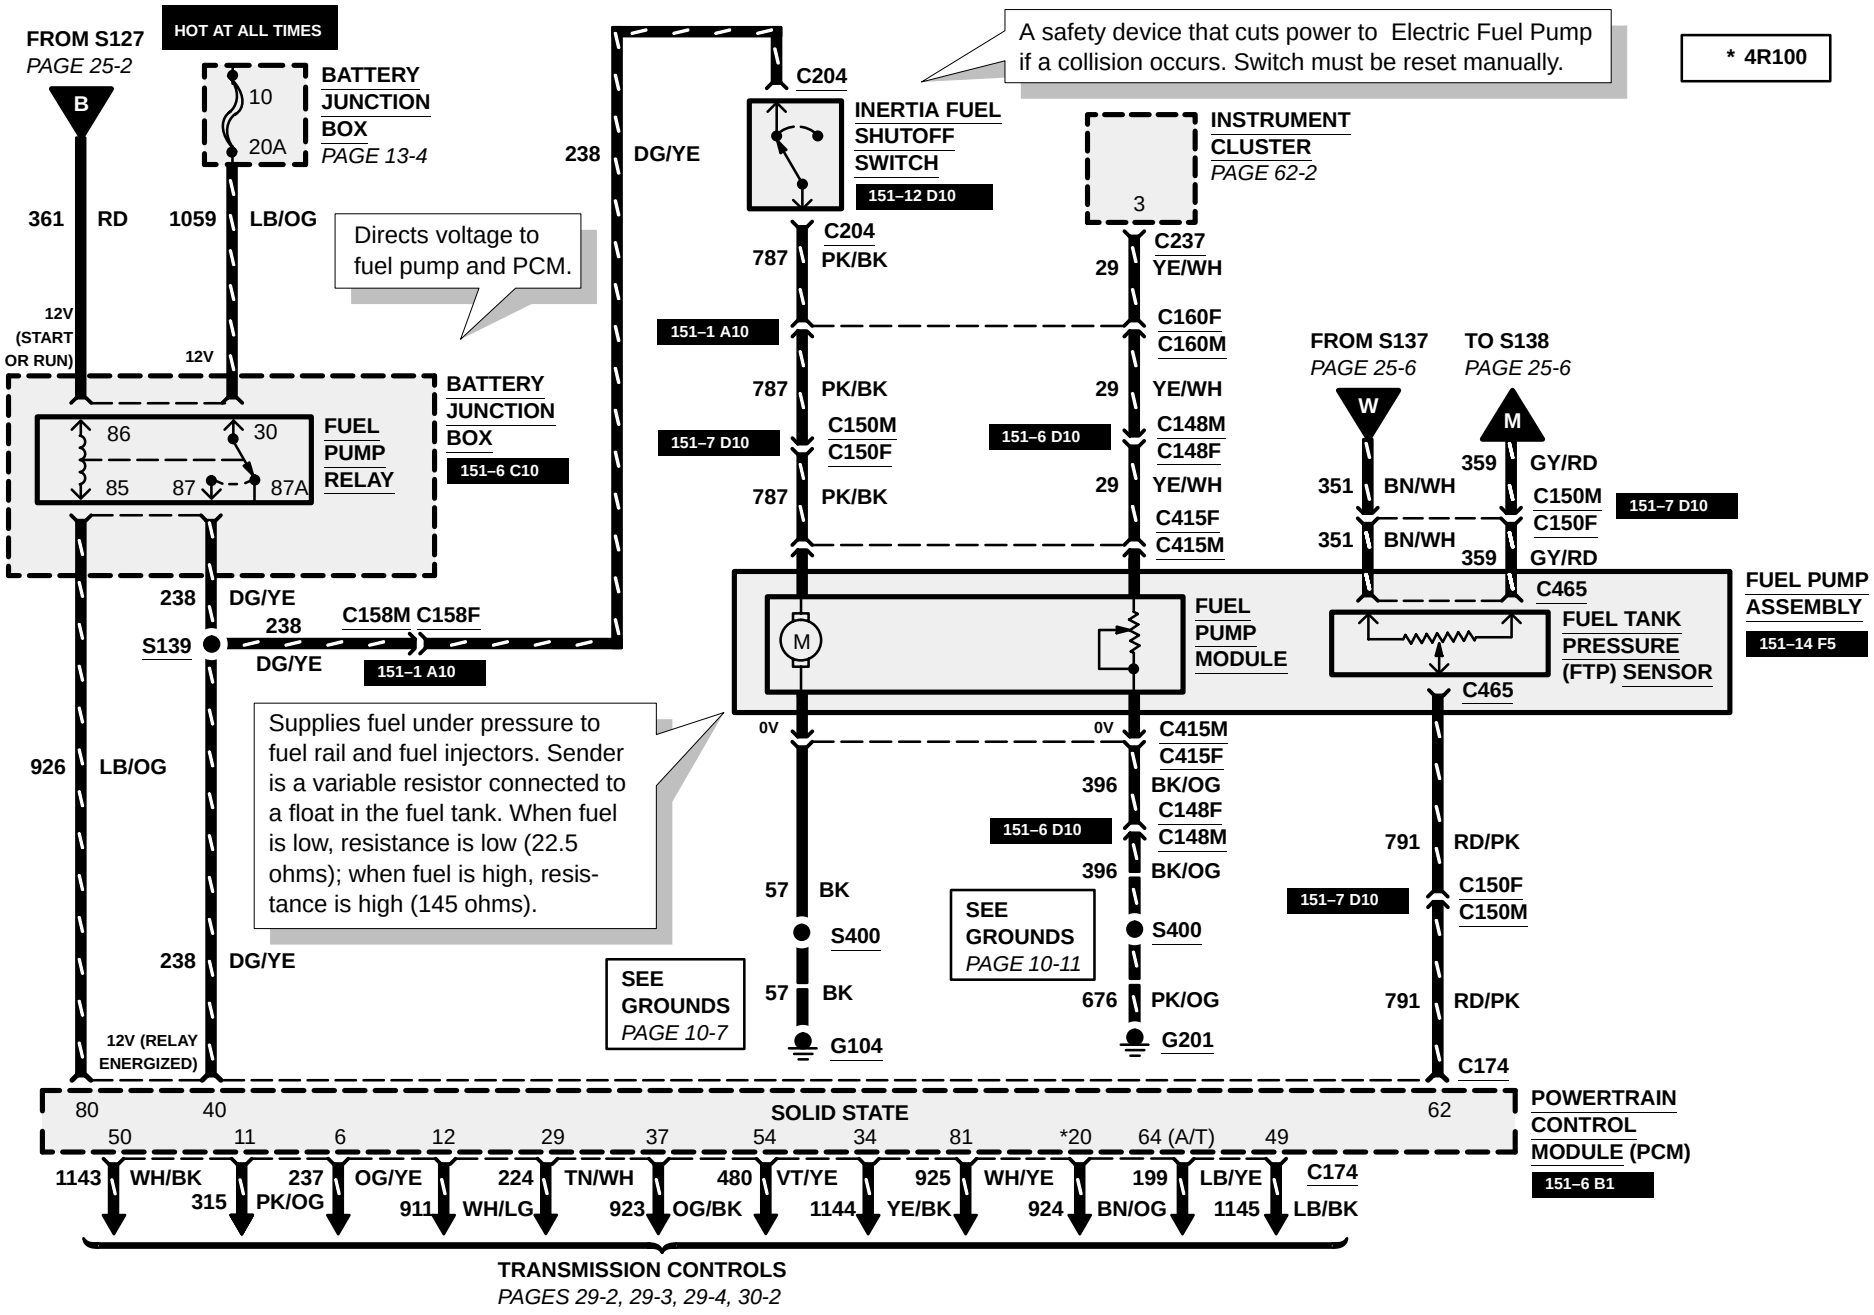
FROM S127
PAGE 25-2
HOT AT ALL TIMES
B
10
20A
BATTERY JUNCTION BOX
PAGE 13-4
361 RD
1059 LB/OG
12V (START OR RUN)
12V
86
30
85
87
87A
FUEL PUMP RELAY
BATTERY JUNCTION BOX
151–6 C10
238 DG/YE
S139
238 DG/YE
C158M C158F
238 DG/YE
151–1 A10
926 LB/OG
238 DG/YE
12V (RELAY ENERGIZED)
Directs voltage to fuel pump and PCM.
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in the fuel tank. When fuel is low, resistance is low (22.5 ohms); when fuel is high, resistance is high (145 ohms).
SEE GROUNDS PAGE 10-7
238 DG/YE
C204
INERTIA FUEL SHUTOFF SWITCH
151–12 D10
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
INSTRUMENT CLUSTER
PAGE 62-2
3
C204
787 PK/BK
151–1 A10
C160F
C160M
787 PK/BK
C150M
C150F
151–7 D10
787 PK/BK
C204
C237
29 YE/WH
C160F
C160M
29 YE/WH
151–6 D10
C148M
C148F
29 YE/WH
C415F
C415M
FROM S137
PAGE 25-6
TO S138
PAGE 25-6
W
M
359 GY/RD
351 BN/WH
C150M
C150F
151–7 D10
351 BN/WH
359 GY/RD
C465
FUEL PUMP ASSEMBLY
151–14 F5
FUEL PUMP MODULE
FUEL TANK PRESSURE (FTP) SENSOR
C465
0V
C415M
C415F
396 BK/OG
C148F
C148M
151–6 D10
396 BK/OG
57 BK
S400
57 BK
G104
SEE GROUNDS PAGE 10-11
0V
C415M
C415F
396 BK/OG
C148F
C148M
396 BK/OG
S400
676 PK/OG
G201
791 RD/PK
151–7 D10
C150F
C150M
791 RD/PK
C174
80
40
SOLID STATE
62
50
11
6
12
29
37
54
34
81
*20
64 (A/T)
49
1143 WH/BK
315 PK/OG
237 OG/YE
911 WH/LG
224 TN/WH
923 OG/BK
480 VT/YE
1144 YE/BK
925 WH/YE
924 BN/OG
199 LB/YE
1145 LB/BK
C174
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
TRANSMISSION CONTROLS
PAGES 29-2, 29-3, 29-4, 30-2
* 4R100