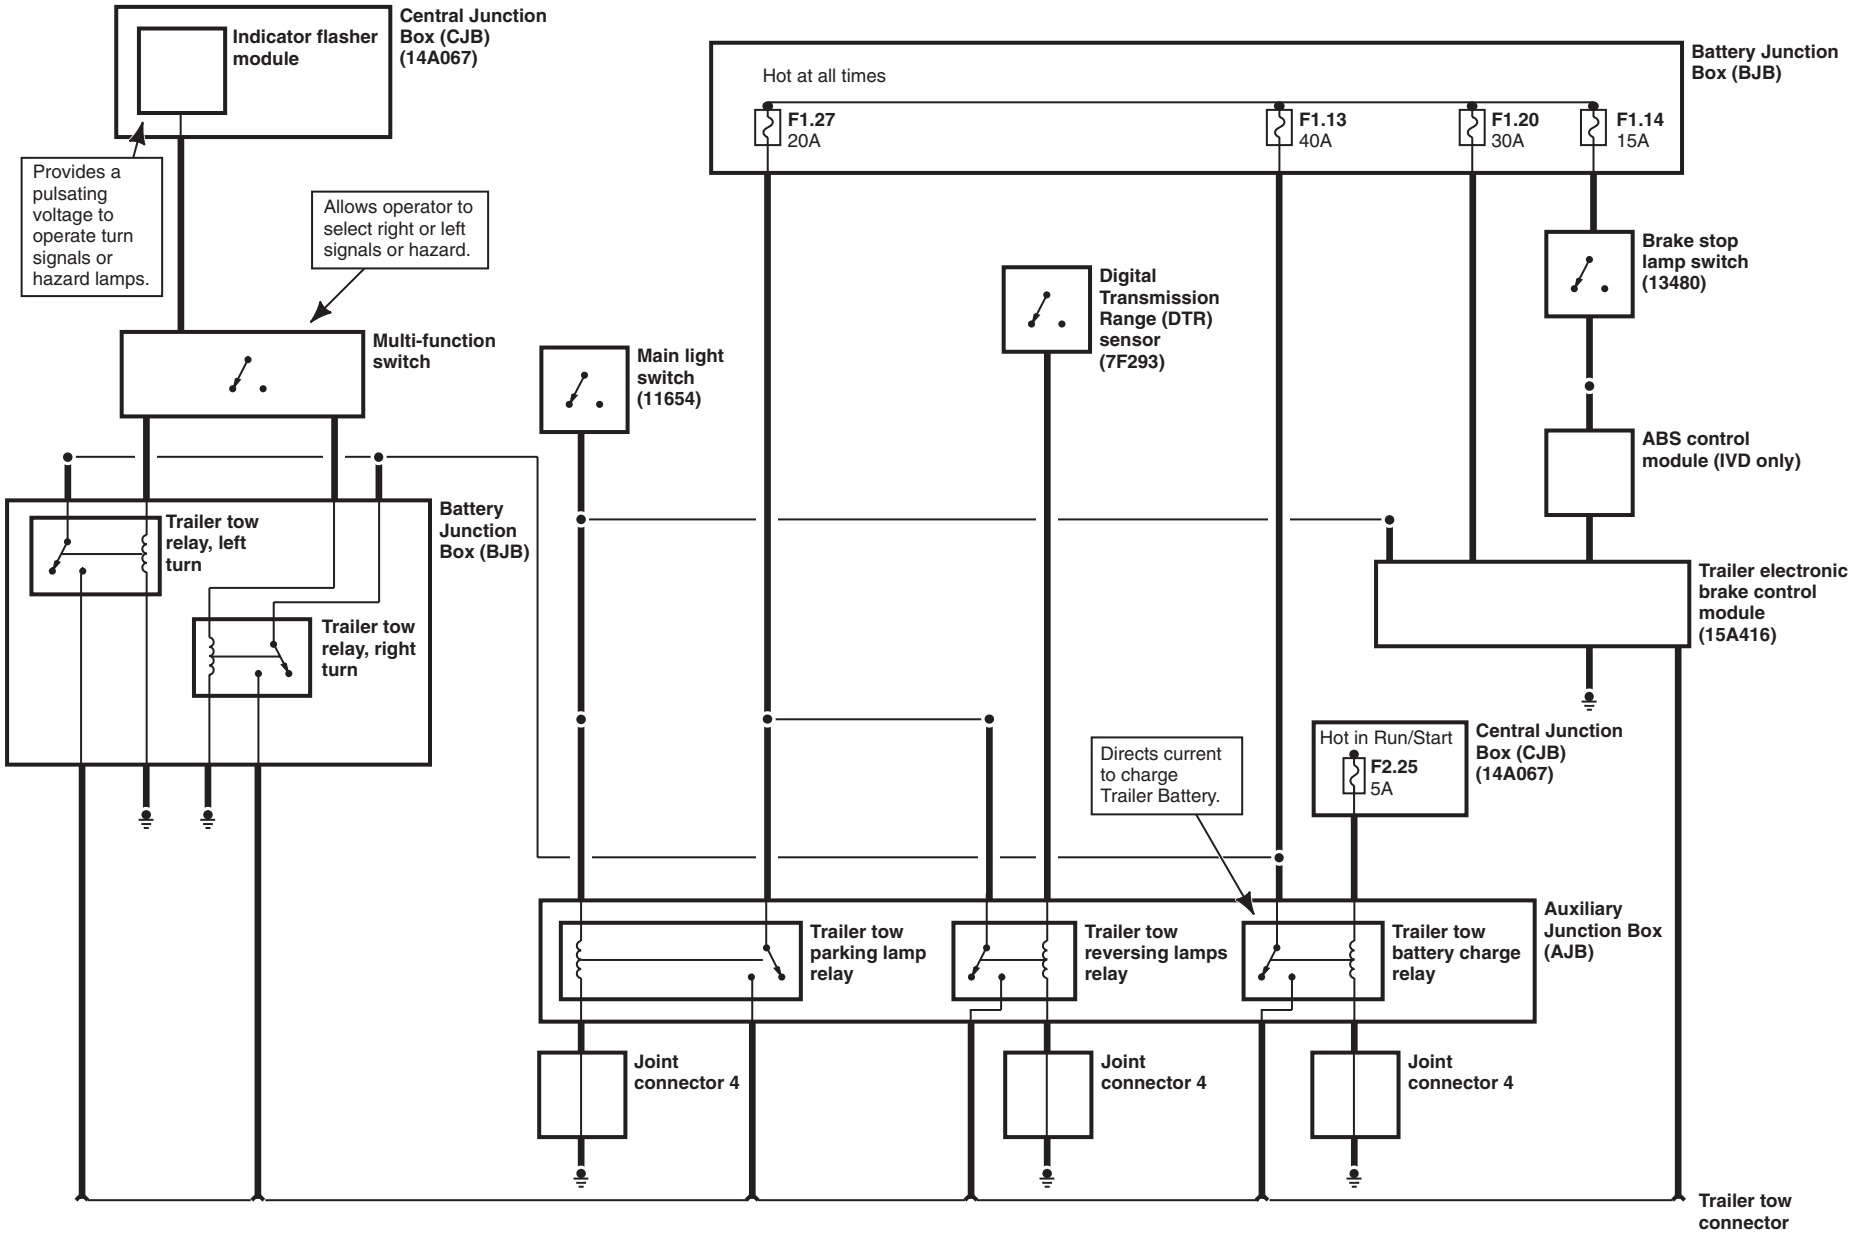
Central Junction Box (CJB) (14A067)
Indicator flasher module
Provides a pulsating voltage to operate turn signals or hazard lamps.
Allows operator to select right or left signals or hazard.
Multi-function switch
Main light switch (11654)
Battery Junction Box (BJB)
Trailer tow relay, left turn
Trailer tow relay, right turn
Hot at all times
F1.27 20A
F1.13 40A
F1.20 30A
F1.14 15A
Battery Junction Box (BJB)
Digital Transmission Range (DTR) sensor (7F293)
Brake stop lamp switch (13480)
ABS control module (IVD only)
Trailer electronic brake control module (15A416)
Directs current to charge Trailer Battery.
Hot in Run/Start
F2.25 5A
Central Junction Box (CJB) (14A067)
Trailer tow parking lamp relay
Trailer tow reversing lamps relay
Trailer tow battery charge relay
Auxiliary Junction Box (AJB)
Joint connector 4
Joint connector 4
Joint connector 4
Trailer tow connector