-97

C898

14401

P13
Clock spring

Pin	Circuit	Circuit Function
1	15S-JA48 (GN/BK)	Battery voltage, hot in Start and Run only (not overload protected), switched
2	91S-JA48 (BK/GN)	Ground (clean ground), switched
3	91S-JA8 (BK/OG)	Ground (clean ground), switched
4	15S-JA8 (GN/RD)	Battery voltage, hot in Start and Run only (not overload protected), switched
5	9-CE8 (BN/BU)	Sensor signal return (reference/ground)
6	7-CE8 (YE/BU)	Constant DC voltage, other than battery
7	8-CE8 (WH/BU)	Sensor signal (X–direction, forward, upward)
8	10-CE8 (GY/VT)	Sensor signal (Y–direction, reverse, downward)
9	–	not used
10	15-PG13 (GN/YE)	Battery voltage, hot in Start and Run only (not overload protected)
11	9-PG13 (BN)	Sensor signal return (reference/ground)
12	8-PG13 (WH)	Sensor signal (X–direction, forward, upward)
13	91S-GJ6 (BK/BU)	Ground (clean ground), switched
14	91-PG30 (BK/WH)	Ground (clean ground)

C899

14335

E18
Interior lamp, front

F01005

Pin	Circuit	Circuit Function
1	29-LC7A (OG/BU)	Voltage supplied at all times (overload protected)

C900

12A522

Y134
EVAP canister
purge valve

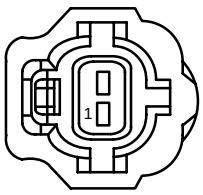

F02027

Pin	Circuit	Circuit Function
1	15-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL25 (BK/BU)	Ground, switched