C275 (GY)

12A522

A147
Powertrain Control
Module (PCM)
(12A650)

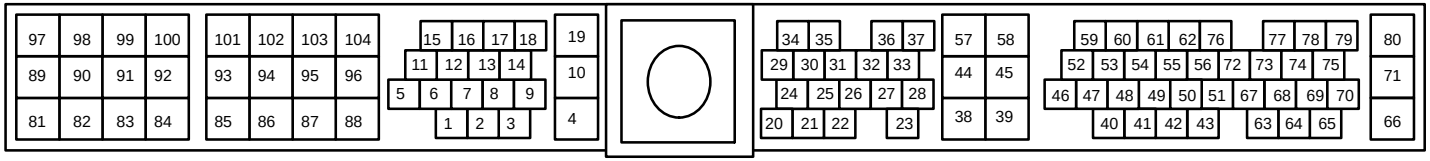

Pin	Circuit	Circuit function
1	AV01 (BU)	Distributor, Transistor, return
2	AV98 (WH)	Distributor, Ignition coil, return
3	AV02 (GN/WH)	Tachometer
4	AV04 (WH/GN)	PCM power relay, control
5	AW18 (GN/BK)	EVAP canister purge valve
6	–	not used
7	AV56 (GN/BK)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
8	AV05 (OG/BK)	Powertrain Control Module (PCM) (12A650) - fuel flow
9	HX01 (BU/BK)	A/C high pressure switch (19D594), input
10	EP06 (BK)	Ground
11	AV54 (BU/RD)	Fuel pump relay, control
12	HA41 (LG)	A/C clutch relay, control
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	AV23 (BU/WH)	Powertrain Control Module (PCM) (12A650)
18	NR01 (VT)	Malfunction Indicator Lamp (MIL), control
19	EP13 (BK)	Ground
20	AV34 (BU/BK)	Voltage supplied in Start (overload protected)
21	HA45 (WH/RD)	A/C high pressure switch (19D594), input
22	ZY13 (GY/RD)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)

Pin	Circuit	Circuit function
23	AV20 (RD)	Throttle Position Sensor (TPS) (9B989), input
24	AV57 (GN/WH)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
25	AV58 (WH)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
26	AV33 (BN/YE)	Throttle position switch - Idle input
27	AV32 (GN/YE)	Vehicle Speed Sensor (VSS) +
28	–	not used
29	AW17 (BU/RD)	High speed cooling fan relay, switched power
30	AW16 (BU/WH)	Low speed fan control relay, switched power
31	AV61 (PK/BK)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
32	FA06 (BN/WH)	High speed cooling fan relay, control
33	ZY34 (RD/GN)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
34	FA12 (BU/OG)	Low speed fan control relay, control
35	AV12 (PK)	Power steering pressure switch, input
36	–	not used
37	–	not used
38	AV36 (BU/YE)	Voltage supplied in Start and Run (overload protected)
39	ES39 (BK/RD)	Ground
40	AV22 (WH)	signal, return
41	AW25 (PK)	EVAP pressure sensor, input
42	–	not used

Pin	Circuit	Circuit function
43	AV09 (LG)	Crankshaft position sensor (6C315)
44	–	not used
45	ES48 (BK/RD)	Ground
46	AV30 (WH)	Camshaft position sensor (6B288), return
47	AV31 (OG)	Camshaft position sensor (6B288), input
48	AV19 (LG)	signal, return
	AW30 (LG)	signal, return
49	–	not used
50	–	not used
51	–	not used
52	AV16 (WH/BU)	Mass Air Flow (MAF) sensor (12B579), signal, return
53	AV17 (BU/OG)	Mass Air Flow (MAF) sensor (12B579), output
54	AW41 (BN)	Signal return – California
55	–	not used
56	–	not used
57	AV37 (BN)	Reference, voltage
58	AV21 (BK/YE)	signal, return
59	AV18 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
60	AV25 (RD/YE)	Fuel pump/fuel gauge sender
61	AV28 (YE/GN)	Intake Air Temperature (IAT) sensor (12A697), input
62	AW28 (RD)	EVAP pressure sensor, input
63	AV27 (WH)	Knock sensor (12A699)
64	–	not used
65	–	not used
66	AV38 (BK/WH)	Voltage supplied in Start and Run (overload protected)
67	–	not used
68	AV42 (YE/GN)	ISO Bus
69	–	not used
70	–	not used
71	AV47 (BK/WH)	Voltage supplied in Start and Run (overload protected)
72	–	not used
73	–	not used
74	AV07 (YE/RD)	Powertrain Control Module (PCM) (12A650)

Pin	Circuit	Circuit function
75	AV15 (YE/BK)	Powertrain Control Module (PCM) (12A650)
76	AV08 (WH/VT)	not used
77	–	not used
78	–	not used
79	–	not used
80	AV46 (YE)	Voltage supplied at all times (overload protected)
81	AV63 (LB)	Idle Speed Control (ISC), input
82	AV51 (GN/OG)	Injector 1, control
83	AV52 (GY)	not used
84	AV53 (GN/RD)	Injector 3, control
85	–	not used
86	AV55 (YE/GN)	Injector 5, control
87	–	not used
88	AW08 (LG/BK)	EVAP canister vent control solenoid, input
89	AV60 (GN)	Injector 2, control
90	–	not used
91	AV62 (YE/VT)	Injector 4, control
92	–	not used
93	AV64 (GY/BU)	Injector 6, control
94	–	not used
95	–	not used
96	EP58 (BK)	Ground
97	AV59 (BK/WH)	Voltage supplied in Start and Run (overload protected)
98	AW12 (VT)	Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) solenoid, control
99	ES90 (BK)	Heated Oxygen Sensor (HO2S), front, heater
	ES10 (BK)	Heated Oxygen Sensor (HO2S), front, heater
100	AW06 (BU/GN)	EVAP canister purge vacuum cut valve bypass solenoid, input
101	–	not used
102	AW43 (YE)	Heated Oxygen Sensor (HO2S), rear, heater – California
103	–	not used
104	EP57 (BK)	Ground