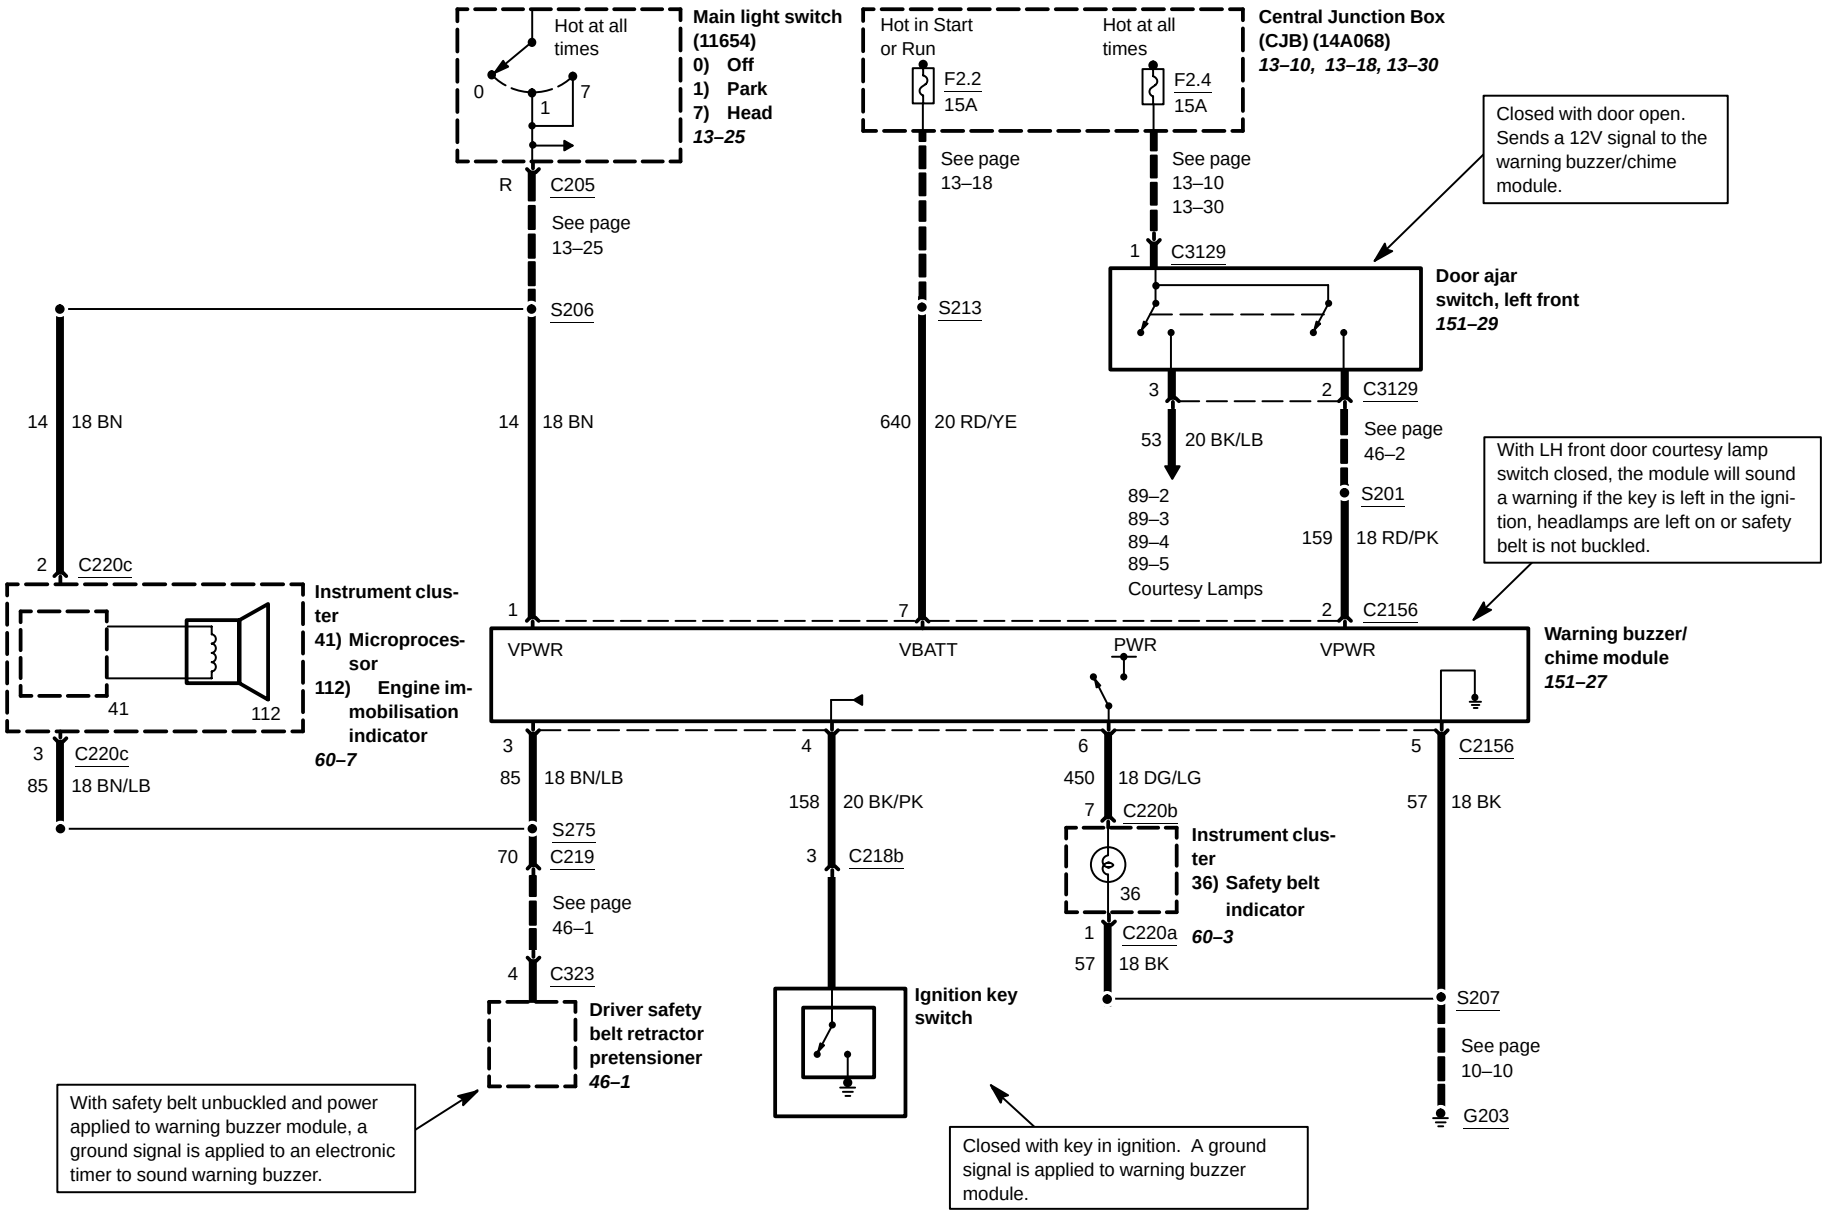
Hot at all times
0
1
7
Main light switch (11654)
0) Off
1) Park
7) Head
13–25
R
C205
See page 13–25
Hot in Start or Run
F2.2
15A
Hot at all times
F2.4
15A
Central Junction Box (CJB) (14A068)
13–10, 13–18, 13–30
See page 13–18
See page 13–10 13–30
1
C3129
Door ajar switch, left front
151–29
Closed with door open. Sends a 12V signal to the warning buzzer/chime module.
S206
S213
3
2
C3129
14
18 BN
14
18 BN
640
20 RD/YE
53
20 BK/LB
See page 46–2
89–2
89–3
89–4
89–5
Courtesy Lamps
S201
159
18 RD/PK
With LH front door courtesy lamp switch closed, the module will sound a warning if the key is left in the ignition, headlamps are left on or safety belt is not buckled.
2
C220c
Instrument cluster
41) Microprocessor
112) Engine immobilisation indicator
60–7
41
112
1
7
2
C2156
VPWR
VBATT
PWR
VPWR
Warning buzzer/chime module
151–27
3
C220c
85
18 BN/LB
3
85
18 BN/LB
4
158
20 BK/PK
6
450
18 DG/LG
5
C2156
57
18 BK
S275
70
C219
3
C218b
7
C220b
Instrument cluster
36) Safety belt indicator
60–3
36
See page 46–1
1
C220a
57
18 BK
4
C323
S207
See page 10–10
G203
Driver safety belt retractor pretensioner
46–1
Ignition key switch
With safety belt unbuckled and power applied to warning buzzer module, a ground signal is applied to an electronic timer to sound warning buzzer.
Closed with key in ignition. A ground signal is applied to warning buzzer module.