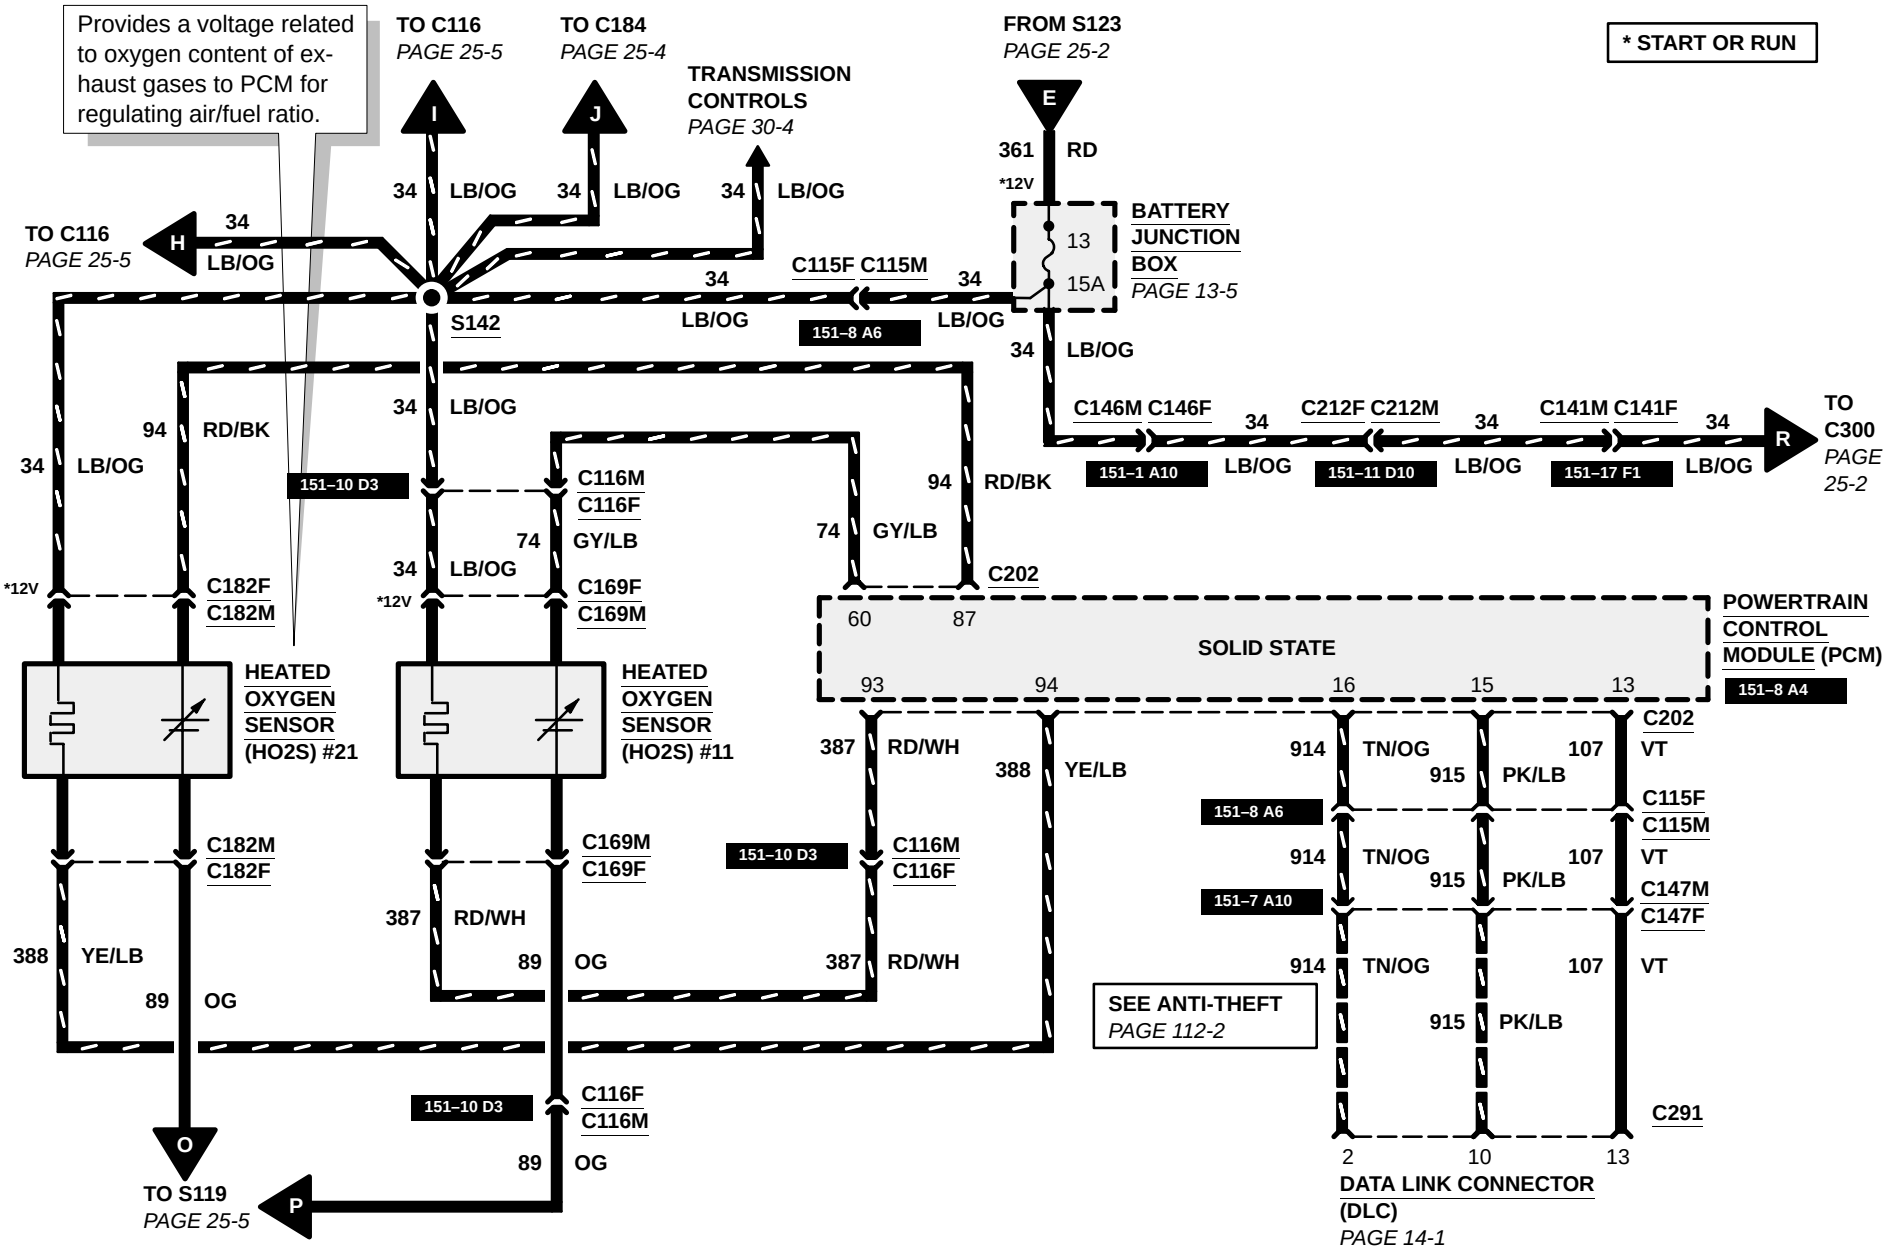
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
TO C116
PAGE 25-5
TO C184
PAGE 25-4
TRANSMISSION CONTROLS
PAGE 30-4
FROM S123
PAGE 25-2
* START OR RUN
I
J
E
361 RD
*12V
BATTERY JUNCTION BOX
PAGE 13-5
13
15A
34 LB/OG
C115F C115M
S142
151–8 A6
TO C116
PAGE 25-5
H
C146M C146F
C212F C212M
C141M C141F
151–1 A10
151–11 D10
151–17 F1
TO C300
PAGE 25-2
R
94 RD/BK
151–10 D3
C116M C116F
74 GY/LB
C202
*12V
C182F C182M
C169F C169M
HEATED OXYGEN SENSOR (HO2S) #21
HEATED OXYGEN SENSOR (HO2S) #11
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–8 A4
60
87
93
94
16
15
13
387 RD/WH
388 YE/LB
914 TN/OG
915 PK/LB
107 VT
C202
C115F C115M
C147M C147F
151–8 A6
151–7 A10
89 OG
151–10 D3
SEE ANTI-THEFT
PAGE 112-2
C291
2
10
13
DATA LINK CONNECTOR (DLC)
PAGE 14-1
O
P
TO S119
PAGE 25-5