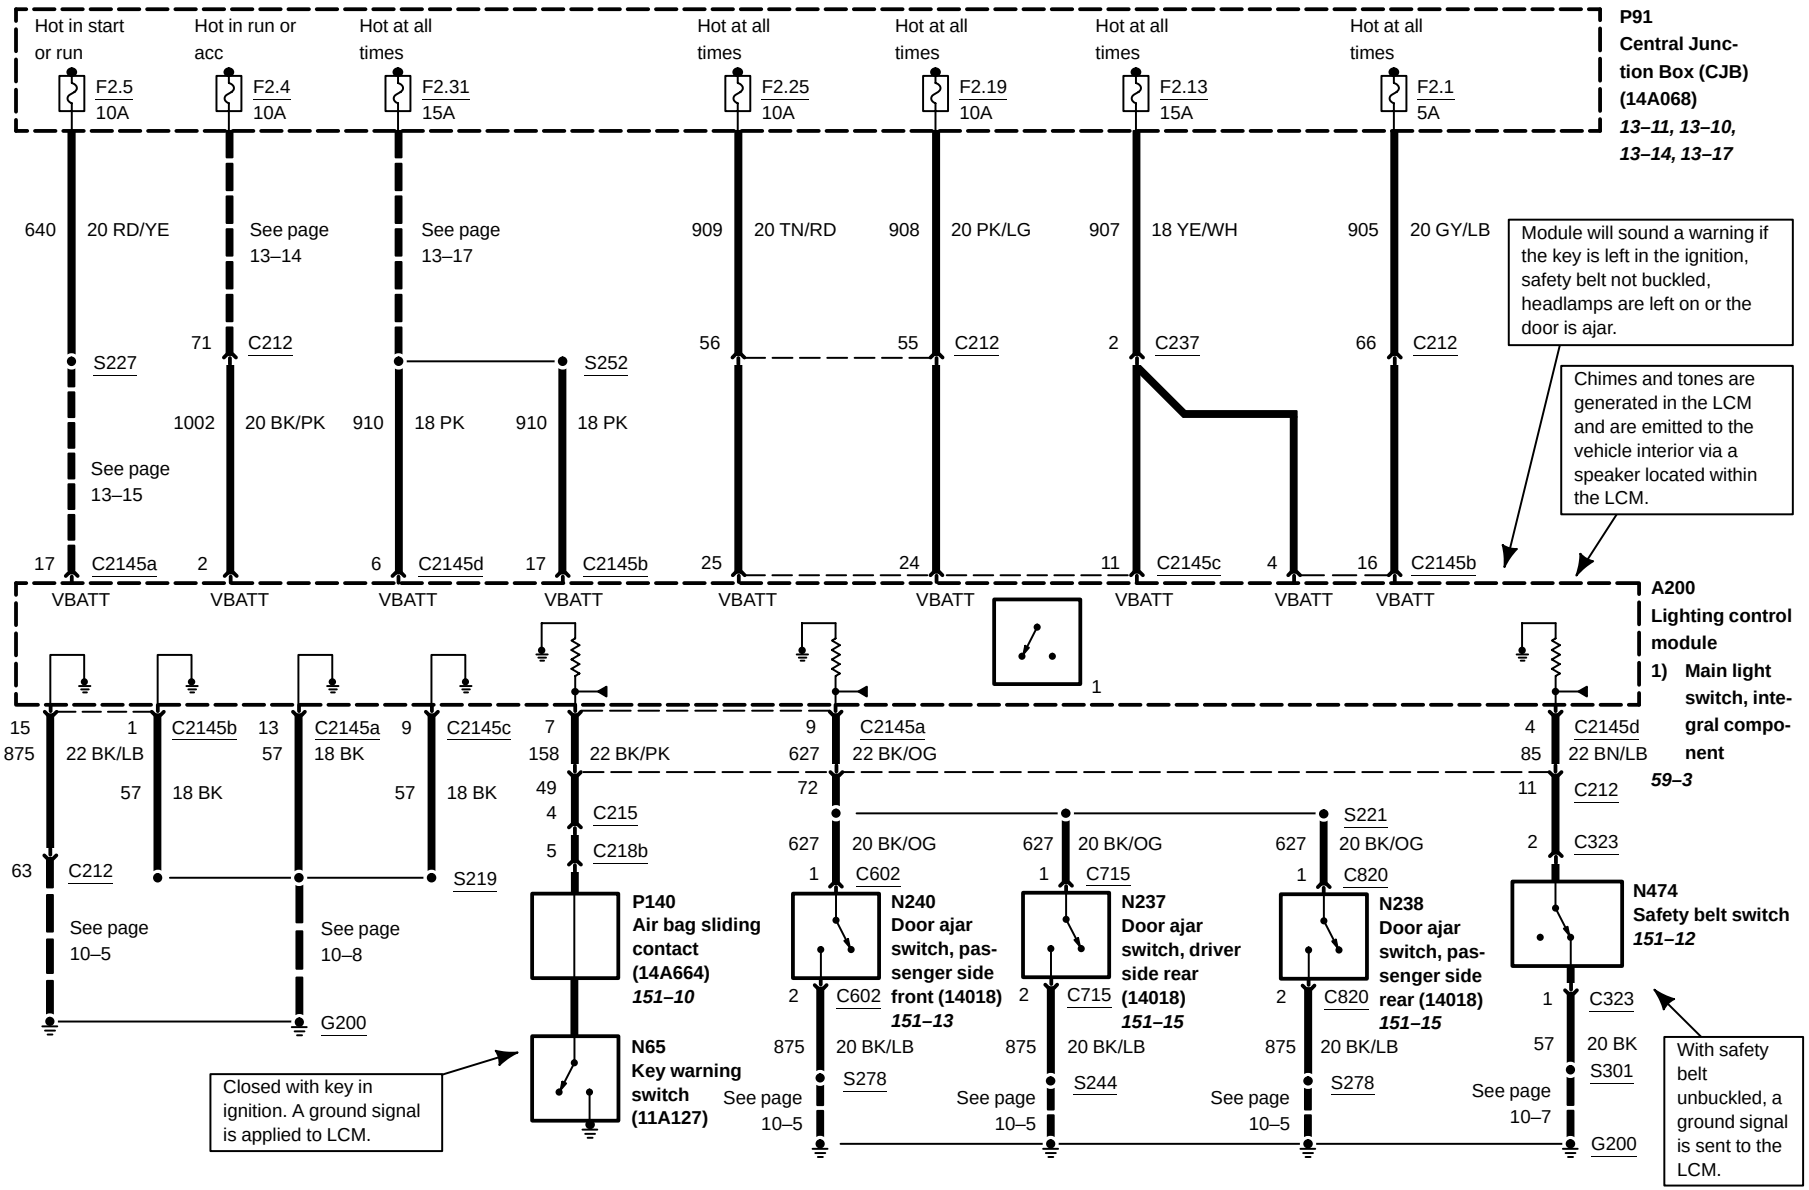
Hot in start or run
Hot in run or acc
Hot at all times
F2.5 10A
F2.4 10A
F2.31 15A
F2.25 10A
F2.19 10A
F2.13 15A
F2.1 5A
P91 Central Junction Box (CJB) (14A068) 13–11, 13–10, 13–14, 13–17
640 20 RD/YE
See page 13–14
See page 13–17
909 20 TN/RD
908 20 PK/LG
907 18 YE/WH
905 20 GY/LB
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
Chimes and tones are generated in the LCM and are emitted to the vehicle interior via a speaker located within the LCM.
71 C212
S227
1002 20 BK/PK
910 18 PK
910 18 PK
S252
56
55 C212
2 C237
66 C212
See page 13–15
17 C2145a
2 C2145d
6 C2145d
17 C2145b
25
24
11 C2145c
4
16 C2145b
VBATT
A200 Lighting control module
1) Main light switch, integral component 59–3
15 875 22 BK/LB
1 C2145b
57 18 BK
13 C2145a
57 18 BK
9 C2145c
57 18 BK
7 158 22 BK/PK
9 627 22 BK/OG
4 85 22 BN/LB
C2145d
49
4 C215
5 C218b
72
627 20 BK/OG
S221
11 C212
2 C323
63 C212
S219
See page 10–5
See page 10–8
P140 Air bag sliding contact (14A664) 151–10
1 C602
1 C715
1 C820
N240 Door ajar switch, passenger side front (14018) 151–13
N237 Door ajar switch, driver side rear (14018) 151–15
N238 Door ajar switch, passenger side rear (14018) 151–15
N474 Safety belt switch 151–12
G200
N65 Key warning switch (11A127)
Closed with key in ignition. A ground signal is applied to LCM.
2 C602
2 C715
2 C820
1 C323
875 20 BK/LB
57 20 BK
S278
S244
S278
S301
See page 10–5
See page 10–5
See page 10–5
See page 10–7
G200
With safety belt unbuckled, a ground signal is sent to the LCM.