## C926a

### 14405

E51
Cargo lamp




F03049

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1008 (LG/OG) | Interior lamp relay, control |
| 2 | - | not used |
| 3 | 57 (BK) | Ground |

## C926b

### 14405

E51
Cargo lamp

F01015

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1005 (VT/OG) | Generic Electronic Module (GEM), to, Battery saver relay - output |

## C931

### 14334

E238
Interior/map lamps assembly, front

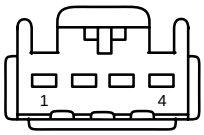


F04155

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1005 (VT/OG) | Generic Electronic Module (GEM), to, Battery saver relay - output |
| 2 | 57 (BK) | Ground |
| 3 | - | not used |
| 4 | - | not used |

## C933

### PIA

N472
Roof opening panel position switch




F03213

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | Z1 (BK) | Ground |
| 2 | Q46 (OG/WH) | Roof opening panel position switch, signal |
| 3 | - | not used |

## C1007

### 14290

K26
Fog lamp relay

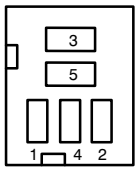


F05109

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 1347 (DB/WH) | Fog lamp switch, output |
| 3 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |
| 4 | - | not used |
| 5 | 478 (TN/OG) | Fog lamp switch, to front fog lamp |