C240a

14401

Audio unit (18808)

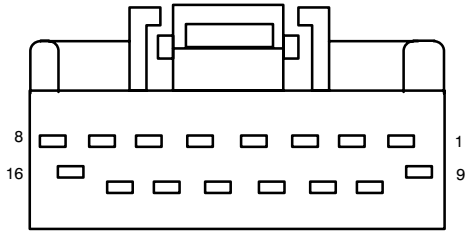

F16055

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	50-MD15 (GY/OG)	Start mute – without keyless entry
4	–	not used
5	8-MD18 (WH)	Speaker, right rear (18808) (+)
6	10-MD18 (GY)	Speaker, right rear (18808) (–)
7	8-MD17 (WH/RD)	Speaker, right front (18808) (+)
8	10-MD17 (GY/RD)	Speaker, right front (18808) (–)
9	29-MD15 (OG/BK)	Battery – keep alive memory
10	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
11	31-MD15 (BK/GN)	Ground
12	8-MD11 (WH/VT)	Speaker, left rear (18808) (+)
13	10-MD11 (GY/WH)	Speaker, left rear (18808) (–)
14	8-MD10 (WH/BK)	Speaker, left front (18808) (+)
15	10-MD10 (GY/BK)	Speaker, left front (18808) (–)
16	31-MD15 (BK/GN)	Ground

* with heated seats

C240b

14401

Audio unit (18808)

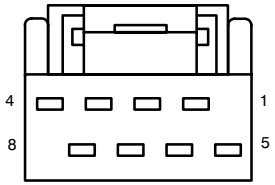

F08167

Pin	Circuit	Circuit function
1	2-MD19 (GY/RD)	Subwoofer, audio, signal (–)
2	1-MD19 (WH/RD)	Subwoofer, audio, signal (+)
3	31-MD4 (BK)	Subwoofer, audio, signal, Shield
4	7-MD19 (YE/RD)	Subwoofer Amplifier enable output
5	2-MD12 (GY)	Center image amplifier, audio, signal (–)
6	1-MD12 (WH)	Center image amplifier, audio, signal (+)
7	31-MD12A (BK/YE)	Center image amplifier, audio, signal, Shield
	*48-MD12A	Center image amplifier, audio, signal, Shield
8	7-MD12 (YE)	Center image amplifier, Enable, output