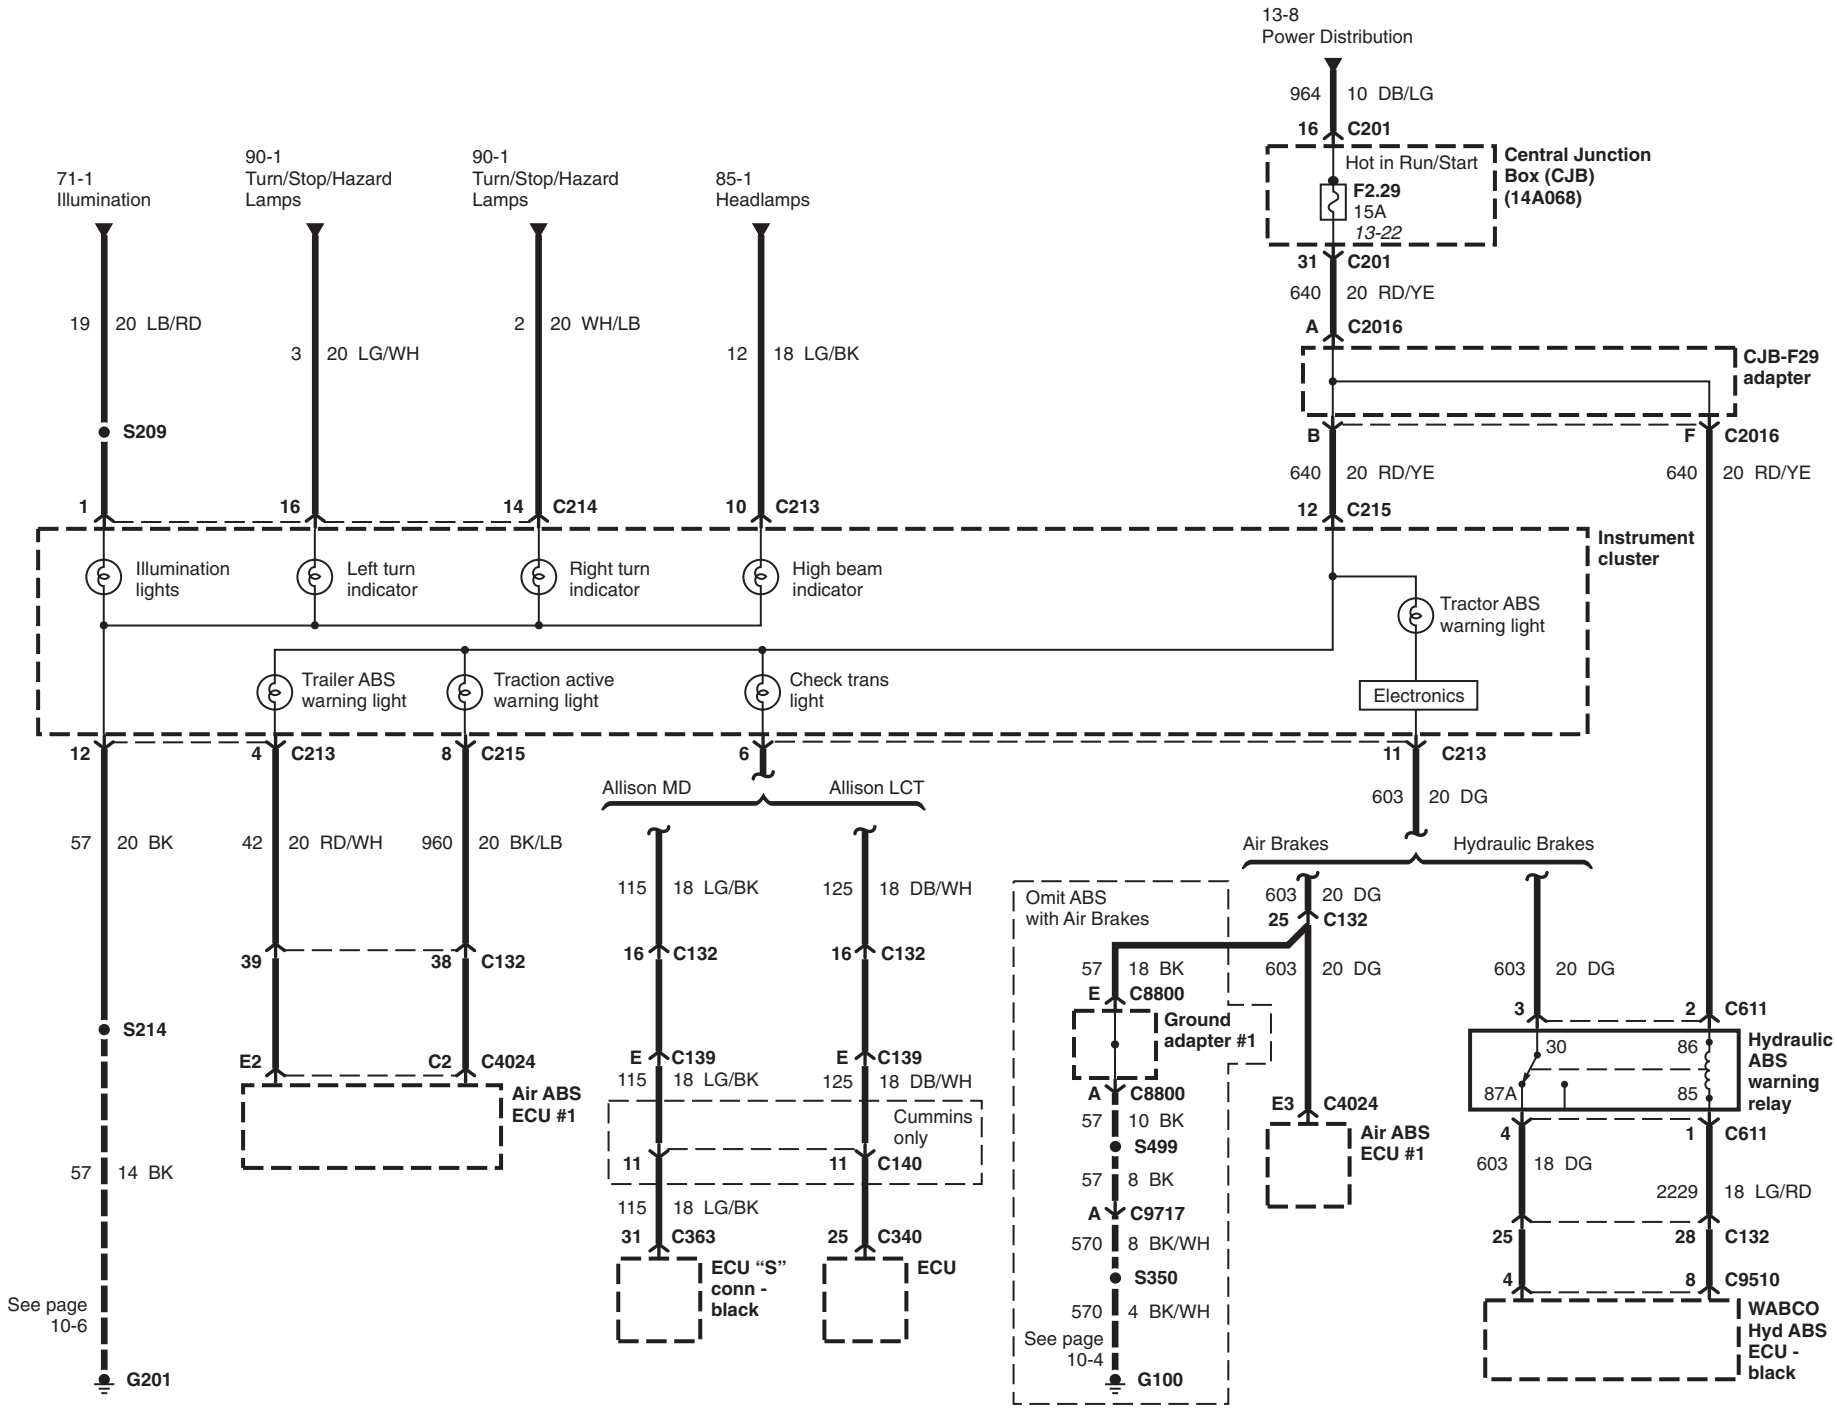
13-8
Power Distribution
964 10 DB/LG
16 C201
Hot in Run/Start
F2.29
15A
13-22
Central Junction Box (CJB) (14A068)
31 C201
640 20 RD/YE
A C2016
CJB-F29 adapter
B C2016
F C2016
640 20 RD/YE
640 20 RD/YE
12 C215
Instrument cluster
71-1
Illumination
90-1
Turn/Stop/Hazard Lamps
90-1
Turn/Stop/Hazard Lamps
85-1
Headlamps
19 20 LB/RD
3 20 LG/WH
2 20 WH/LB
12 18 LG/BK
S209
1
16
14 C214
10 C213
Illumination lights
Left turn indicator
Right turn indicator
High beam indicator
Tractor ABS warning light
Electronics
Trailer ABS warning light
Traction active warning light
Check trans light
12
4 C213
8 C215
6
11 C213
603 20 DG
57 20 BK
42 20 RD/WH
960 20 BK/LB
S214
39
38 C132
E2
C2 C4024
Air ABS ECU #1
57 14 BK
See page 10-6
G201
Allison MD
Allison LCT
115 18 LG/BK
125 18 DB/WH
16 C132
16 C132
E C139
E C139
115 18 LG/BK
125 18 DB/WH
Cummins only
11
11 C140
115 18 LG/BK
31 C363
25 C340
ECU "S" conn - black
ECU
Air Brakes
Hydraulic Brakes
Omit ABS with Air Brakes
603 20 DG
25 C132
57 18 BK
E C8800
603 20 DG
603 20 DG
Ground adapter #1
A C8800
57 10 BK
S499
57 8 BK
A C9717
570 8 BK/WH
S350
570 4 BK/WH
See page 10-4
G100
E3 C4024
Air ABS ECU #1
3
2 C611
30
86
87A
85
Hydraulic ABS warning relay
4
1 C611
603 18 DG
2229 18 LG/RD
25
28 C132
4
8 C9510
WABCO Hyd ABS ECU - black