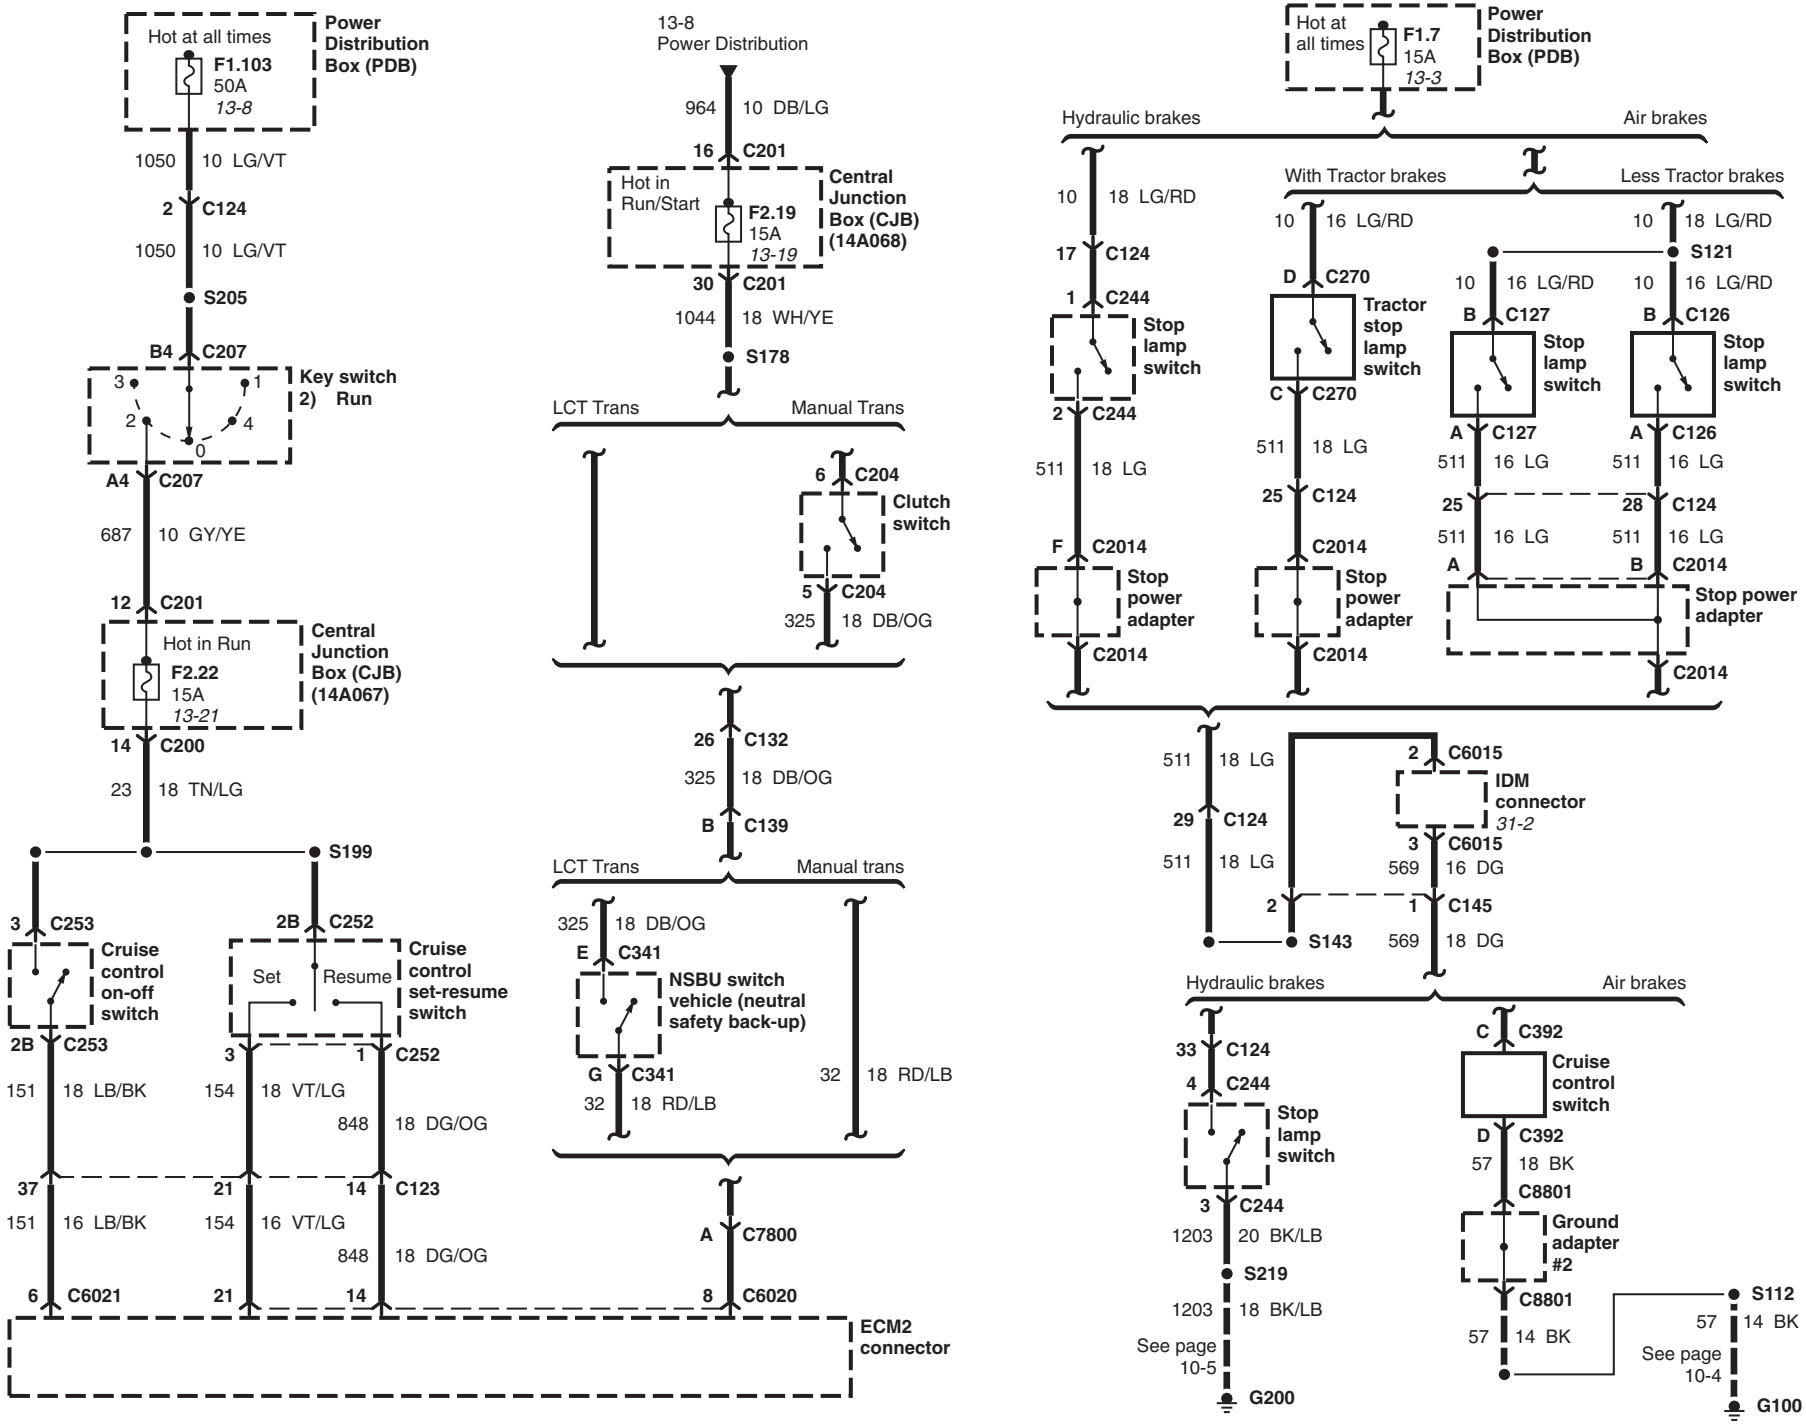
Hot at all times
Power Distribution Box (PDB)
F1.103
50A
13-8
1050 10 LG/VT
2 C124
1050 10 LG/VT
S205
B4 C207
Key switch
2) Run
A4 C207
687 10 GY/YE
12 C201
Hot in Run
Central Junction Box (CJB) (14A067)
F2.22
15A
13-21
14 C200
23 18 TN/LG
S199
3 C253
Cruise control on-off switch
2B C253
151 18 LB/BK
2B C252
Set
Resume
Cruise control set-resume switch
3 1 C252
154 18 VT/LG
848 18 DG/OG
37 21 14 C123
151 16 LB/BK
154 16 VT/LG
848 18 DG/OG
6 C6021
21
14
13-8
Power Distribution
964 10 DB/LG
16 C201
Hot in Run/Start
Central Junction Box (CJB) (14A068)
F2.19
15A
13-19
30 C201
1044 18 WH/YE
S178
LCT Trans
Manual Trans
6 C204
Clutch switch
5 C204
325 18 DB/OG
26 C132
325 18 DB/OG
B C139
LCT Trans
Manual trans
325 18 DB/OG
E C341
NSBU switch vehicle (neutral safety back-up)
G C341
32 18 RD/LB
32 18 RD/LB
A C7800
8 C6020
ECM2 connector
Hot at all times
Power Distribution Box (PDB)
F1.7
15A
13-3
Hydraulic brakes
Air brakes
With Tractor brakes
Less Tractor brakes
10 18 LG/RD
17 C124
1 C244
Stop lamp switch
2 C244
511 18 LG
F C2014
Stop power adapter
C2014
10 16 LG/RD
D C270
Tractor stop lamp switch
C C270
511 18 LG
25 C124
C2014
Stop power adapter
C2014
10 18 LG/RD
S121
10 16 LG/RD
B C127
Stop lamp switch
A C127
511 16 LG
25 C124
511 16 LG
A C2014
10 18 LG/RD
B C126
Stop lamp switch
A C126
511 16 LG
28 C124
511 16 LG
B C2014
Stop power adapter
C2014
511 18 LG
29 C124
511 18 LG
S143
2 C6015
IDM connector
31-2
3 C6015
569 16 DG
1 C145
569 18 DG
Hydraulic brakes
Air brakes
33 C124
4 C244
Stop lamp switch
3 C244
1203 20 BK/LB
S219
1203 18 BK/LB
See page 10-5
G200
C C392
Cruise control switch
D C392
57 18 BK
C8801
Ground adapter #2
C8801
57 14 BK
S112
57 14 BK
See page 10-4
G100