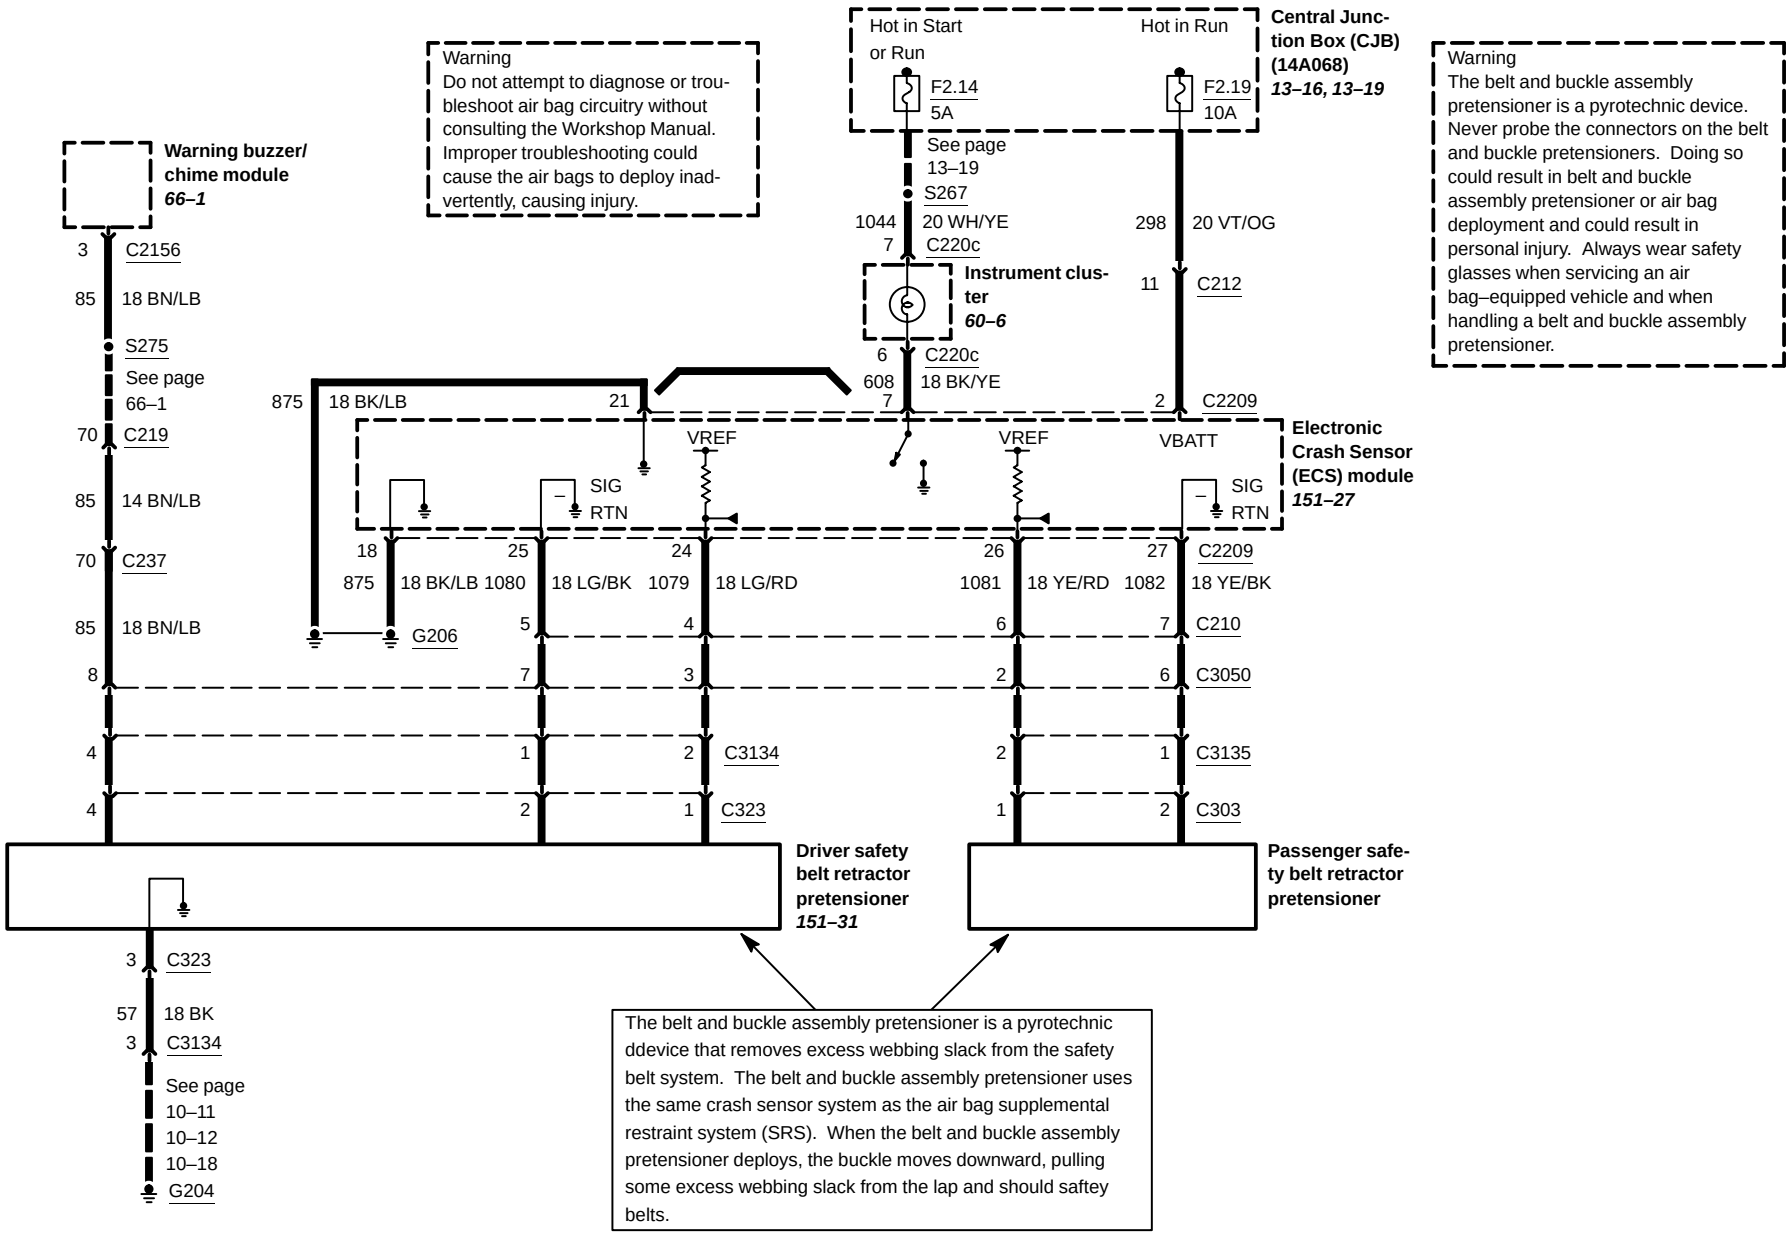
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Start or Run
Hot in Run
Central Junction Box (CJB) (14A068) 13–16, 13–19
F2.14 5A
F2.19 10A
See page 13–19
S267
1044 20 WH/YE
298 20 VT/OG
7 C220c
11 C212
Instrument cluster 60–6
6 C220c
608 18 BK/YE
7 2 C2209
Warning
The belt and buckle assembly pretensioner is a pyrotechnic device. Never probe the connectors on the belt and buckle pretensioners. Doing so could result in belt and buckle assembly pretensioner or air bag deployment and could result in personal injury. Always wear safety glasses when servicing an air bag–equipped vehicle and when handling a belt and buckle assembly pretensioner.
Warning buzzer/ chime module 66–1
3 C2156
85 18 BN/LB
S275
See page 66–1
70 C219
85 14 BN/LB
70 C237
85 18 BN/LB
8
4
4
875 18 BK/LB
21
VREF
VREF
VBATT
SIG RTN
SIG RTN
Electronic Crash Sensor (ECS) module 151–27
18 25 24 26 27 C2209
875 18 BK/LB 1080 18 LG/BK 1079 18 LG/RD 1081 18 YE/RD 1082 18 YE/BK
G206
5 4 6 7 C210
7 3 2 6 C3050
1 2 C3134 2 1 C3135
2 1 C323 1 2 C303
Driver safety belt retractor pretensioner 151–31
Passenger safety belt retractor pretensioner
3 C323
57 18 BK
3 C3134
See page 10–11
10–12
10–18
G204
The belt and buckle assembly pretensioner is a pyrotechnic ddevice that removes excess webbing slack from the safety belt system. The belt and buckle assembly pretensioner uses the same crash sensor system as the air bag supplemental restraint system (SRS). When the belt and buckle assembly pretensioner deploys, the buckle moves downward, pulling some excess webbing slack from the lap and should saftey belts.