Seat adjust switch, driver side front (14A701)

Schematic

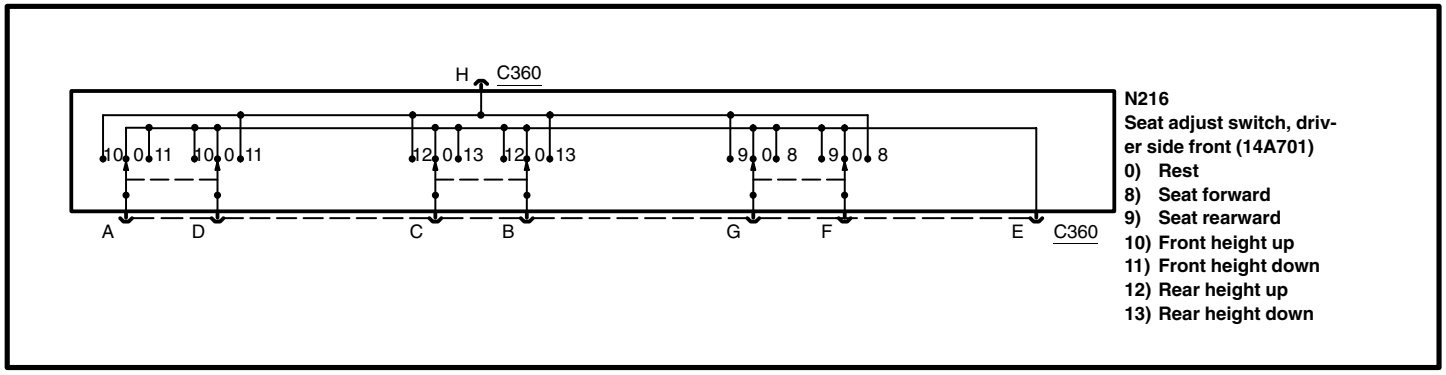

N216
Seat adjust switch, driver side front (14A701)
0) Rest
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down

Terminals

C360

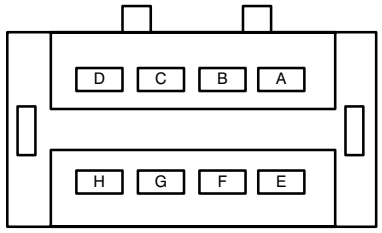

F08275

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	E and A, B, C, D, E, F, G	Rest	Closed circuit
	E and H	Rest	Open circuit
Tilt, front	A and H	Up	Closed circuit
	D and H	Down	Closed circuit
Tilt, rear	C and H	Up	Closed circuit
	B and H	Down	Closed circuit
Forward/rearward circuit	F and H	Forward	Closed circuit
	G and H	Rearward	Closed circuit