C3213

14A488

A461
Safety canopy, left

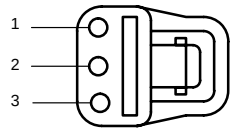

F03035

Pin	Circuit	Circuit function
1	1257 (WH/LB)	Air bag, – driver side impact, – to module, – feed
2	–	not used
3	1258 (BN/LB)	Air bag, – driver side impact, – to module, – return

C3214

14A488

A462
Safety canopy, right

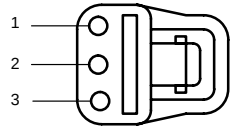

F03035

Pin	Circuit	Circuit function
1	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
2	–	not used
3	1260 (BN/YE)	Air bag – passenger side impact – to module – return

C4009

15K868

B254
Parking aid sensor,
outer left (15K859)

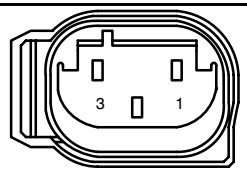

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1444 (DB/YE)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, outer left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4010

15K868

B252
Parking aid sensor,
inner left (15K859)

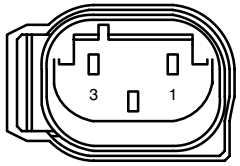

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1443 (WH/LB)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, inner left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4011

15K868

B255
Parking aid sensor,
outer right (15K859)

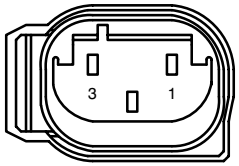

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1442 (DG/WH)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, outer right (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4012

15K868

B253
Parking aid sensor,
inner right (15K859)

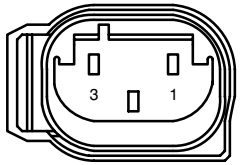

F03108

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1441 (WH/LG)	Parking Aid Module (PAM) (15K866) to Parking aid sensor, inner right (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return