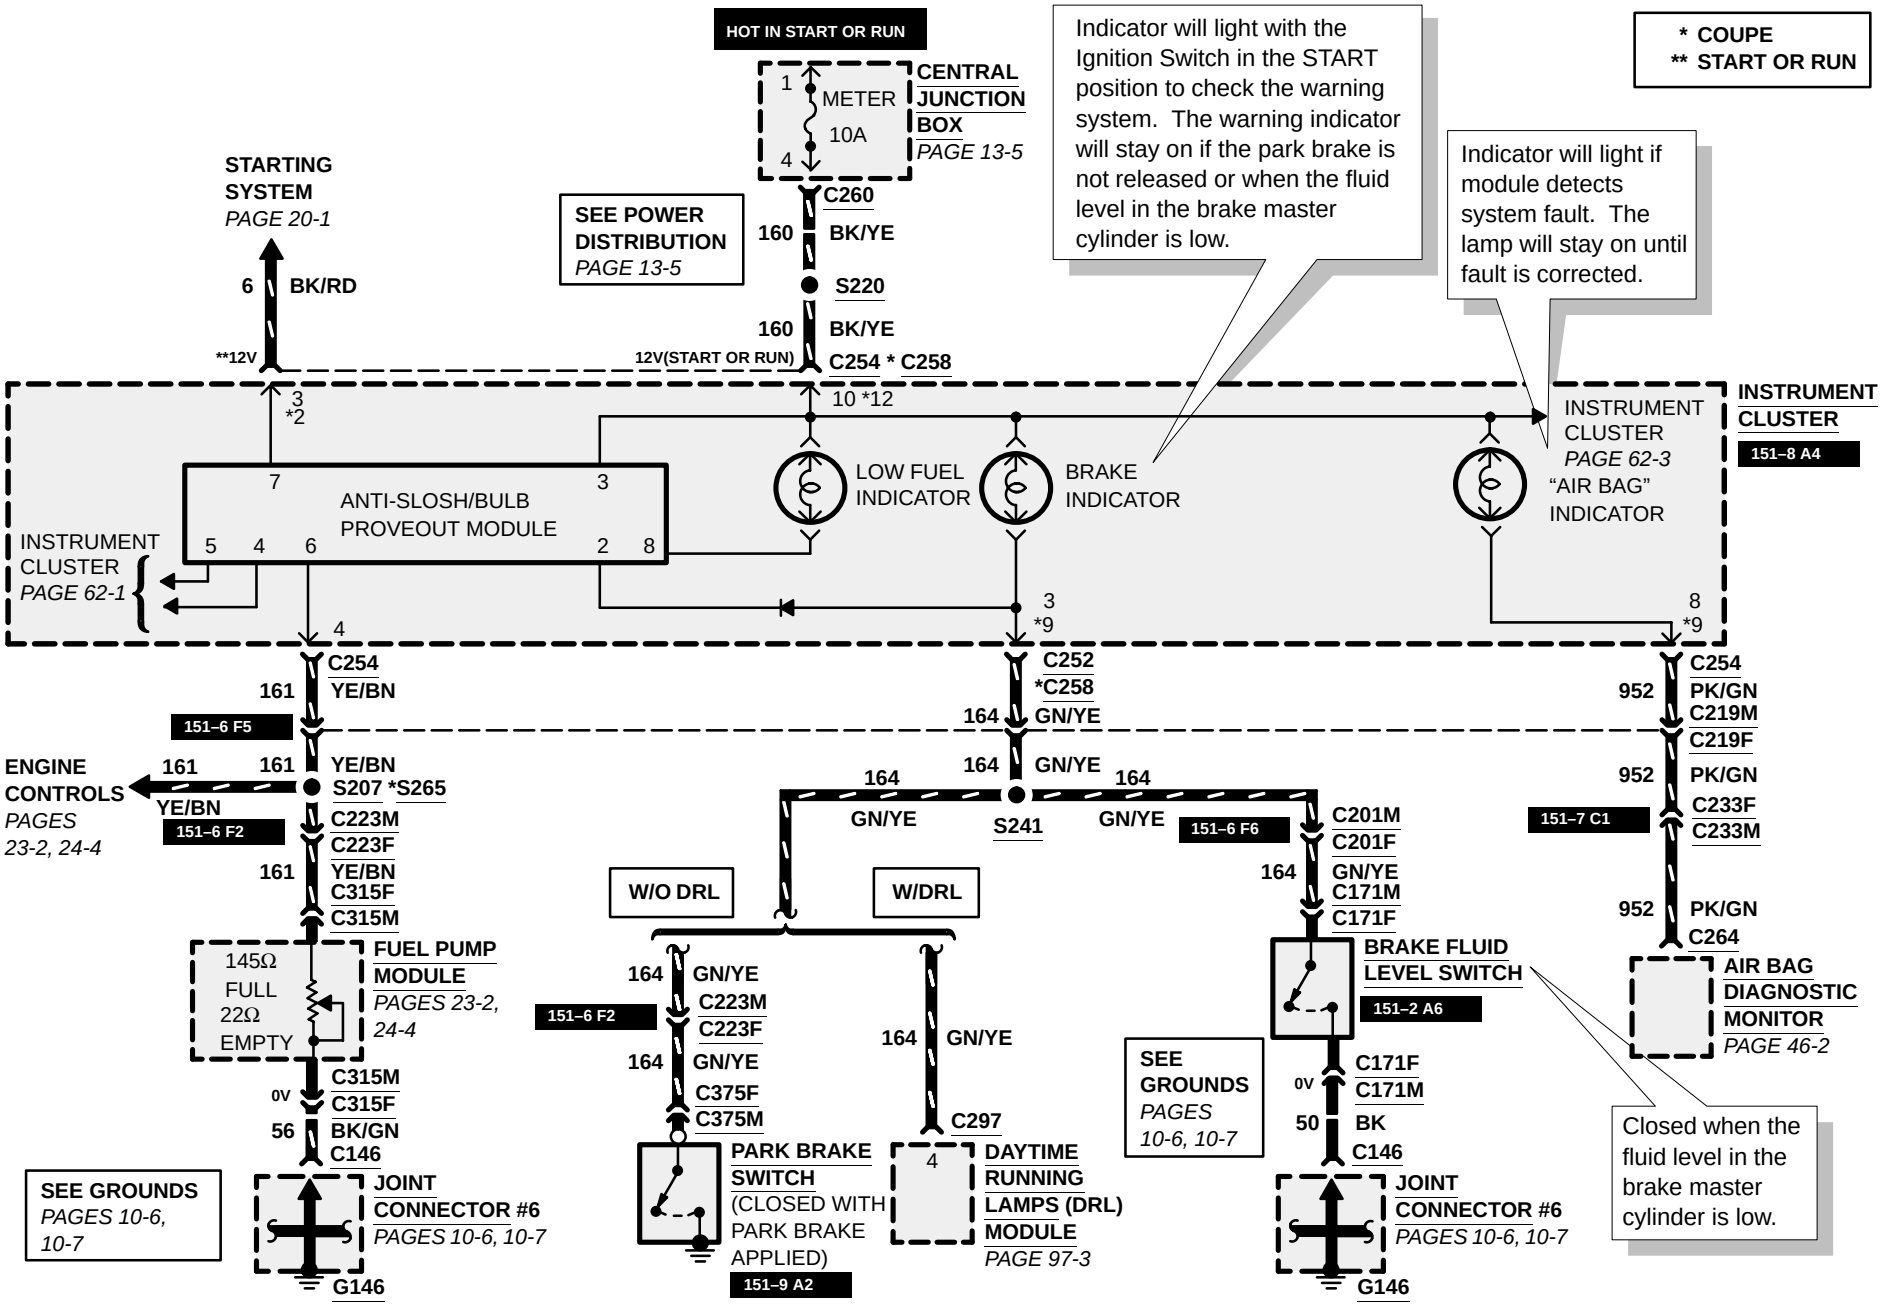
HOT IN START OR RUN
* COUPE
** START OR RUN
Indicator will light with the Ignition Switch in the START position to check the warning system. The warning indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
CENTRAL JUNCTION BOX
PAGE 13-5
METER
10A
STARTING SYSTEM
PAGE 20-1
SEE POWER DISTRIBUTION
PAGE 13-5
C260
160 BK/YE
S220
160 BK/YE
C254 * C258
6 BK/RD
**12V
12V(START OR RUN)
INSTRUMENT CLUSTER
151–8 A4
ANTI-SLOSH/BULB PROVEOUT MODULE
LOW FUEL INDICATOR
BRAKE INDICATOR
INSTRUMENT CLUSTER
PAGE 62-3
"AIR BAG" INDICATOR
INSTRUMENT CLUSTER
PAGE 62-1
C254
161 YE/BN
151–6 F5
C252
*C258
164 GN/YE
C254
952 PK/GN
C219M
C219F
952 PK/GN
C233F
C233M
151–7 C1
ENGINE CONTROLS
PAGES 23-2, 24-4
161 YE/BN
S207 *S265
YE/BN
151–6 F2
C223M
C223F
161 YE/BN
C315F
C315M
S241
164 GN/YE
C201M
C201F
164 GN/YE
C171M
C171F
952 PK/GN
C264
AIR BAG DIAGNOSTIC MONITOR
PAGE 46-2
W/O DRL
W/DRL
FUEL PUMP MODULE
PAGES 23-2, 24-4
145Ω
FULL
22Ω
EMPTY
C315M
C315F
0V
56 BK/GN
C146
164 GN/YE
C223M
C223F
151–6 F2
164 GN/YE
C375F
C375M
164 GN/YE
C297
PARK BRAKE SWITCH
(CLOSED WITH PARK BRAKE APPLIED)
151–9 A2
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-3
BRAKE FLUID LEVEL SWITCH
151–2 A6
C171F
C171M
0V
50 BK
C146
SEE GROUNDS
PAGES 10-6, 10-7
SEE GROUNDS
PAGES 10-6, 10-7
JOINT CONNECTOR #6
PAGES 10-6, 10-7
G146
JOINT CONNECTOR #6
PAGES 10-6, 10-7
G146
Closed when the fluid level in the brake master cylinder is low.