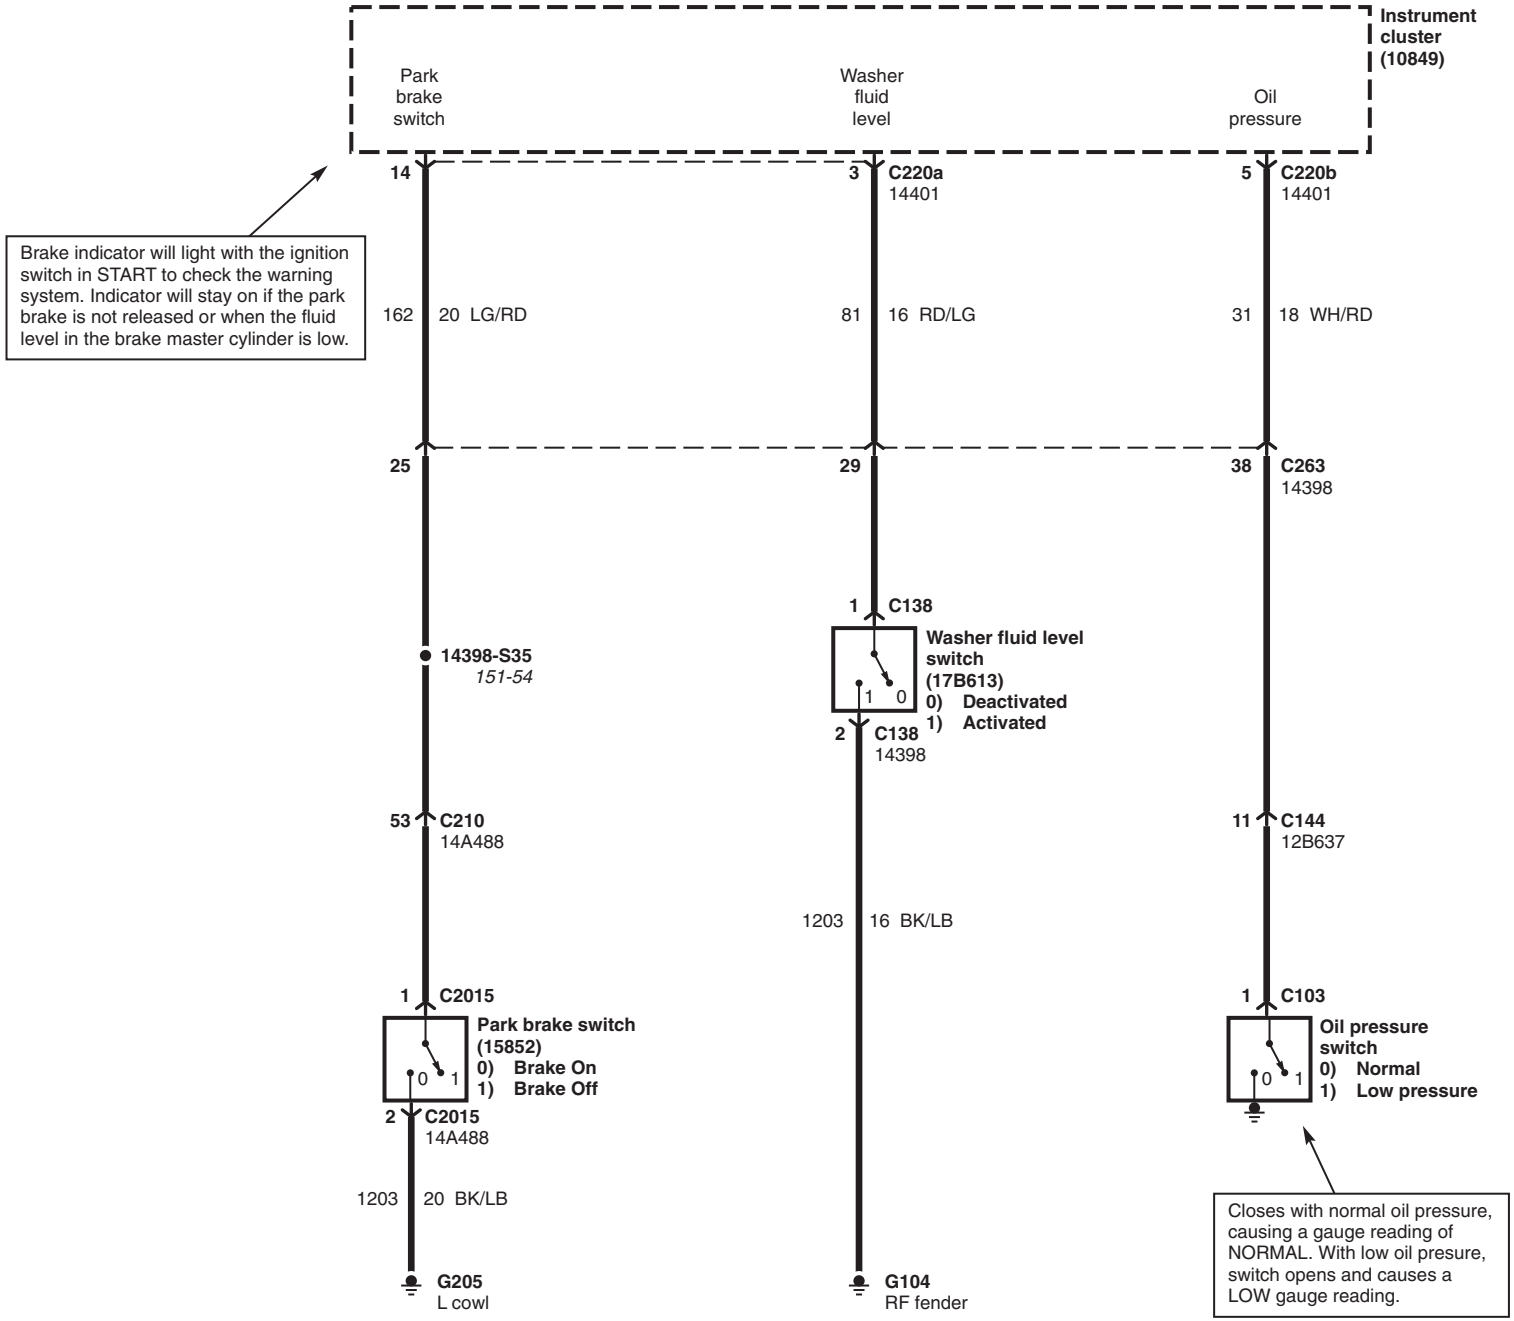
Instrument cluster (10849)
Park brake switch
Washer fluid level
Oil pressure
Brake indicator will light with the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
14
3 C220a 14401
5 C220b 14401
162 20 LG/RD
81 16 RD/LG
31 18 WH/RD
25
29
38 C263 14398
1 C138
Washer fluid level switch (17B613)
0) Deactivated
1) Activated
14398-S35 151-54
2 C138 14398
53 C210 14A488
11 C144 12B637
1203 16 BK/LB
1 C2015
Park brake switch (15852)
0) Brake On
1) Brake Off
1 C103
Oil pressure switch
0) Normal
1) Low pressure
2 C2015 14A488
1203 20 BK/LB
G205 L cowl
G104 RF fender
Closes with normal oil pressure, causing a gauge reading of NORMAL. With low oil presure, switch opens and causes a LOW gauge reading.