C942 (WH)

14334

Rail lamp, RH side (13776)

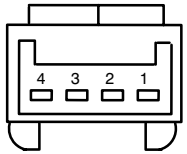

F04351

Pin	Circuit	Circuit function
1	53 (BK/LB)	courtesy lamps, feed
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver, feed
4	14 (BN)	Power, Exterior lamps

C946

14334

Filter

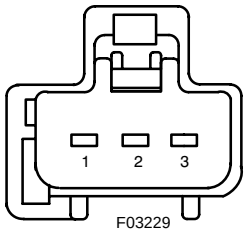

F03229

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), output
2	57 (BK)	Ground
3	511 (LG)	Brake pedal position switch (13480), feed, to stoplamps

C950a

14334

Vanity mirror lamp, left rear

F01006

Pin	Circuit	Circuit function
1	705 LG/OG	Battery saver, feed

C950b

14334

Vanity mirror lamp, left rear

F01006

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C952a

14334

Vanity mirror lamp, right rear

F01006

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver, feed