## C643

**9H589**

B43
Crankshaft position sensor

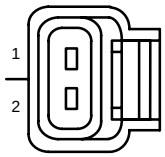


F02026

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-RJ4 (WH/RD) | Sensor signal |
| 2 | 9-RJ4 (BN/RD) | Sensor signal return (reference/ground) |

## C644

**12A522**

N96
Power steering pressure switch

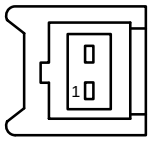


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-CE6 (WH) | Sensor signal |
| 2 | 9-CE6 (BN) | Sensor signal return (reference/ground) |

## C645

**12A522**

A40
Transmission hardware unit

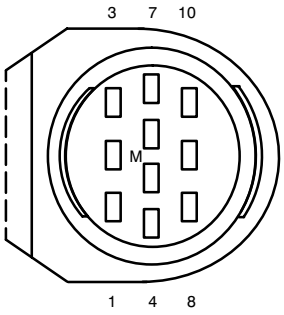


F10012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-TA20 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 9-TA26 (BN/RD) | Sensor signal return (reference/ground) |
| 3 | 8-TA26 (WH/RD) | Sensor signal |
| 4 | 91S-TA23 (BK/YE) | Ground, switched |
| 5 | 15-TA23 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected) |
| 6 | 91S-TA24 (BK/BU) | Ground, switched |
| 7 | 91S-TA20 (BK/WH) | Ground, switched |
| 8 | 91S-TA17 (BK/RD) | Ground, switched |
| 9 | 15-TA17 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected) |
| 10 | 91S-TA25 (BK/OG) | Ground, switched |