C602

14A005

N240
Door ajar switch,
passenger side front
(14018)

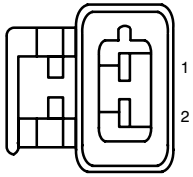

F02379

Pin	Circuit	Circuit Function
1	627 (BK/OG)	Door ajar indicator, control
2	875 (BK/LB)	Ground

C603

14A005

M226
Door lock actuator,
passenger side
(218A42)

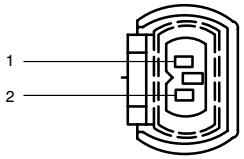

F02116

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C604a

14630

N105
Window adjust
switch, passenger
side

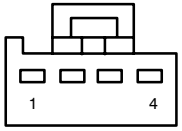

F04153

Pin	Circuit	Circuit Function
1	314 (TN/LB	Window switch, feed, right front, Down
2	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
3	170 (RD/LB)	Window lockout, switched power, output
4	313 (WH/YE)	Window switch, feed, right front, Up

C604b

14630

N105
Window adjust
switch, passenger
side

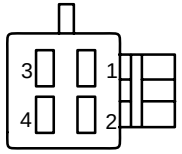

F04193

Pin	Circuit	Circuit Function
1	194 (PK)	Voltage supplied at all times (overload protected)
2	226 (WH/BK)	Window switch, to, Window motor, right front
3	227 (YE)	Window switch, to, Window motor, right front
4	57 (BK)	Ground

C605

14630

N205
Door lock switch,
passenger side
(14028)

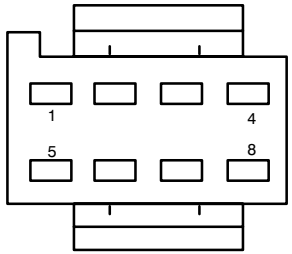

F08056

Pin	Circuit	Circuit Function
1	119 (PK/YE)	Door lock
2	–	not used
3	–	not used
4	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
4	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
5	120 (PK/LG)	Door unlock
6	51 (BK/WH)	Voltage supplied at all times (overload protected)
7	–	not used
8	57 (BK)	Ground