## C505

### 14A005

N447
Master window adjust switch (14529)

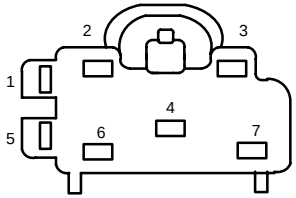


F07081

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 120 (PK/LG) | Door unlock relay, control |
| 4 | 57 (BK) | Ground |
| 5 | 19 (LB/RD) | Voltage supplied at all times (overload protected) |
| 6 | 119 (PK/YE) | Door lock relay, control |
| 7 | – | not used |

## C506

### 14A005

E177
Door entry lamp, left front (13776)




F02235

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 53 (BK/LB) | Interior lamp relay, switched power, output |

## C510 (GY)

### 14A411

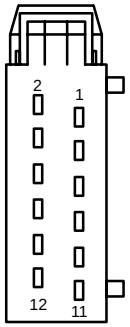


F12056

### 14A005

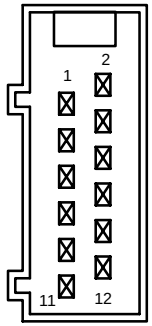


F12054

(1) 1037 (VT/LG)
(2) 1038 (VT/YE)
(3) 875 (BK/LB)
(4) 956 (OG/LG)
(5) 1477 (YE/BK)
(6)
(7) 1479 (DB/OG)
(8) 1478 (DG/OG)
(9) 1475 (PK/OG)
(10) 1476 (RD/OG)
(11)
(12)