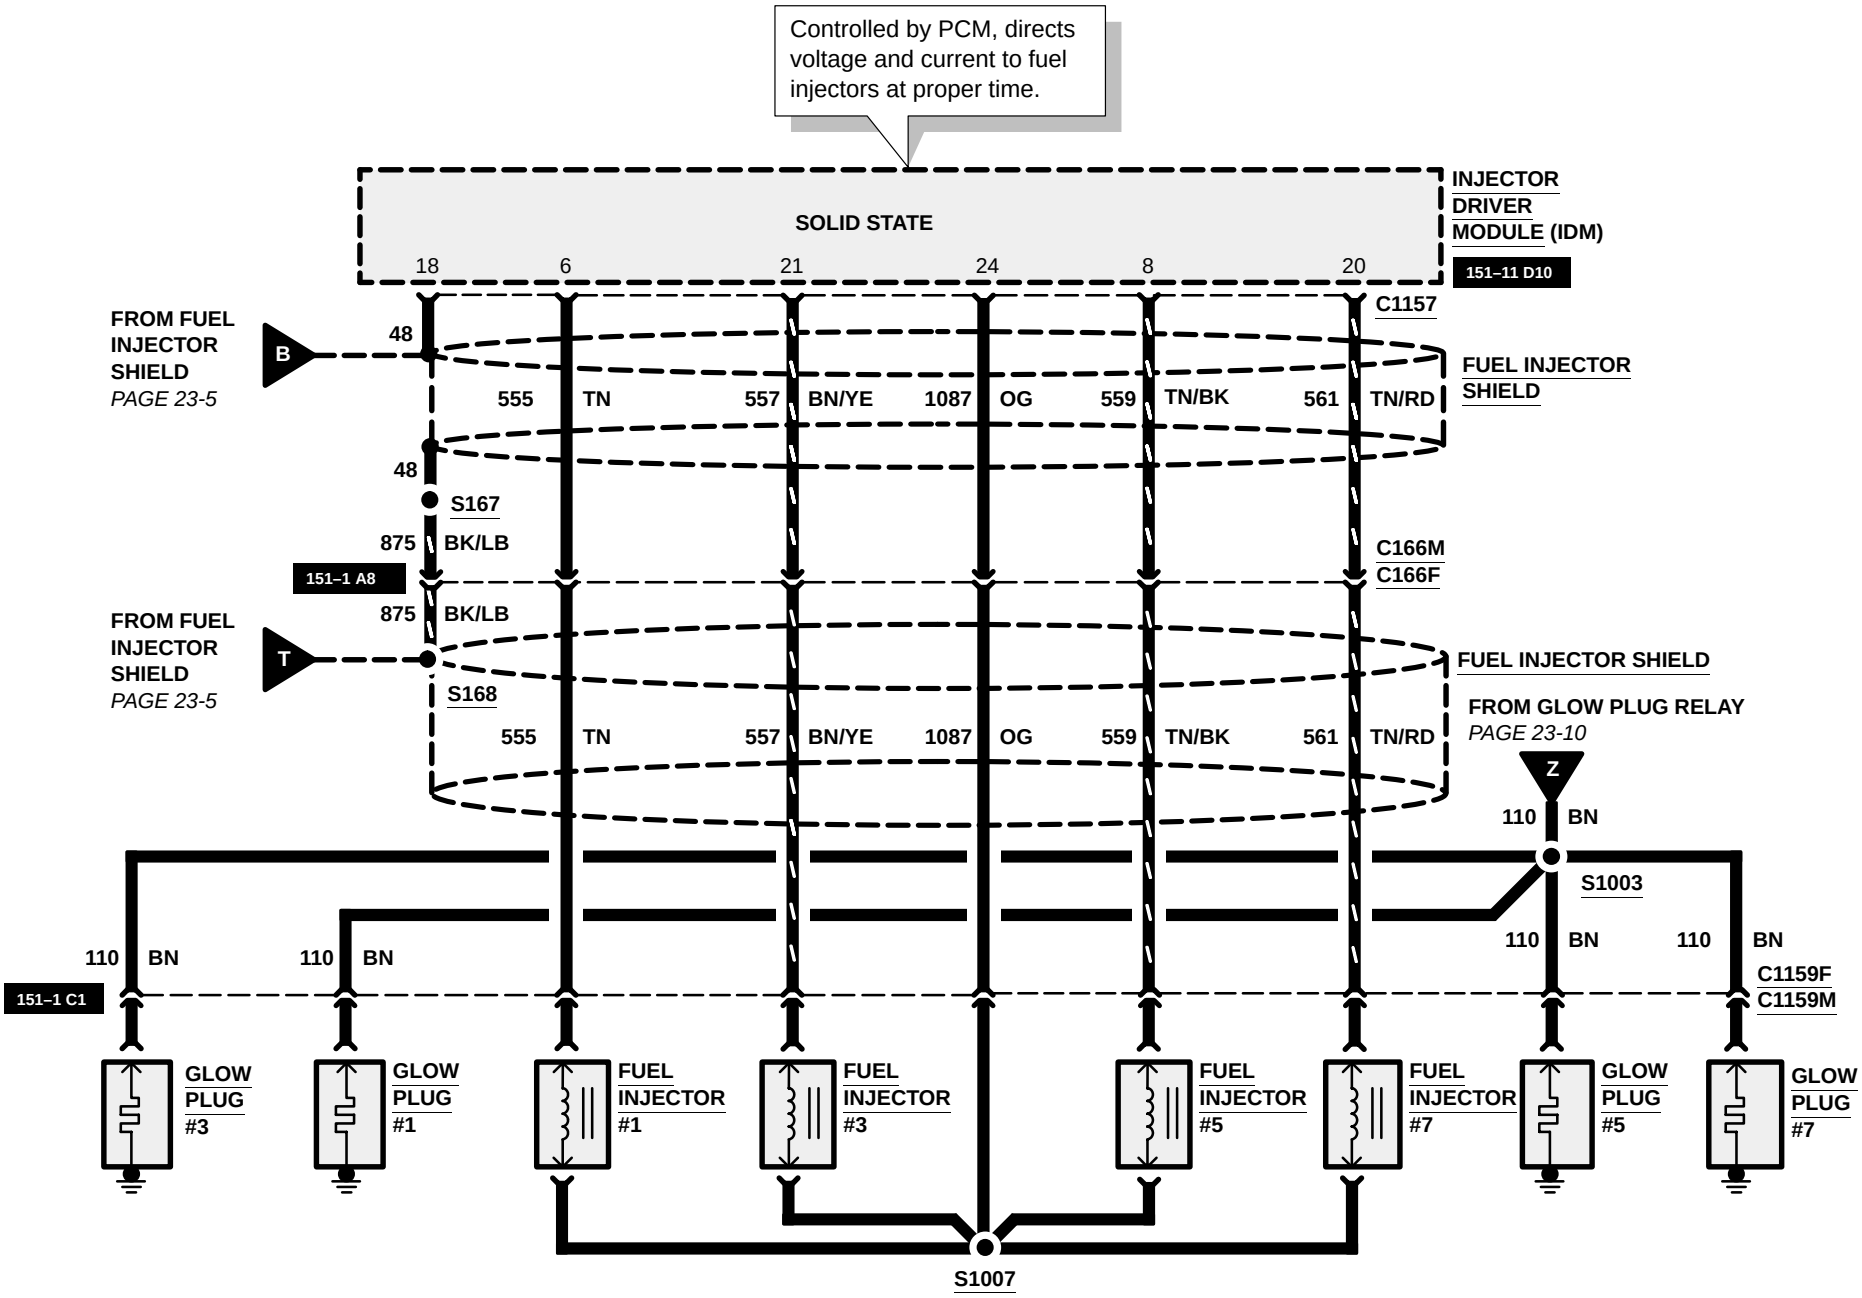
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
18
6
21
24
8
20
INJECTOR DRIVER MODULE (IDM)
151–11 D10
C1157
FUEL INJECTOR SHIELD
FROM FUEL INJECTOR SHIELD
PAGE 23-5
B
48
555 TN
557 BN/YE
1087 OG
559 TN/BK
561 TN/RD
S167
875 BK/LB
151–1 A8
C166M
C166F
T
S168
FUEL INJECTOR SHIELD
FROM GLOW PLUG RELAY
PAGE 23-10
Z
110 BN
S1003
151–1 C1
C1159F
C1159M
GLOW PLUG #3
GLOW PLUG #1
FUEL INJECTOR #1
FUEL INJECTOR #3
FUEL INJECTOR #5
FUEL INJECTOR #7
GLOW PLUG #5
GLOW PLUG #7
S1007