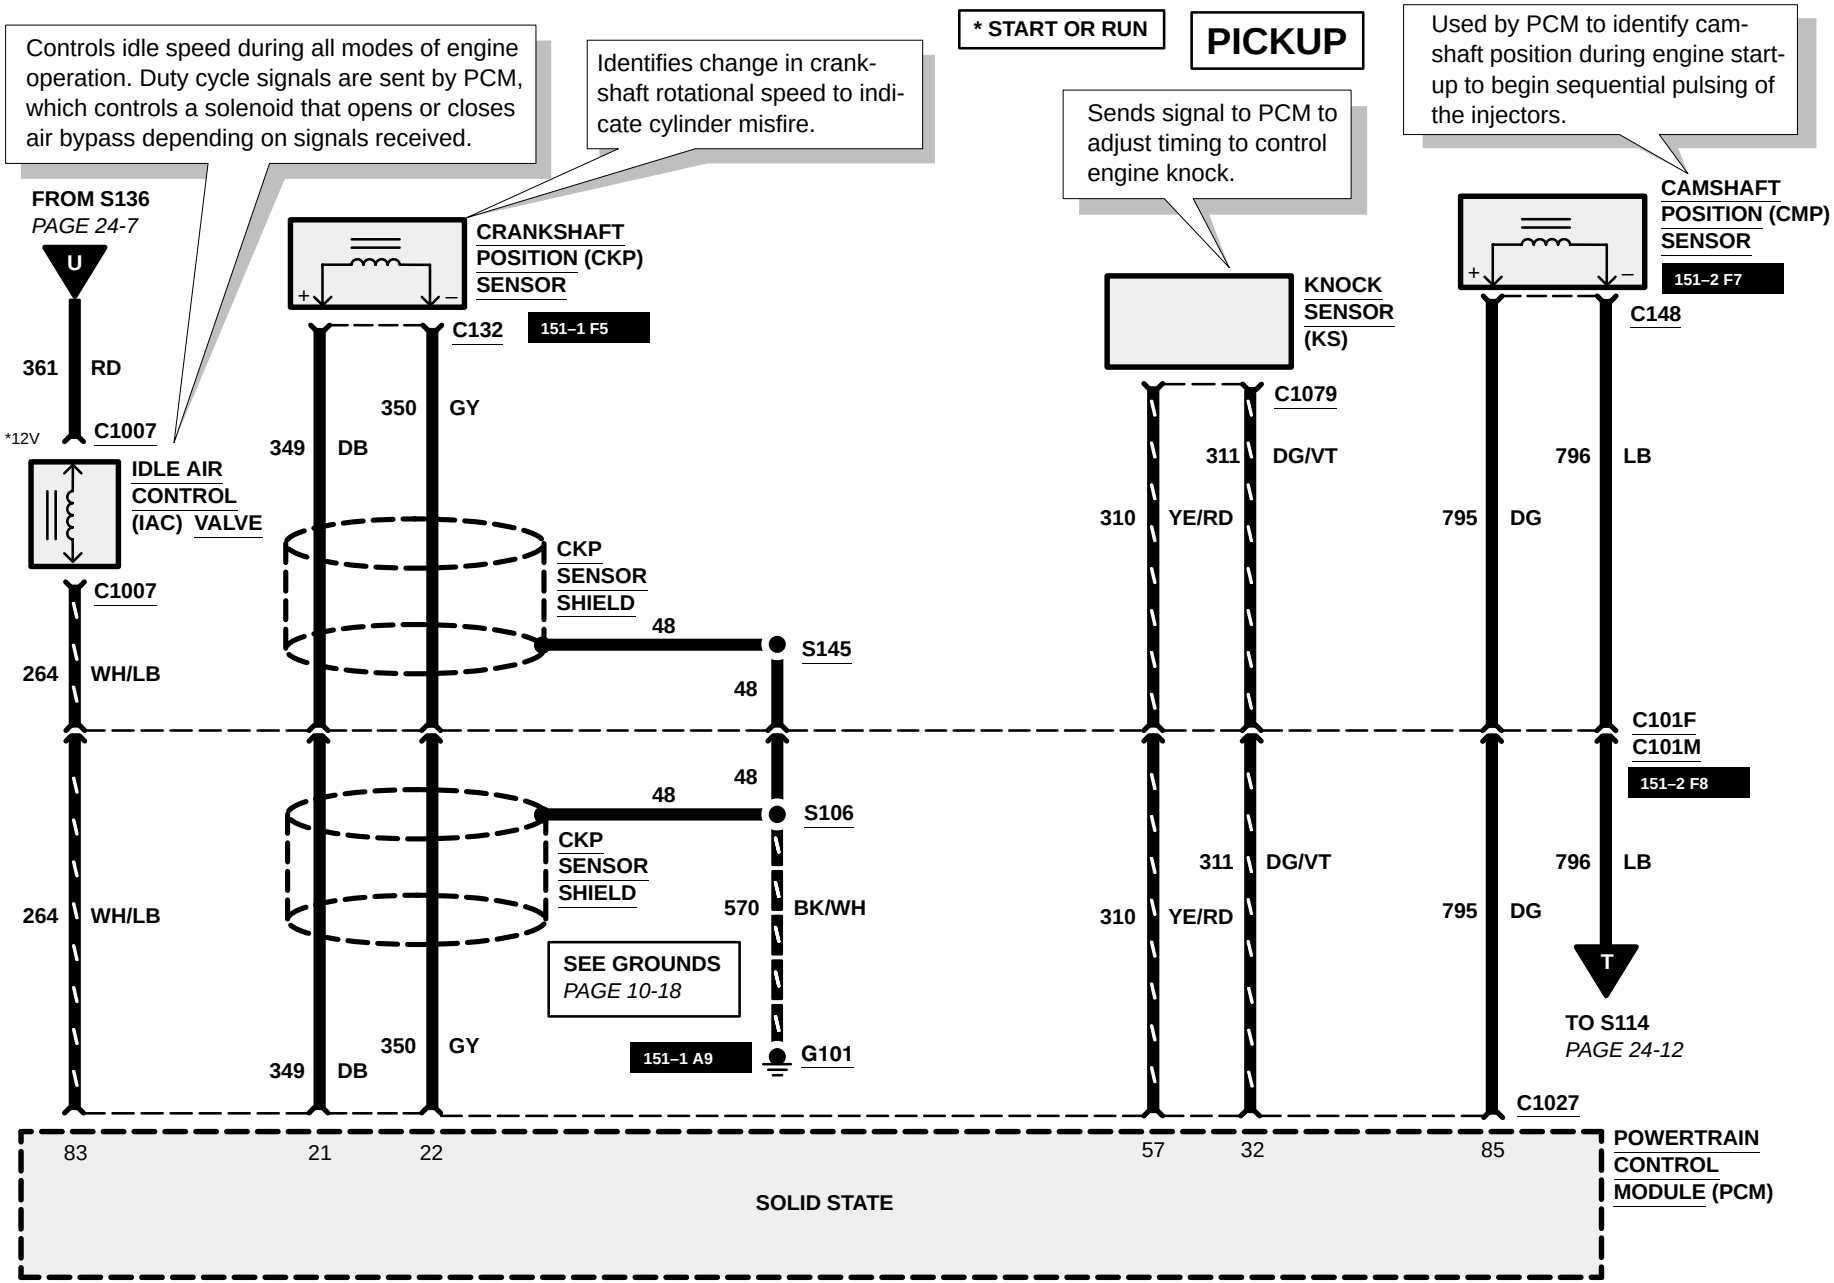
* START OR RUN
PICKUP
Controls idle speed during all modes of engine operation. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signals received.
Identifies change in crankshaft rotational speed to indicate cylinder misfire.
Sends signal to PCM to adjust timing to control engine knock.
Used by PCM to identify camshaft position during engine start-up to begin sequential pulsing of the injectors.
FROM S136
PAGE 24-7
U
361 RD
*12V
C1007
IDLE AIR CONTROL (IAC) VALVE
C1007
264 WH/LB
CRANKSHAFT POSITION (CKP) SENSOR
C132
151–1 F5
349 DB
350 GY
CKP SENSOR SHIELD
48
S145
48
KNOCK SENSOR (KS)
C1079
311 DG/VT
310 YE/RD
CAMSHAFT POSITION (CMP) SENSOR
151–2 F7
C148
796 LB
795 DG
C101F
C101M
151–2 F8
48
48
S106
CKP SENSOR SHIELD
570 BK/WH
SEE GROUNDS
PAGE 10-18
151–1 A9
G101
264 WH/LB
349 DB
350 GY
311 DG/VT
310 YE/RD
796 LB
795 DG
T
TO S114
PAGE 24-12
C1027
83
21
22
57
32
85
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)