C525

14631

M241
Door lock actuator,
left front

F02116

Pin	Circuit	Circuit function
1	1015 (RD/WH)	Door lock actuator, feed, Left front side
2	163 (RD/OG)	Door unlock, Left front side

C526

14631

N84
Door ajar switch, left
front

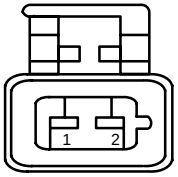

F02379

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	765 (YE/BK)	Door ajar switch, left front

C527

14631

N409
Exterior rear view
mirror switch
(17B676)

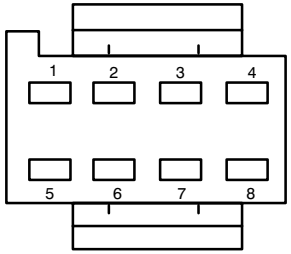

F08056

Pin	Circuit	Circuit function
1	326 (WH/VT)	Voltage supplied at all times (overload protected)
2	–	not used
3	541 (DB)	Up/Down mirror movement, Left
4	540 (RD)	Right/Left mirror movement, Left
5	1205 (BK)	Ground
6	542 (YE)	Mirror motor, feed
7	544 (VT)	Up/Down mirror movement, Right
8	543 (DG)	Right/Left mirror movement, Right

C536

14631

Y258
Subwoofer, left front



F02048

Pin	Circuit	Circuit function
1	287 (BK/WH)	Subwoofer amplifier, front, to Subwoofer, –
2	822 (BK/LG)	Subwoofer amplifier, front, to Subwoofer, +