C359

14A699

Heated seat module, driver side front

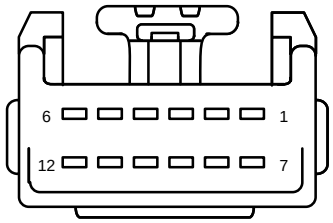

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	1040 (RD/BK)	Voltage in Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1065 (WH/LB)	heater, return
8	1020 (DG/VT)	Climate controlled seat module – High
9	1018 (LG/OG)	indicator – Low
10	1019 (TN/LB)	indicator – High
11	1255 (WH/RD)	Climate controlled seat module – Low
12	1048 (LB/WH)	Voltage supplied at all times (overload protected)

C361

14B723

Lumbar adjust switch, left front (14B691)

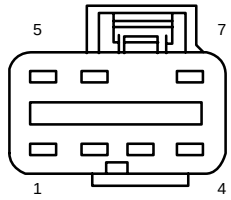

F07103

Pin	Circuit	Circuit function
1	1097 (BN)	Front seat lumbar compressor motor, Out, feed
2	490 (RD)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1094 (PK)	Front seat lumbar compressor motor, In, feed

C364

14A699

Seat cushion heater, left front

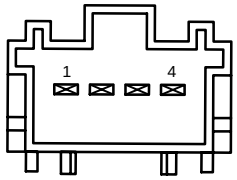

F04287

Pin	Circuit	Circuit function
1	1064 (YE/LB)	heater, feed
2	1060 (BK/LB)	Temperature, signal
3	1061 (BN/LB)	Temperature, return
4	1065 (YE/LB)	heater, return