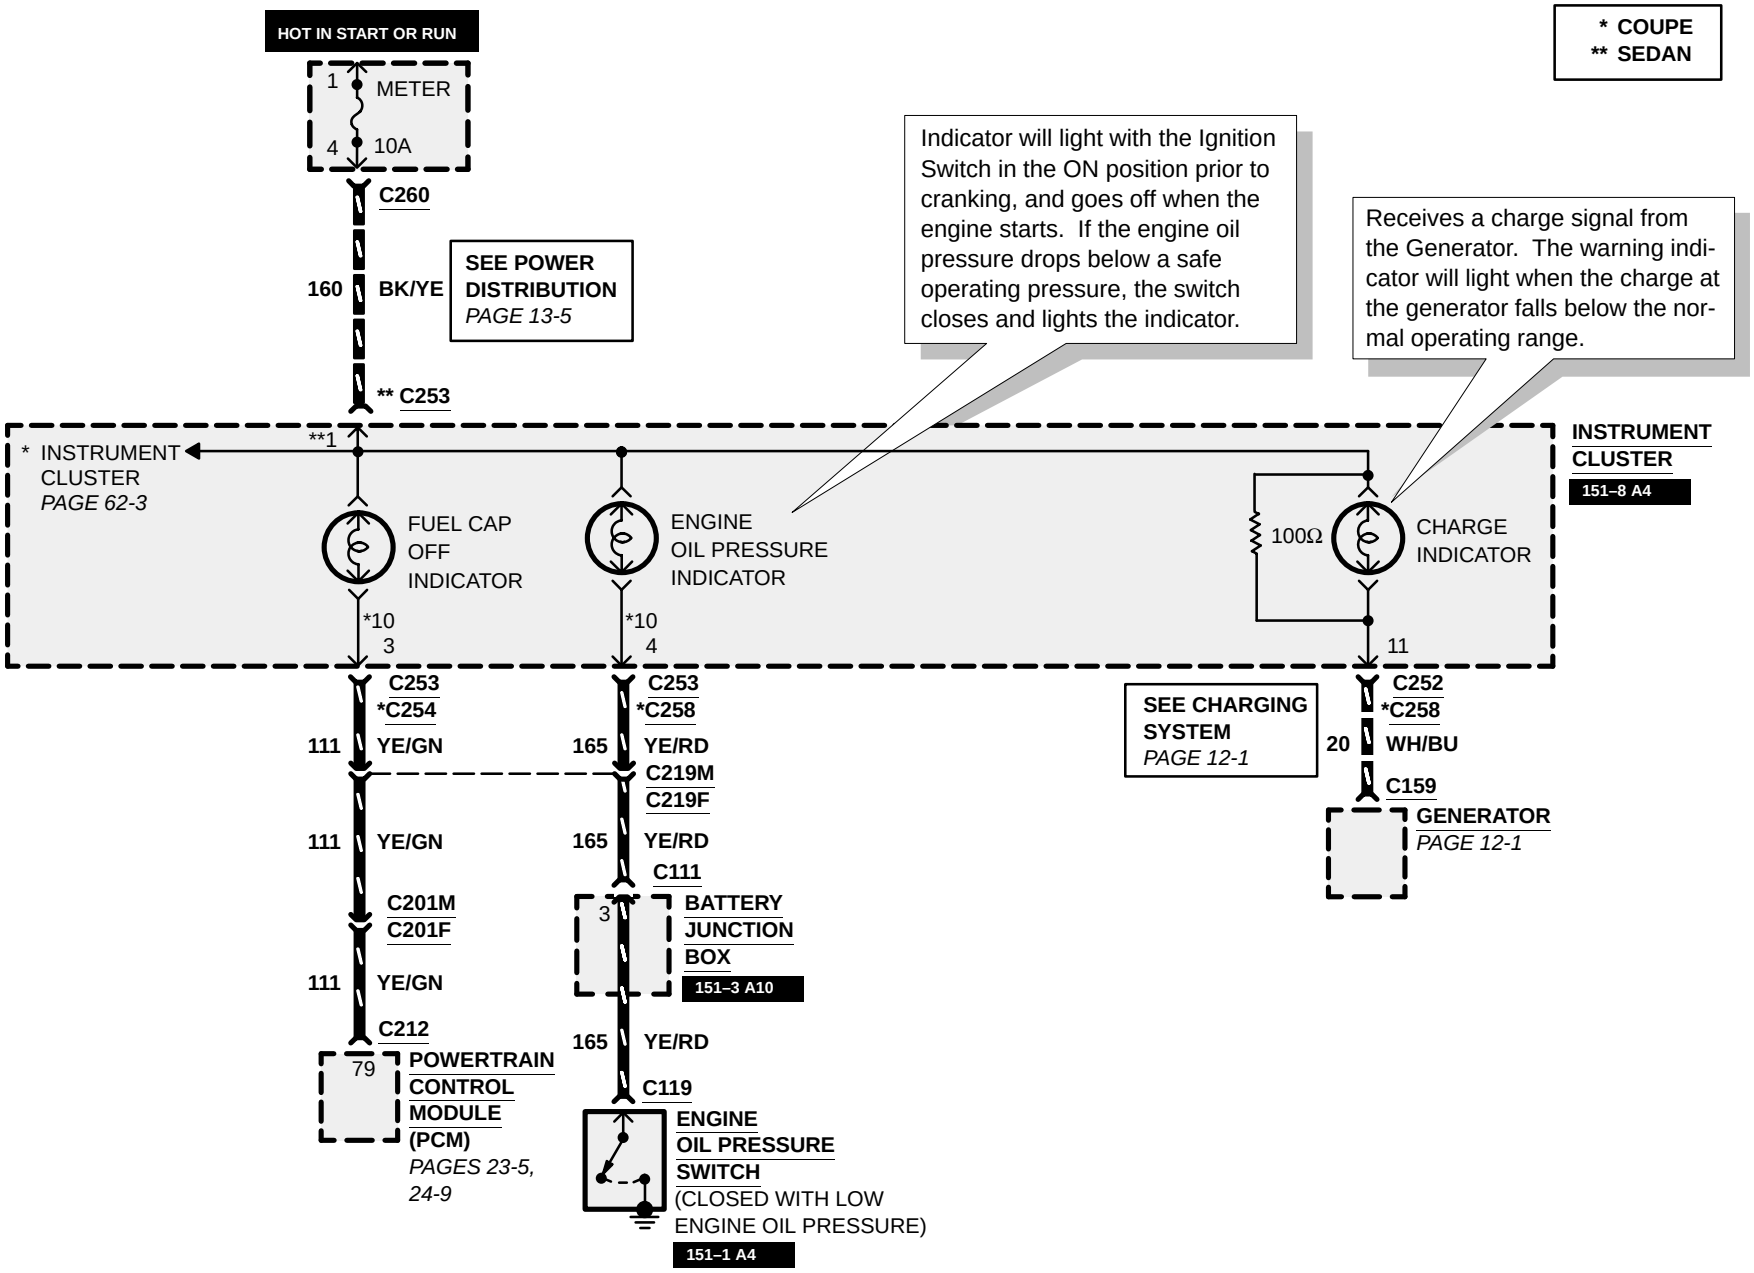
HOT IN START OR RUN
1
METER
4
10A
C260
160
BK/YE
SEE POWER DISTRIBUTION
PAGE 13-5
** C253
**1
* INSTRUMENT CLUSTER
PAGE 62-3
FUEL CAP OFF INDICATOR
ENGINE OIL PRESSURE INDICATOR
100Ω
CHARGE INDICATOR
*10
3
*10
4
11
INSTRUMENT CLUSTER
151–8 A4
* COUPE
** SEDAN
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If the engine oil pressure drops below a safe operating pressure, the switch closes and lights the indicator.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
C253
*C254
111
YE/GN
C253
*C258
165
YE/RD
C219M
C219F
111
YE/GN
165
YE/RD
C111
C201M
C201F
3
BATTERY JUNCTION BOX
151–3 A10
111
YE/GN
C212
165
YE/RD
79
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-5, 24-9
C119
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH LOW ENGINE OIL PRESSURE)
151–1 A4
SEE CHARGING SYSTEM
PAGE 12-1
C252
*C258
20
WH/BU
C159
GENERATOR
PAGE 12-1