## C813

### 14A005

Y271
Speaker, right middle

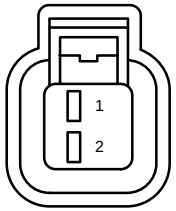

F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 825 (TN/LG) | Speaker, right rear (18808) + |
| 2 | 803 (BN/PK) | Speaker, right rear (18808) – |

## C820

### 14A005

N238
Door ajar switch, passenger side rear (14018)

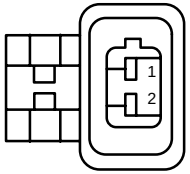

F02117

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 346 (BK/WH) | switch sense, without remote keyless entry |
| | 395 (GY/OG) | switch sense, without remote keyless entry – 4 speaker audio system |
| | 760 (PK/LB) | switch sense, with remote keyless entry |
| 2 | 57 (BK) | Ground, with remote keyless entry |
| | 345 (BK/PK) | switch sense, without remote keyless entry |
| | 346 (BK/WH) | switch sense, without remote keyless entry – 4 speaker audio system |

## C904

Pickup

### 14A005

E174
High mounted sto-plamp (13A613)

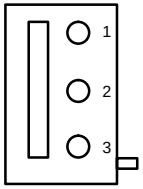

F03081

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 2 | 511 (LG) | Brake pedal position switch (13480), to stoplamps |
| 3 | 57 (BK) | Ground |

## C906

### 17C712

E31
Vanity mirror lamp, right (04100)

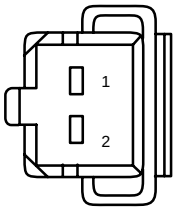

F02217

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | Battery saver relay, switched power, output |
| 2 | 57 (BK) | Ground |

## C907

### 17C712

E30
Vanity mirror lamp, left (04100)

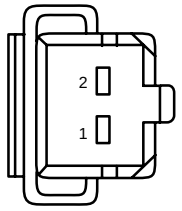

F02217

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | Battery saver relay, switched power, output |
| 2 | 57 (BK) | Ground |