C1061

12B637

B227
Engine Coolant Temperature (ECT) sender

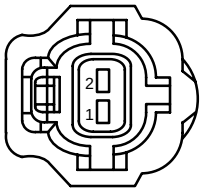

F02027

Pin	Circuit	Circuit Function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	398 (BK/YE)	Ground

C1062

12B637

N76
Dual pressure switch

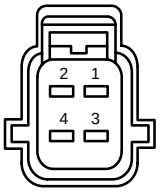

F04207

Pin	Circuit	Circuit Function
1	879 (DG/WH)	A/C high pressure switch, input
2	57 (BK)	Ground
3	347 (BK/YE)	A/C clutch relay, switched output
4	441 (RD/YE)	A/C pressure switch, to A/C cycling switch

C1064

12B637

B10
Engine Coolant Temperature (ECT) sensor

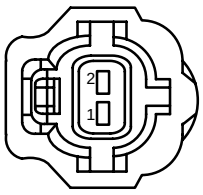

F02027

Pin	Circuit	Circuit Function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor, input
2	359 (GY/RD)	signal, return

C1065

12B637

T1
Ignition coil

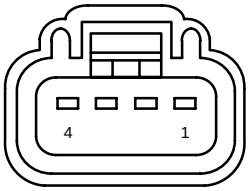

F04221

Pin	Circuit	Circuit Function
1	850 (YE/BK)	Ignition coil A
2	852 (YE/WH)	Ignition coil C
3	851 (YE/RD)	Ignition coil B
4	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1066

12B637

Y133
Idle air control valve (IAC)

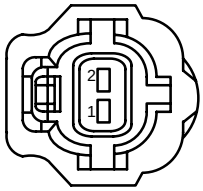

F02027

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle air control valve (IAC), control