C226 (GY)

14401

Steering position sensor (18B015)

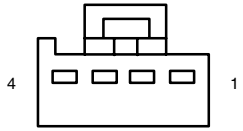

F04153

Pin	Circuit	Circuit function
1	1574 (DB)	Sensor, Power
2	1573 (YE)	ABS control module (2C219) to Steering position sensor (18B015), input 2
3	1572 (DG)	ABS control module (2C219) to Steering position sensor (18B015), input 1
4	1571 (BK)	Sensor signal return (reference/ground)

C228a (GY)

14401

Electronic Automatic Temperature Control (EATC) module (19980)

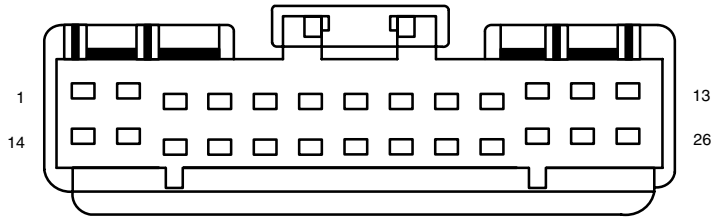

F26014

* Navigator

Pin	Circuit	Circuit function
1	–	not used
2	875 (BK/LB)	Ground
3	184 (TN/OG)	Front blower motor speed controller (19E624), signal
4	436 (RD/LG)	Air temperature door variable resistor +
5	1070 (BN/LB)	Audio/climate control switch, Climate Control System, signal
6	1958 (GY/YE)	Sunload sensor (19E663), signal – passenger side
7	767 (LB/OG)	Ambient air temperature sensor (19E702), signal
8	1122 (RD)	Temperature blend door actuator, passenger (19E616), position, signal
9	1957 (LB/RD)	Remote solenoid assembly, return
10	757 (RD/WH)	Front blower motor speed controller (19E624), return
11	1956 (LB/WH)	Remote solenoid assembly, Circuit 5
12	1955 (DB/OG)	Remote solenoid assembly, Circuit 4
13	1952 (OG/LG)	Remote solenoid assembly, Circuit 1
14	19 (LB/RD)	Instrument illumination, feed
	*235 (RD/BK)	Instrument illumination, feed
15	–	not used
16	758 (VT/WH)	Front blower motor speed controller (19E624), Power
17	3063 (TN/OG)	Vehicle interior, humidity, signal
18	3062 (BK/WH)	In–vehicle temperature/humidity sensor, Power
19	790 (WH/OG)	Vehicle interior, Temperature, signal
20	468 (BN)	Sunload sensor (19E663), signal – driver side
21	437 (YE/LG)	Temperature blend door actuator, driver (19E616), position, signal
22	–	not used
23	461 (OG)	Front blower motor relay, control
24	773 (DG/OG)	Remote solenoid assembly, Circuit 6
25	1954 (DG/VT)	Remote solenoid assembly, Circuit 3
26	1953 (WH/VT)	Remote solenoid assembly, Circuit 2