F24017

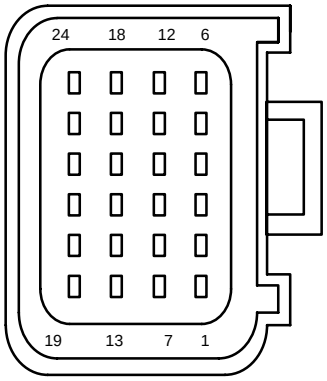

C424

14014

A29
Air bag diagnostic monitor

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	91S-JA32 (BK/YE)	Ground, switched
8	15S-FA32 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	15S-JA31 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91S-JA31 (BK/WH)	Ground, switched
11	91S-JA8 (BK/OG)	Ground, switched
12	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
13	91S-JA48 (BK/GN)	Ground, switched
14	91S-JA14 (BK/GN)	Ground, switched
15	8-EE7 (WH/RD)	Sensor signal
16	91S-AA72 (BK/YE)	Ground, switched
17	91S-JA13 (BK/RD)	Ground, switched
18	91-JA47 (BK/OG)	Ground
19	15S-JA48 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
20	8-JA49 (WH)	Sensor signal
	8-JA9 (WH/BU)	Sensor signal return (reference/ground)
21	9-JA49 (BN)	Sensor signal return (reference/ground)
	9-JA9 (BN/BU)	Sensor signal (X–direction, forward, upward)
22	–	not used
23	91-JA10 (BK/RD)	Ground
24	15-JA10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)