Vehicle Repair Location Codes

To pinpoint the actual vehicle location of a repair, the vehicle repair location code is required.

Location code, for the example: A5/FU – (under the floor of driver's left foot.)

For example, an "X" has been placed in the quadrant of the vehicle diagrams indicating the location of the repair. See diagrams.

Front/rear direction
front

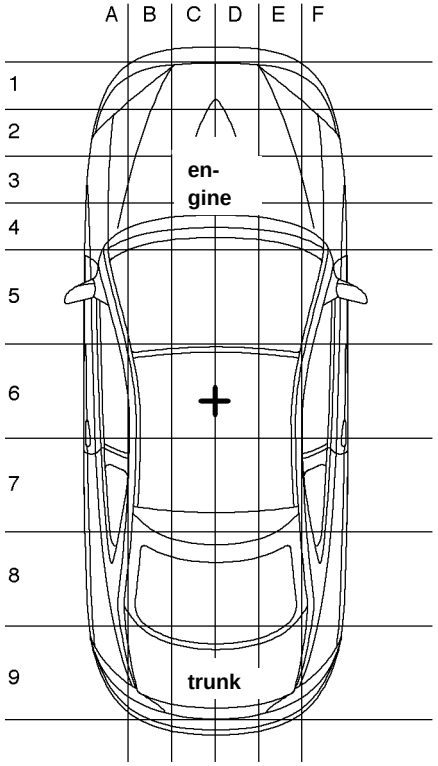

rear

+ center of vehicle

Over/under direction

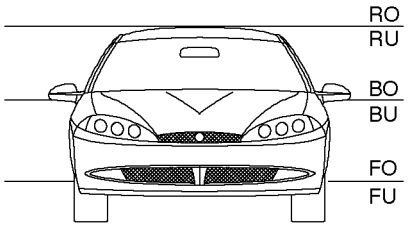

R = roof line
- RO = roof over
- RU = roof under

B = belt line
- BO = belt over
- BU = belt under

F = floor pan
- FO = floor over
- FU = floor under

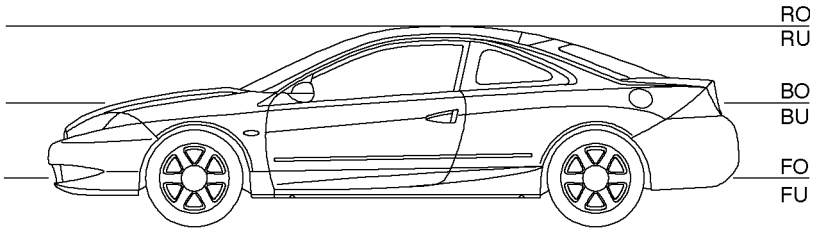

side view

COUGAR
FCS-12566-02