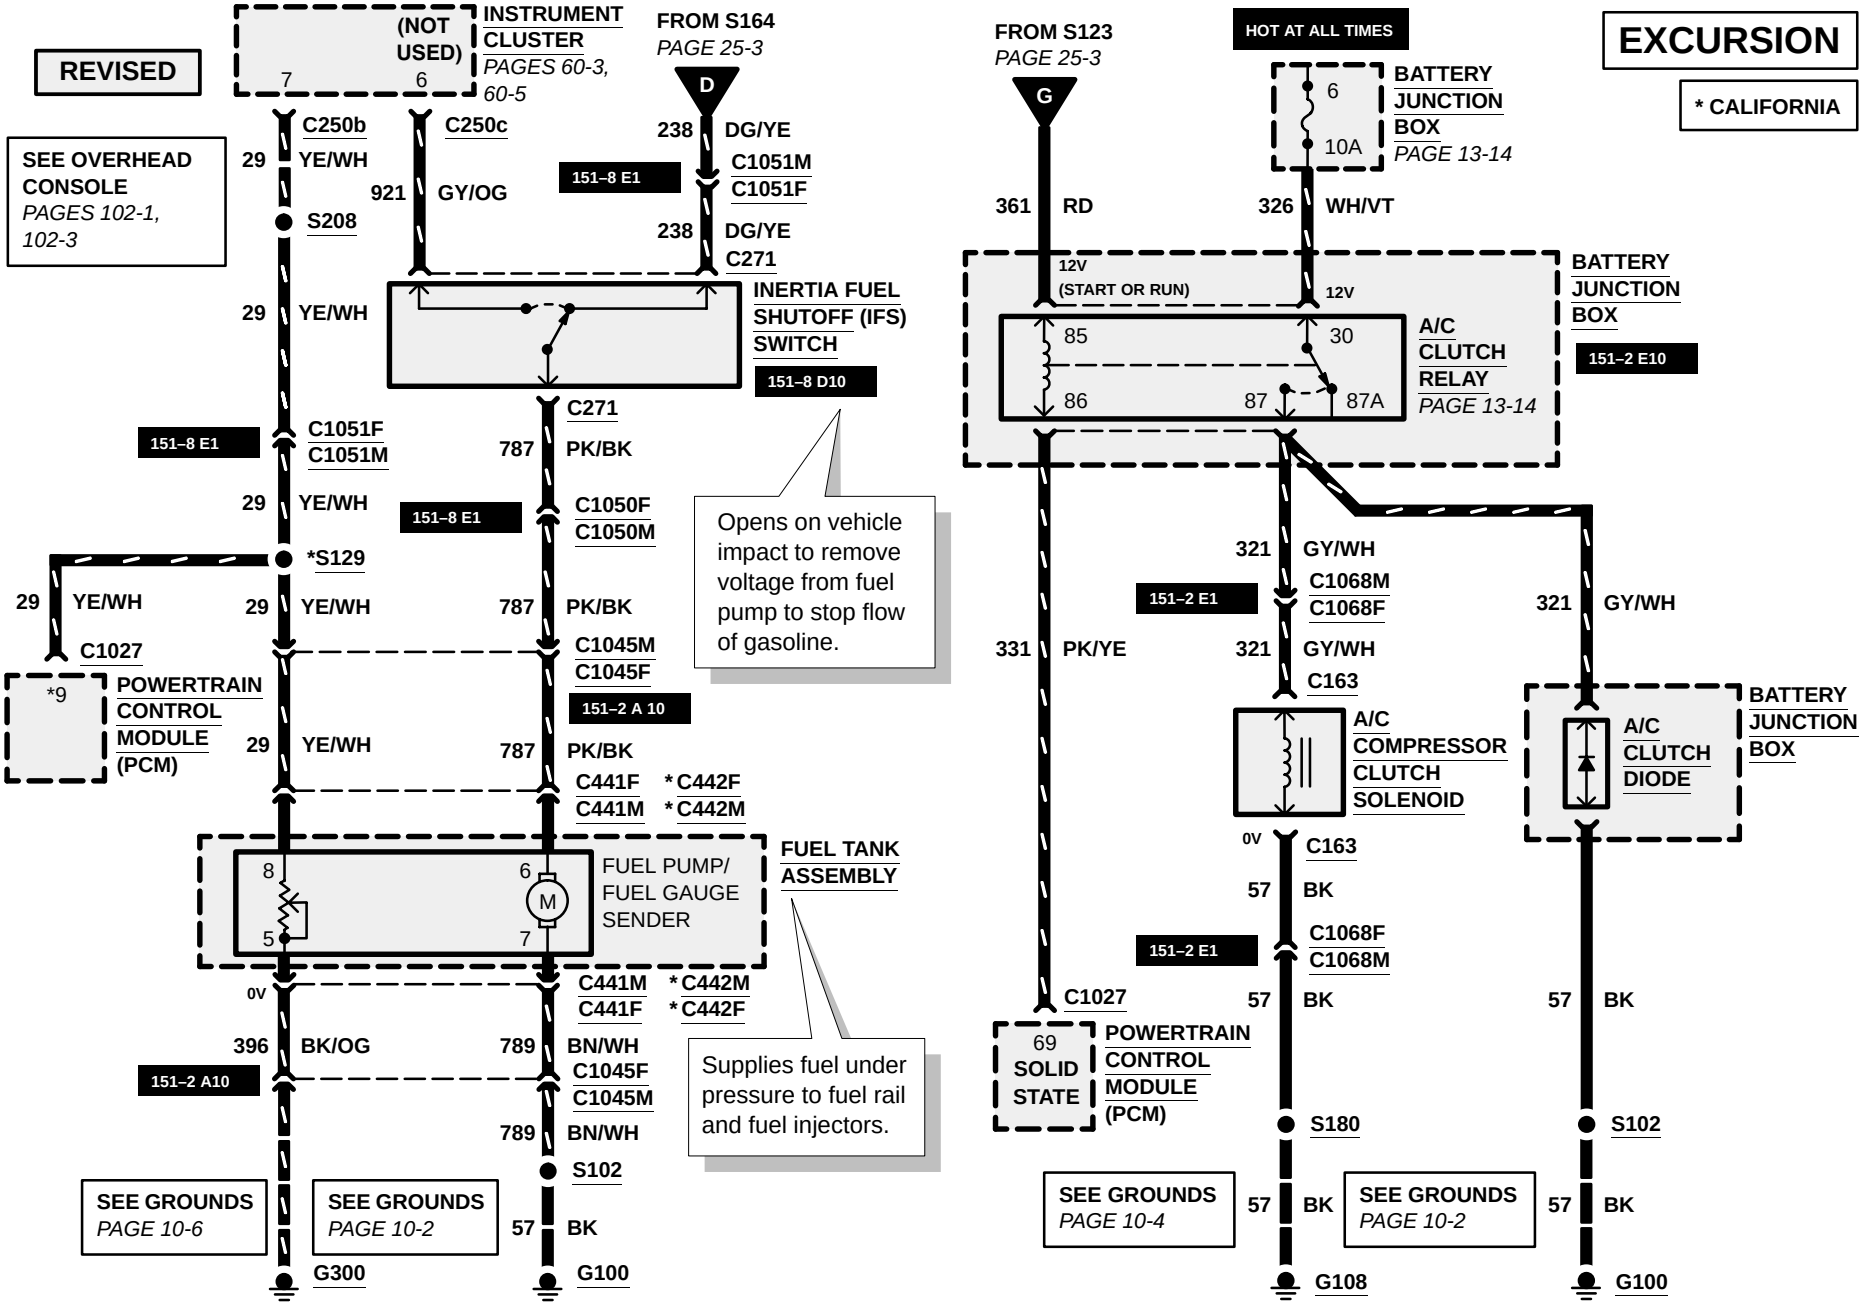
REVISED
(NOT USED)
INSTRUMENT CLUSTER
PAGES 60-3, 60-5
FROM S164
PAGE 25-3
SEE OVERHEAD CONSOLE
PAGES 102-1, 102-3
C250b
C250c
29 YE/WH
921 GY/OG
238 DG/YE
C1051M
C1051F
151–8 E1
S208
INERTIA FUEL SHUTOFF (IFS) SWITCH
151–8 D10
C271
787 PK/BK
C1050F
C1050M
*S129
C1027
*9
POWERTRAIN CONTROL MODULE (PCM)
C1045M
C1045F
151–2 A 10
C441F
C441M
*C442F
*C442M
FUEL PUMP/ FUEL GAUGE SENDER
FUEL TANK ASSEMBLY
0V
396 BK/OG
789 BN/WH
C1045F
C1045M
151–2 A10
S102
57 BK
G300
G100
SEE GROUNDS PAGE 10-6
SEE GROUNDS PAGE 10-2
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
Supplies fuel under pressure to fuel rail and fuel injectors.
EXCURSION
* CALIFORNIA
FROM S123
PAGE 25-3
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-14
10A
361 RD
326 WH/VT
12V (START OR RUN)
12V
A/C CLUTCH RELAY
PAGE 13-14
85
86
87
87A
30
BATTERY JUNCTION BOX
151–2 E10
321 GY/WH
C1068M
C1068F
151–2 E1
331 PK/YE
C163
A/C COMPRESSOR CLUTCH SOLENOID
A/C CLUTCH DIODE
C1027
69 SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
S180
S102
G108
G100
SEE GROUNDS PAGE 10-4
SEE GROUNDS PAGE 10-2