123-5 MEMORY SEATS

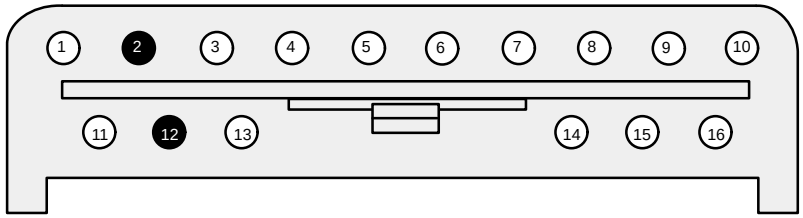

C361

LF SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	447 (OG/RD)	Lighting Control Module to Seat Position Sensor (–)
2	–	NOT USED
3	446 (OG/WH)	Seat Position Sensor to LF Seat Module (Sensor +)
4	980 (YE/WH)	LF Seat Module to Horizontal Motor LH Rwd
5	982 (YE/LG)	LF Seat Module to Rear Motor LH Down
6	990 (YE/LB)	LF Seat Module to Front Motor LH Down
7	919 (GY/BK)	LF Seat Module to Recliner Motor Down
8	444 (LG/BK)	Rear Sensor to LF Seat Module
9	443 (LG/RD)	Front Sensor to LF Seat Module
10	442 (LG/OG)	Horizontal Sensor to LF Seat Module
11	979 (RD/LB)	LF Seat Module to Front Motor LH Up
12	–	NOT USED
13	983 (RD/LG)	LF Seat Module to Rear Motor Up
14	981 (RD/WH)	LF Seat Module to Horizontal Motor LH Fwd
15	445 (OG/LB)	Recliner Sensor to LF Seat Module
16	918 (GY)	LF Seat Module to Recliner Motor Up