C329

14A699

A223
Heated seat module, passenger side front

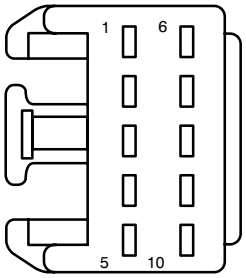

F10063

Pin	Circuit	Circuit Function
1	9-HC24 (BN/RD)	Sensor signal return (reference/ ground)
2	20S-HC22 (PK/YE)	Voltage, hot in run only, Switched
3	20S-HC20 (PK/WH)	Voltage, hot in run only, Switched
4	30-HC22 (RD)	Voltage supplied at all times (not overload protected)
5	31S-HC19 (BK/RD)	Ground, Switched
6	15-HC22 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
7	8-HC24 (WH/RD)	Sensor signal
8	31-HC22 (BK)	Ground
9	–	not used
10	31S-HC18 (BK/GN)	Ground, Switched

C330

14A699

N217
Seat adjust switch, passenger side front

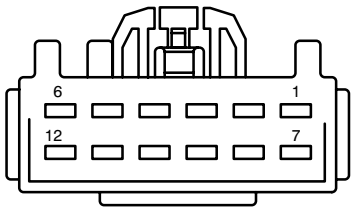

F12107

Pin	Circuit	Circuit Function
1	31-AH42 (BK)	Ground
2	–	not used
3	32-AH44 (WH/GN)	Switched between: Battery voltage, Ground or Open
4	32-AH34 (WH/BK)	Switched between: Battery voltage, Ground or Open
5	33-AH34 (YE/BK)	Switched between: Battery voltage, Ground or Open
6	30-AH42 (RD)	Voltage supplied at all times (not overload protected)
7	33-AH43 (YE/RD)	Switched between: Battery voltage, Ground or Open
8	–	not used
9	–	not used
10	–	not used
11	33-AH44 (YE/GN)	Switched between: Battery voltage, Ground or Open
12	32-AH43 (WH/RD)	Switched between: Battery voltage, Ground or Open