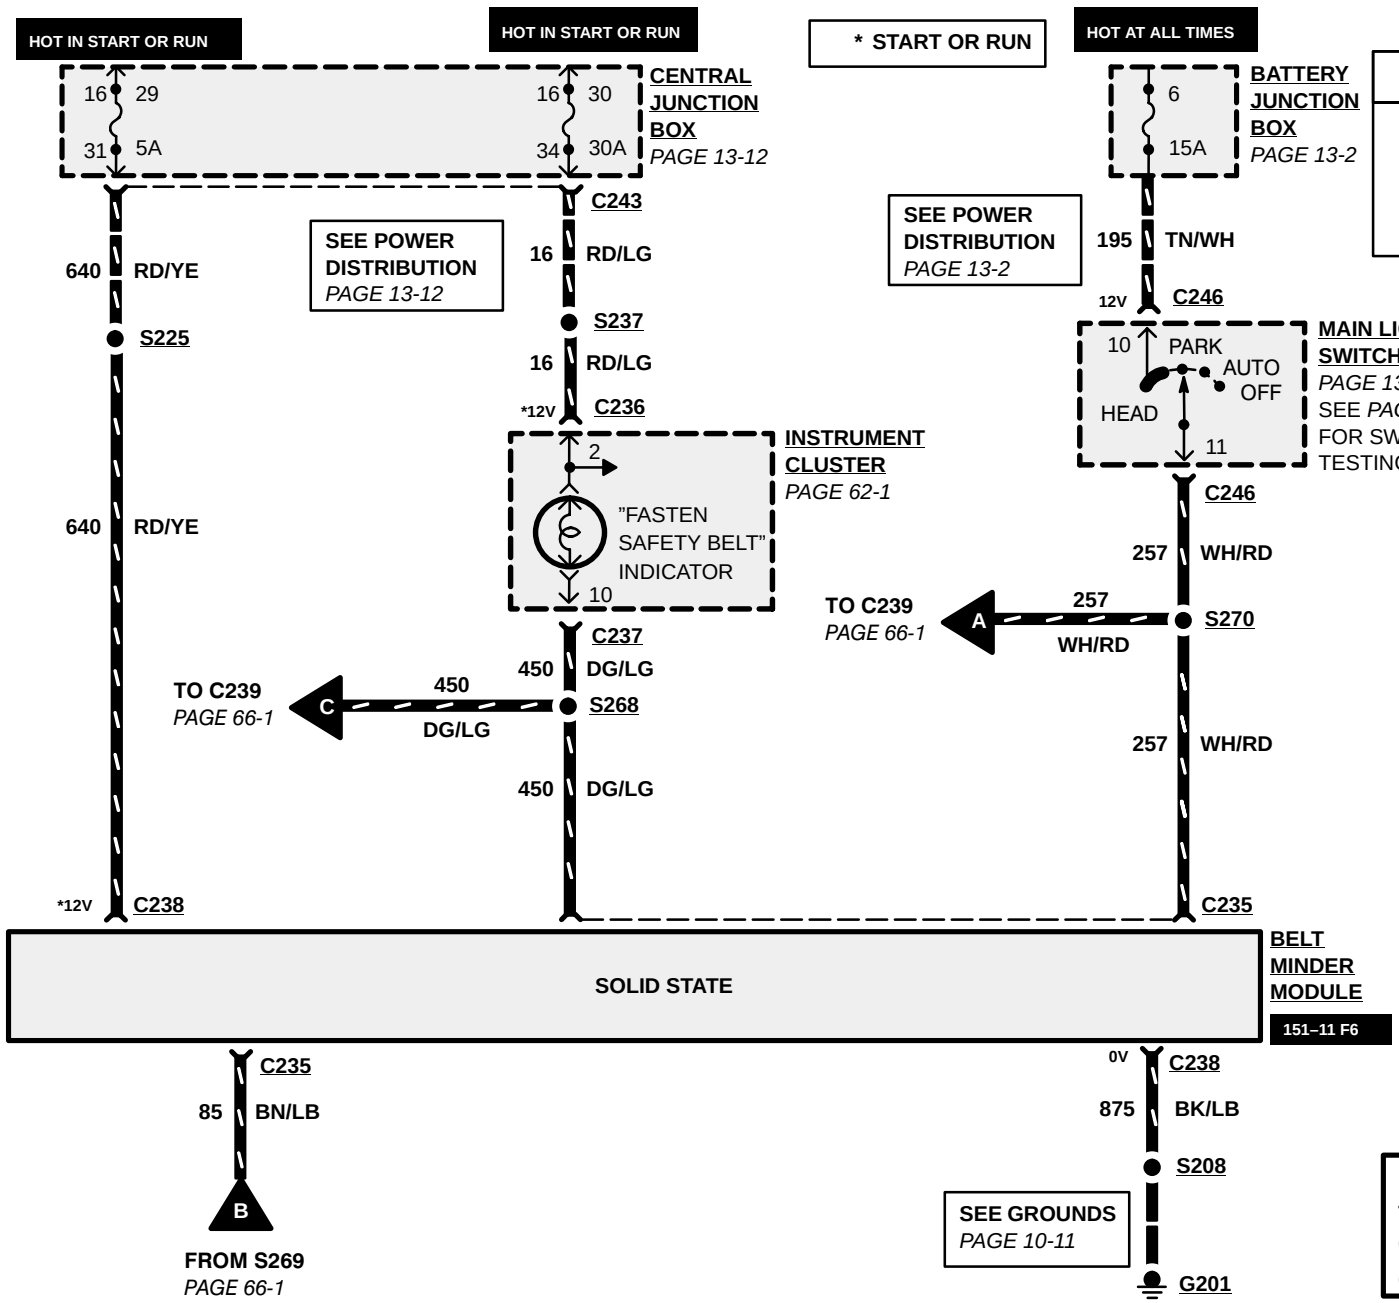

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C236	62-6
C237	62-6
C239	59-5
C246	13-19

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.