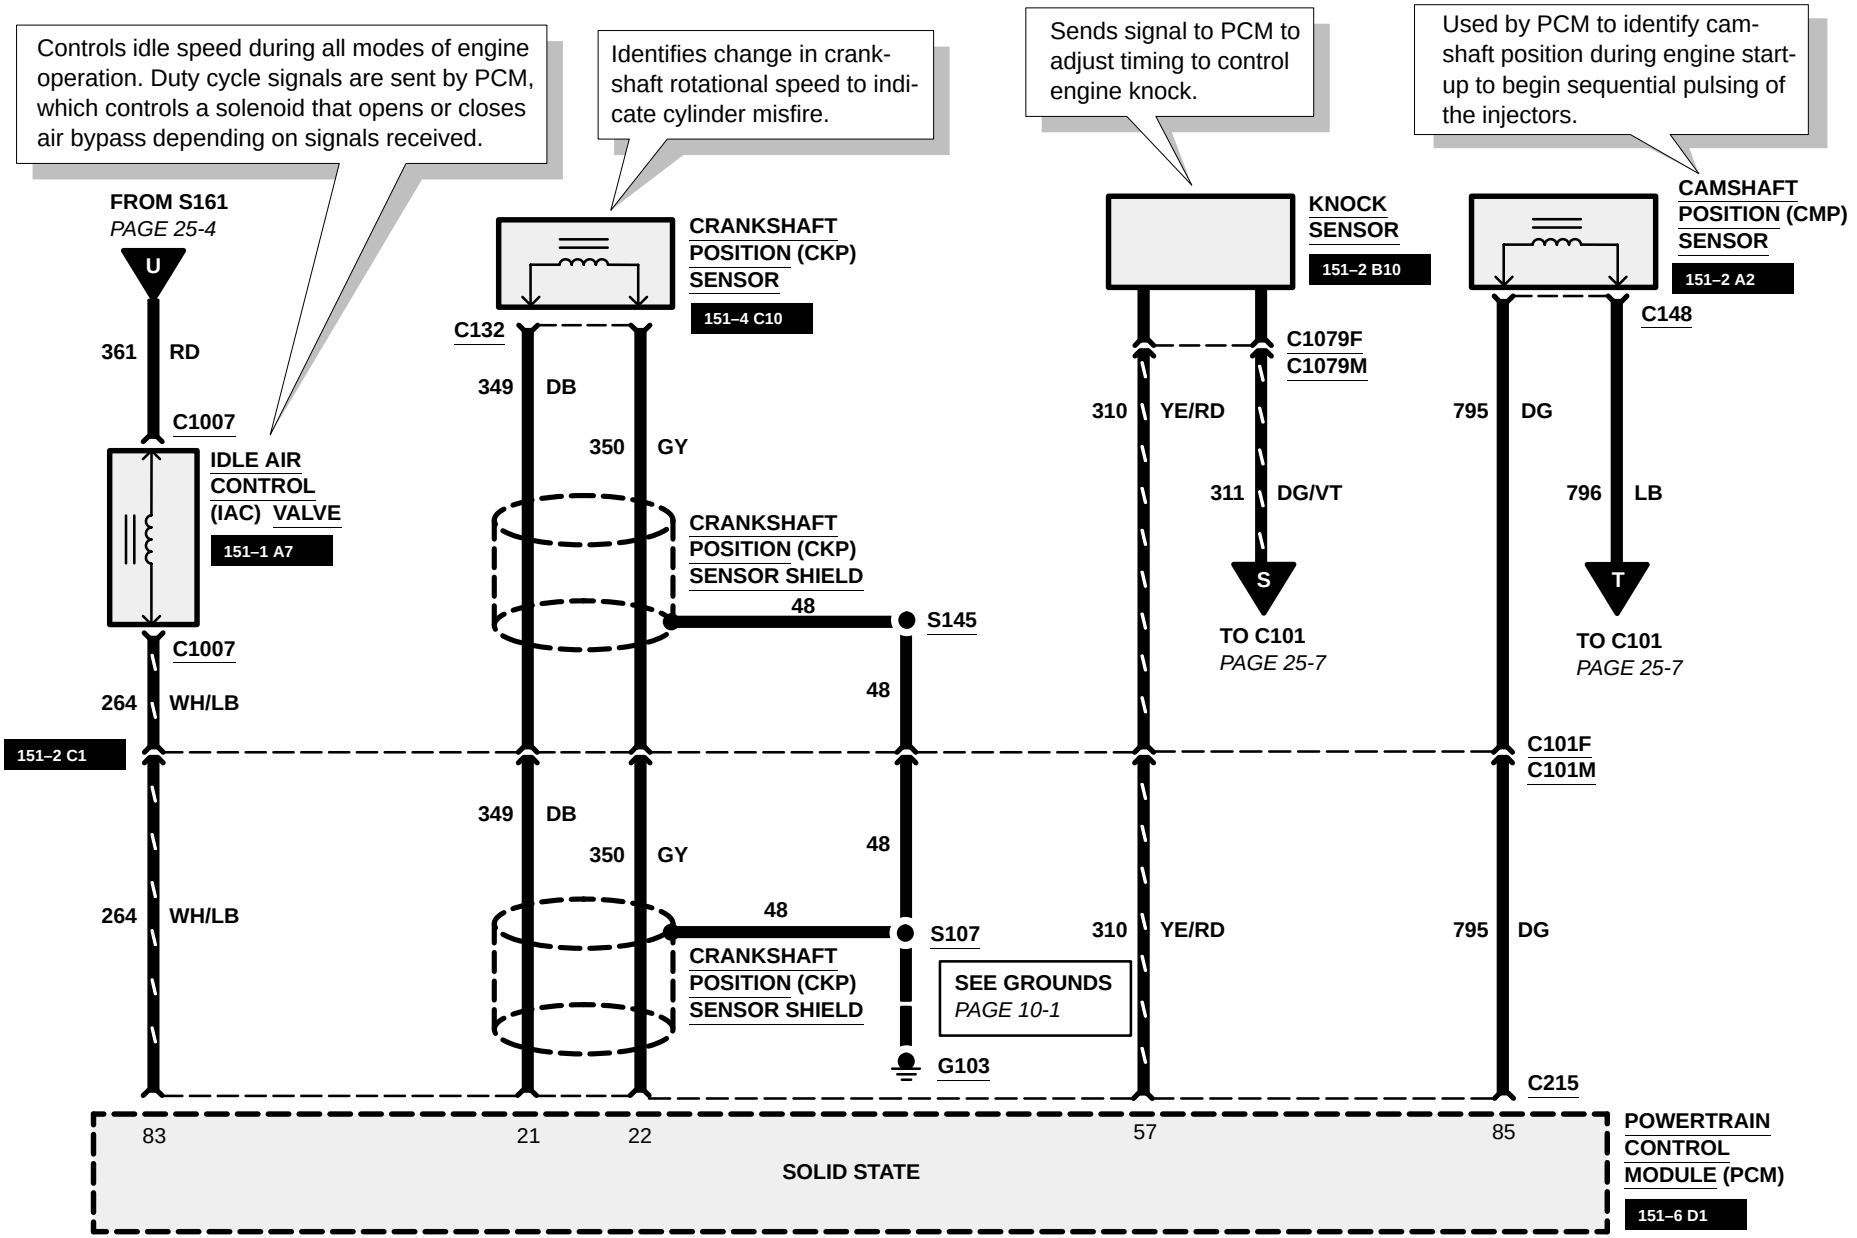
Controls idle speed during all modes of engine operation. Duty cycle signals are sent by PCM, which controls a solenoid that opens or closes air bypass depending on signals received.
Identifies change in crankshaft rotational speed to indicate cylinder misfire.
Sends signal to PCM to adjust timing to control engine knock.
Used by PCM to identify camshaft position during engine start-up to begin sequential pulsing of the injectors.
FROM S161
PAGE 25-4
U
361 RD
C1007
IDLE AIR CONTROL (IAC) VALVE
151–1 A7
C1007
264 WH/LB
151–2 C1
CRANKSHAFT POSITION (CKP) SENSOR
151–4 C10
C132
349 DB
350 GY
CRANKSHAFT POSITION (CKP) SENSOR SHIELD
48
S145
48
349 DB
350 GY
48
264 WH/LB
48
S107
CRANKSHAFT POSITION (CKP) SENSOR SHIELD
G103
SEE GROUNDS
PAGE 10-1
KNOCK SENSOR
151–2 B10
C1079F
C1079M
310 YE/RD
311 DG/VT
S
TO C101
PAGE 25-7
310 YE/RD
CAMSHAFT POSITION (CMP) SENSOR
151–2 A2
C148
795 DG
796 LB
T
TO C101
PAGE 25-7
C101F
C101M
795 DG
C215
83
21
22
57
85
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 D1