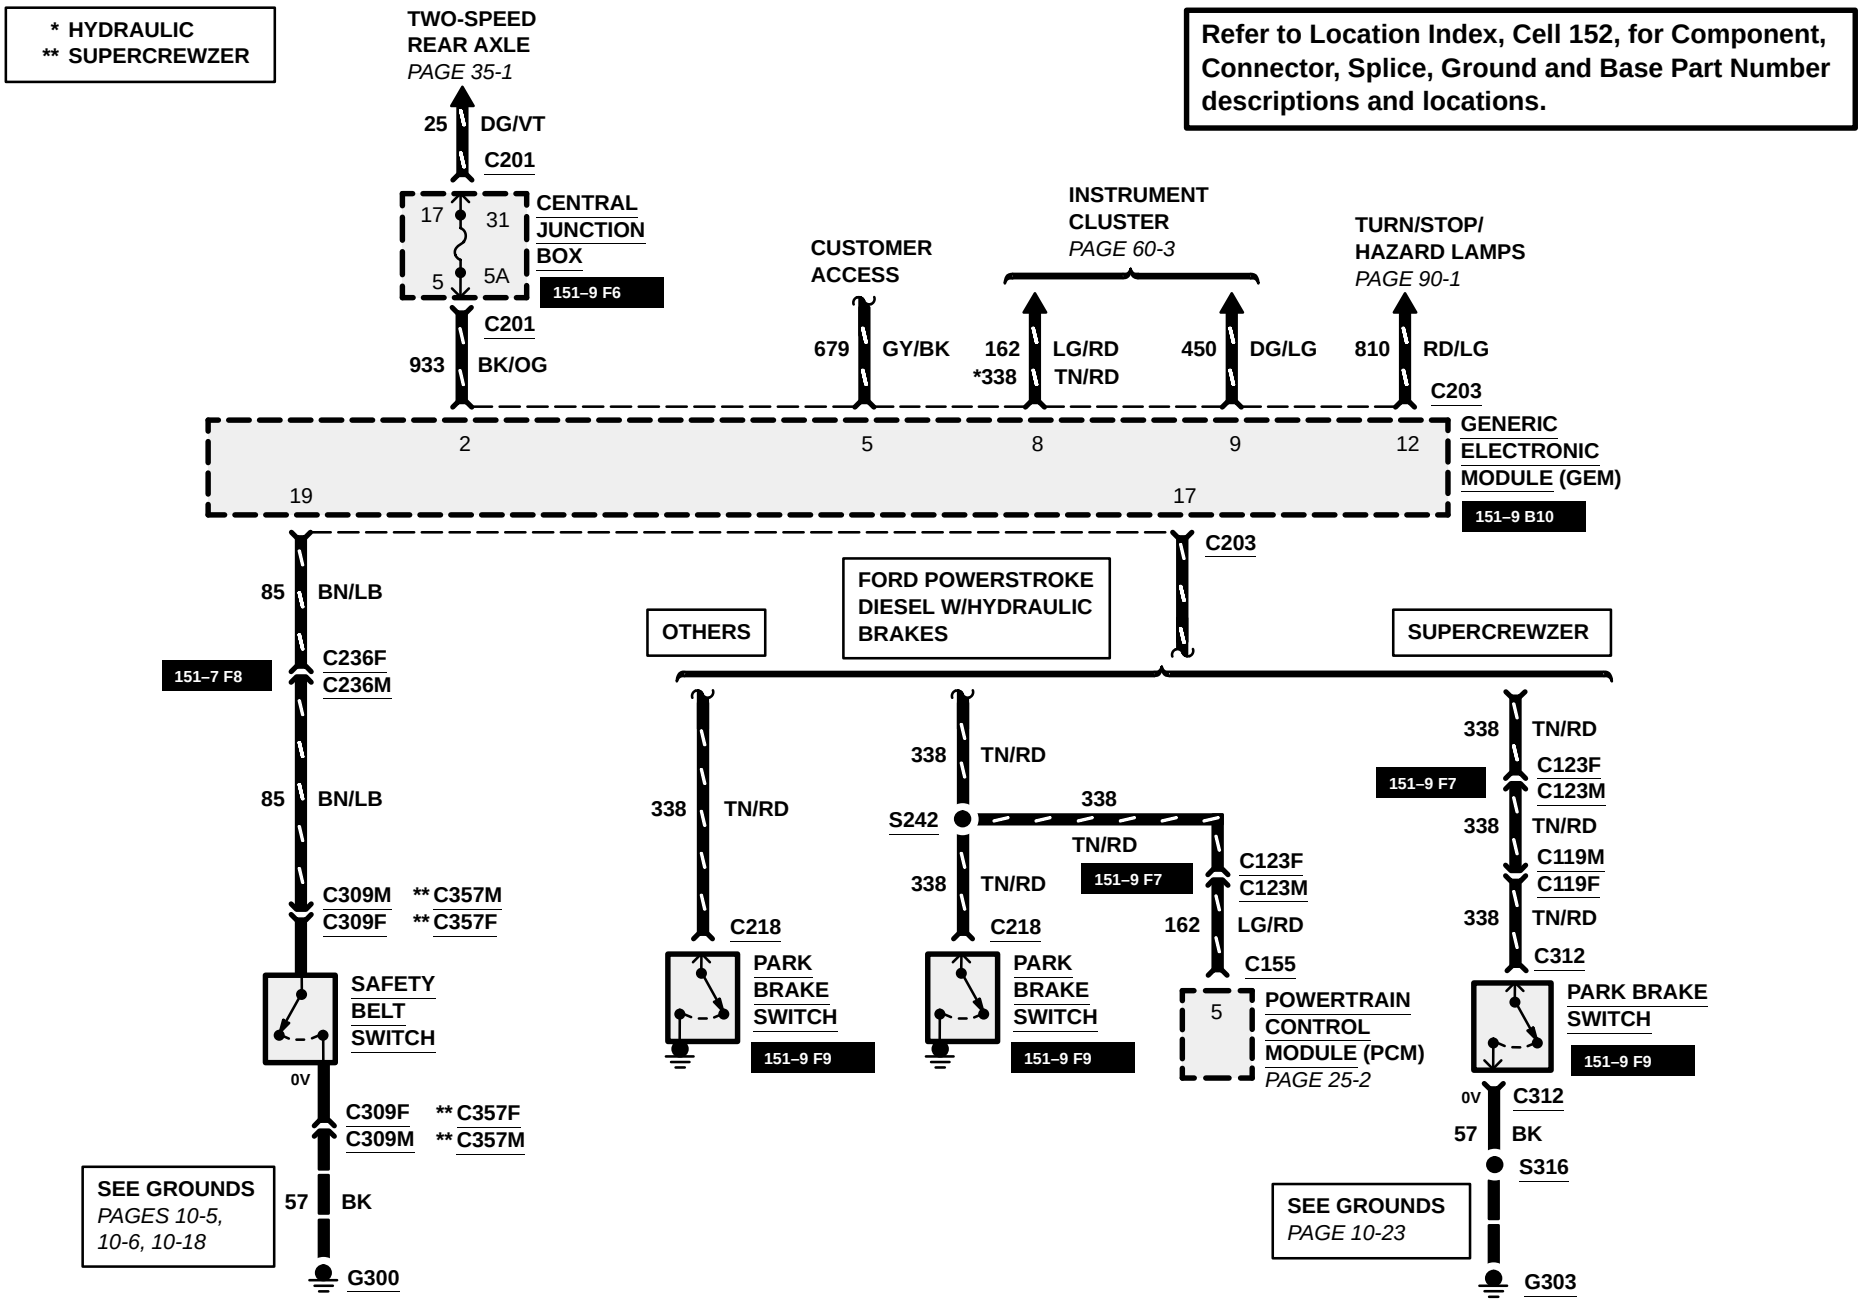
* HYDRAULIC
** SUPERCREWZER
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.
TWO-SPEED REAR AXLE
PAGE 35-1
25 DG/VT
C201
CENTRAL JUNCTION BOX
17
31
5
5A
151–9 F6
C201
933 BK/OG
CUSTOMER ACCESS
679 GY/BK
INSTRUMENT CLUSTER
PAGE 60-3
162 LG/RD
*338 TN/RD
450 DG/LG
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
810 RD/LG
C203
2
5
8
9
12
GENERIC ELECTRONIC MODULE (GEM)
151–9 B10
19
17
C203
85 BN/LB
C236F
151–7 F8
C236M
85 BN/LB
C309M ** C357M
C309F ** C357F
SAFETY BELT SWITCH
0V
C309F ** C357F
C309M ** C357M
SEE GROUNDS
PAGES 10-5, 10-6, 10-18
57 BK
G300
OTHERS
FORD POWERSTROKE DIESEL W/HYDRAULIC BRAKES
SUPERCREWZER
338 TN/RD
C218
PARK BRAKE SWITCH
151–9 F9
338 TN/RD
S242
338 TN/RD
338 TN/RD
C218
PARK BRAKE SWITCH
151–9 F9
338 TN/RD
151–9 F7
C123F
C123M
162 LG/RD
C155
5
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-2
338 TN/RD
151–9 F7
C123F
C123M
338 TN/RD
C119M
C119F
338 TN/RD
C312
PARK BRAKE SWITCH
151–9 F9
0V
C312
57 BK
S316
SEE GROUNDS
PAGE 10-23
G303