-1

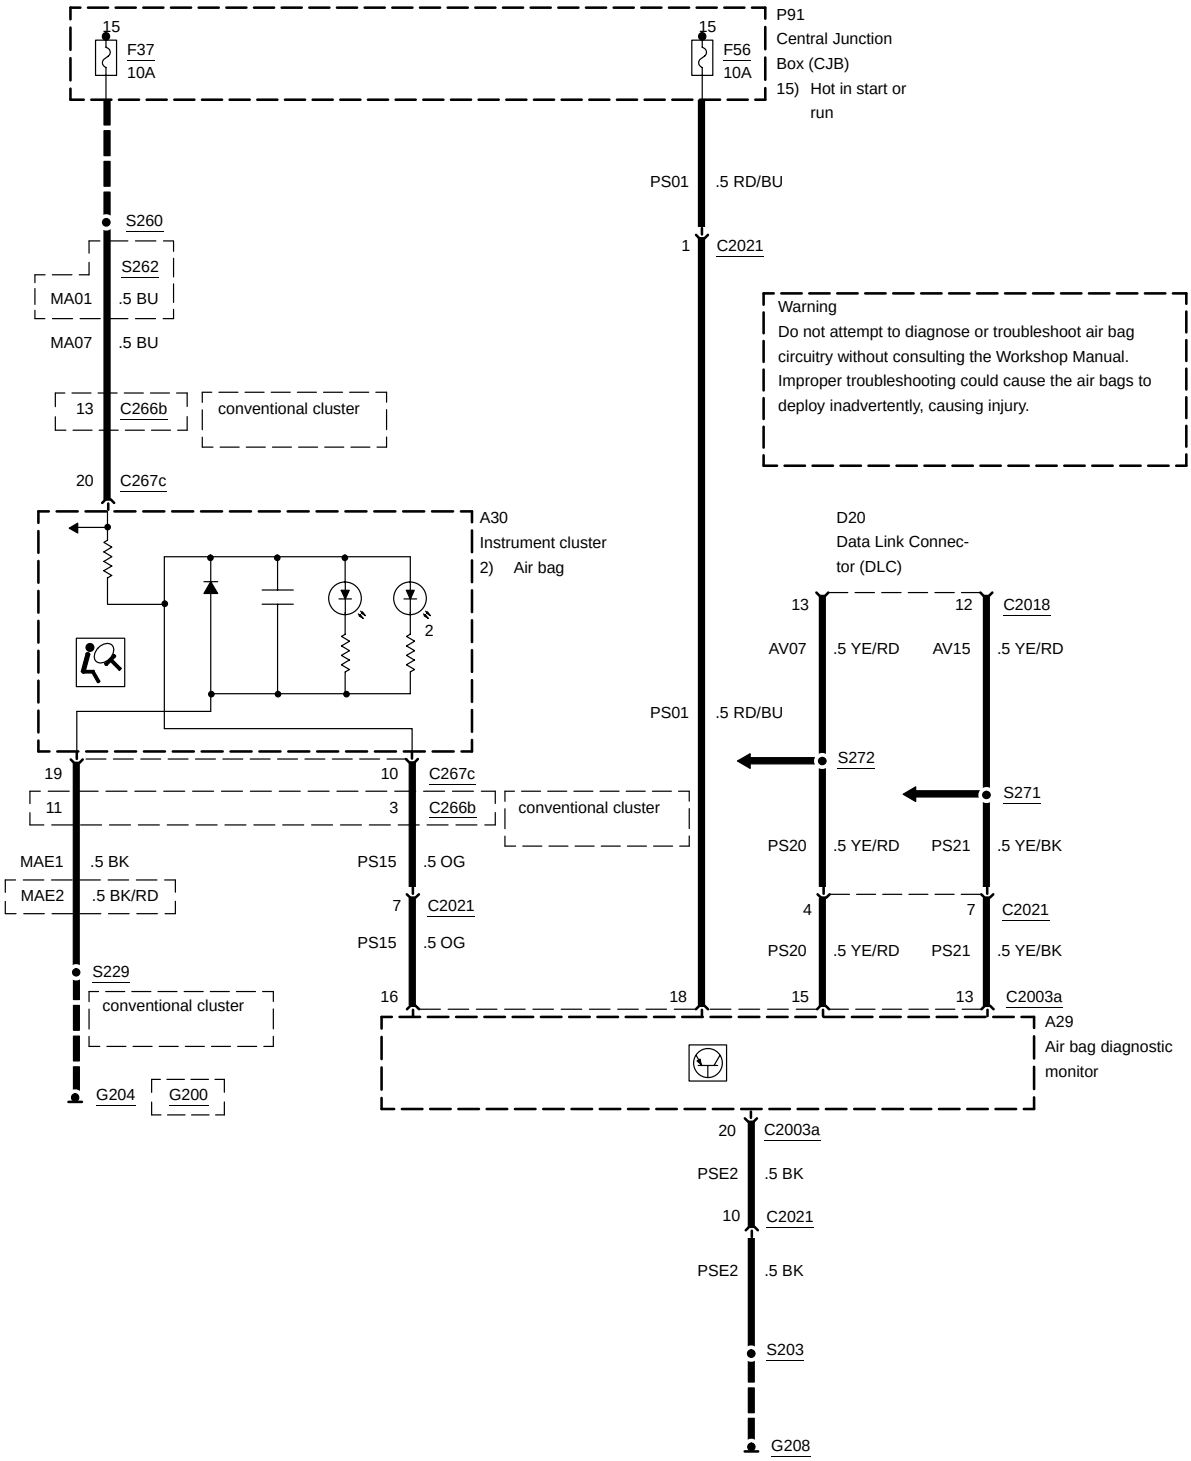
15
F37
10A
15
F56
10A
P91
Central Junction
Box (CJB)
15) Hot in start or
run
PS01 .5 RD/BU
1 C2021
S260
S262
MA01 .5 BU
MA07 .5 BU
13 C266b
conventional cluster
20 C267c
Warning
Do not attempt to diagnose or troubleshoot air bag
circuitry without consulting the Workshop Manual.
Improper troubleshooting could cause the air bags to
deploy inadvertently, causing injury.
A30
Instrument cluster
2) Air bag
2
D20
Data Link Connec-
tor (DLC)
13 12 C2018
AV07 .5 YE/RD AV15 .5 YE/RD
PS01 .5 RD/BU
S272
S271
19 10 C267c
11 3 C266b
conventional cluster
PS20 .5 YE/RD PS21 .5 YE/BK
MAE1 .5 BK
MAE2 .5 BK/RD
PS15 .5 OG
7 C2021
PS15 .5 OG
4 7 C2021
PS20 .5 YE/RD PS21 .5 YE/BK
S229
conventional cluster
16 18 15 13 C2003a
A29
Air bag diagnostic
monitor
G204 G200
20 C2003a
PSE2 .5 BK
10 C2021
PSE2 .5 BK
S203
G208